


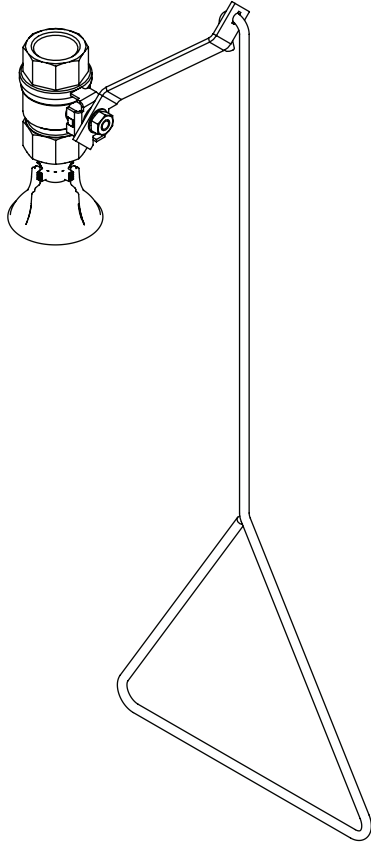

Installation

E19-130

Drench Shower Vertical Supply

Table of Contents

Pre-Installation Information	2
Supplies Required:.....	3
Assemble components	3
Connect water supply.....	3
Assembly of Components and Parts List	4



WARNING

Flush the water supply lines before beginning installation and after installation is complete. Test the unit for leaks and adequate water flow. Main water supply to the eyewash should be "ON" at all times. Provisions shall be made to prevent unauthorized shutoff.

CAUTION

Emergency equipment must be supplied with tepid water (60°F to 100°F/15.6°C to 37.8°C). Any prolonged exposure to near freezing water affects the body's ability to maintain body temperature, increasing the risk of hypothermia.

NOTICE

Before installing this product, ensure that there are adequate clearances around the product and activation of the product does not interfere with other products or obstructions.

Avoid cleaners containing organic solvents, alcohols and hydrocarbons. Rinse with water after cleaning.

IMPORTANT

The installation and location of all safety drench showers, eye and eye/face washes must comply with the requirements of ANSI/ISEA Z358.1.

Read this installation manual completely to ensure proper installation, then file it with the owner or maintenance department. Compliance and conformity to drain requirements and other local codes and ordinances is the responsibility of the installer.

Separate parts from packaging and make sure all parts are accounted for before discarding any packaging material. If any parts are missing, do not begin installation until you obtain the missing parts.

The ANSI/ISEA Z358.1 standard requires an uninterrupted supply of flushing fluid. Bradley plumbed emergency fixtures require a minimum of 30 PSI (0.21MPa) flowing pressure.

Self-closing spring-loaded valves are not UL classified to ANSI/ISEA Z358.1.

Weekly activation must be conducted on all plumbed emergency equipment to ensure a suitable flushing fluid supply is present and any sediment build-up in the supply line is cleared. Emergency equipment should be inspected monthly to address any maintenance issues ensuring the equipment is in good operating condition and that there are no signs of wear.

Workers who may come in contact with potentially hazardous materials should be trained regarding the placement and proper operation of emergency equipment per ANSI/ISEA Z358.1.

For questions regarding the operation or installation of this product, visit www.bradleycorp.com or call 800-BRADLEY (272.3539).

Product warranties and parts information may also be found under "Products" on our web site at bradleycorp.com.

Supplies Required:

- Teflon tape and pipe sealant
- Piping to 1" BSP water supply inlet
- Adequate supply pipe supports
- Minimum 4" (102 mm) drain to accommodate 30 gallons (115 liters) per minute discharge for shower waste
- Sign-mounting hardware

Assemble components

1. Assemble the components as shown on page 4.
2. Apply pipe sealant to all male-threaded pipe joints.
3. Use a strap wrench around pipes when tightening to prevent marring.
4. The bottom edge of the showerhead should be 2134mm (7'-0") from the floor.


Connect water supply

NOTICE! Do not rely on Bradley's Drench Shower to support supply piping.


1. Connect water supply piping to 1" BSP inlet on unit (piping supplied by installer). Provide adequate supports (supplied by installer) for supply pipe using pipe hangers or other means.
2. Mount the safety sign to the wall using sign-mounting hardware supplied by installer.



All dimensions assume standard thread engagement. Variations in manufacturing allow for +/- 3mm (1/8") per threaded joint. To find the tolerance of a dimension, add the number of thread joints in between a dimension and multiply it by 3mm (1/8").

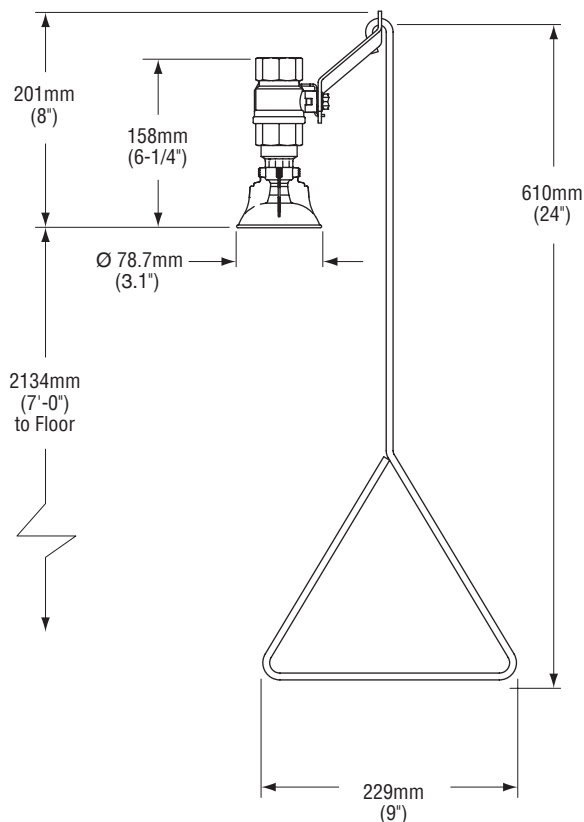

Assembly of Components and Parts List

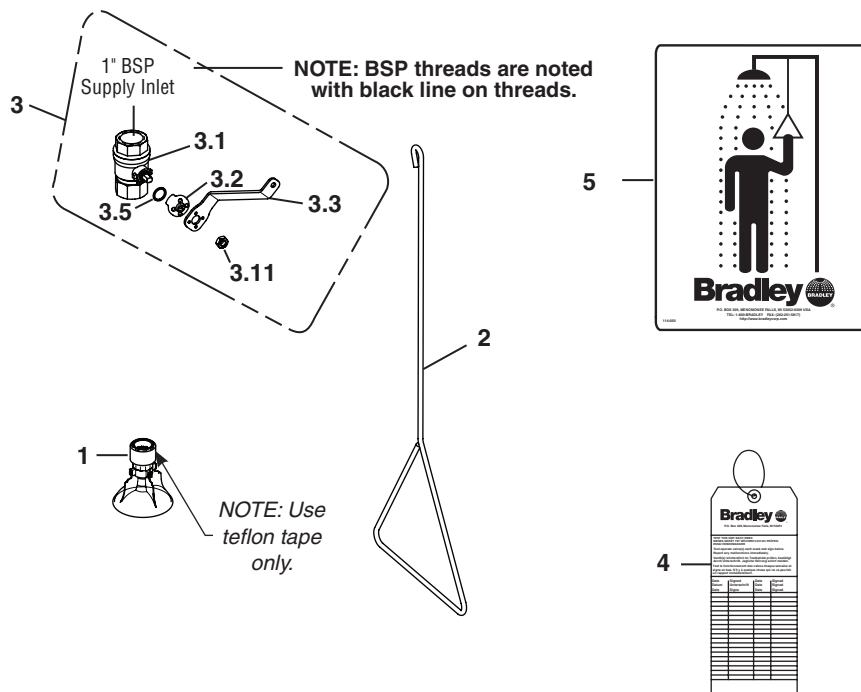

NOTE: Items 31.1–3.5 come preassembled as Item 3.

Item	Part No.	Qty.	Description
1	S24-188	1	Plastic Showerhead Assembly
2	128-156A	1	Pull Rod - 24" Long
3	S30-060B	1	Stay-Open Ball Valve Assembly 1" BSP
3.1	S27-278B	1	Ball Valve with Jam Nut
3.11	110-214	1	Jam Nut (only)

Item	Part No.	Qty.	Description
3.2	153-489	1	Adapter
3.3	128-202	1	Handle
3.5	124-048	1	Washer
4	204-421	1	Emergency Tag
5	114-050E	1	Safety Sign