


INSTALLATION INSTRUCTIONS

CRL LS14 LAGUNA SERIES

PIVOT DOOR

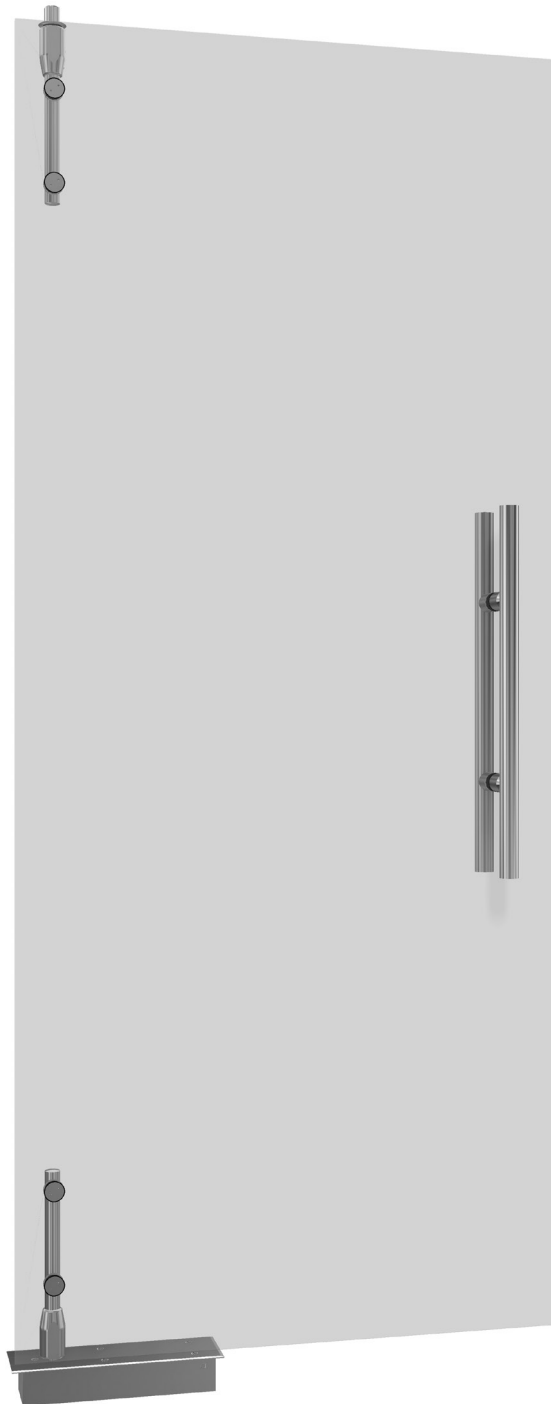

Phone: (800) 421-6144 • Fax: (866) 587-7501
crlaurence.com • usalum.com • crl-arch.com

TABLE OF CONTENTS


COMPONENT PARTS 03

DOOR PREPARATION 04


DOOR INSTALLATION 05-06

FLUSH MOUNT COMPONENT PARTS

LS5 Pivot Rod Sets

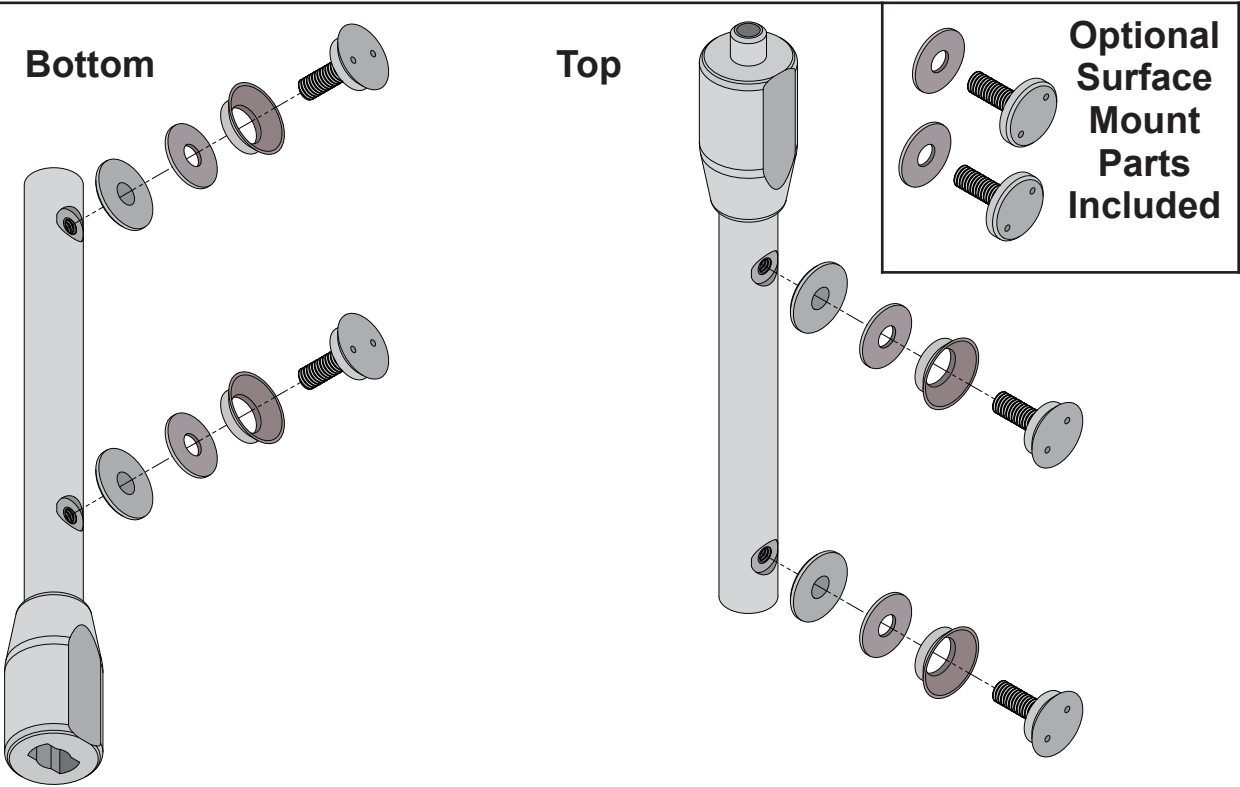

LS1 Free-Swinging Top Pivot

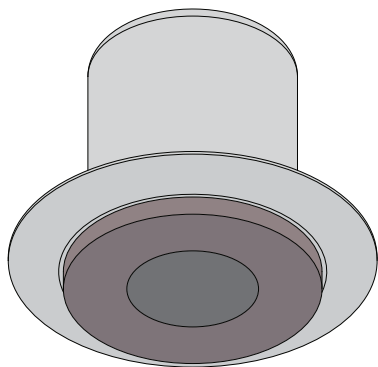


CRL LS14 LAGUNA SERIES PIVOT DOOR

DOOR PREPARATION


FLUSH MOUNT PIVOT RODS INSTALLATION

1. Install the Pivot Rods to the door as shown.

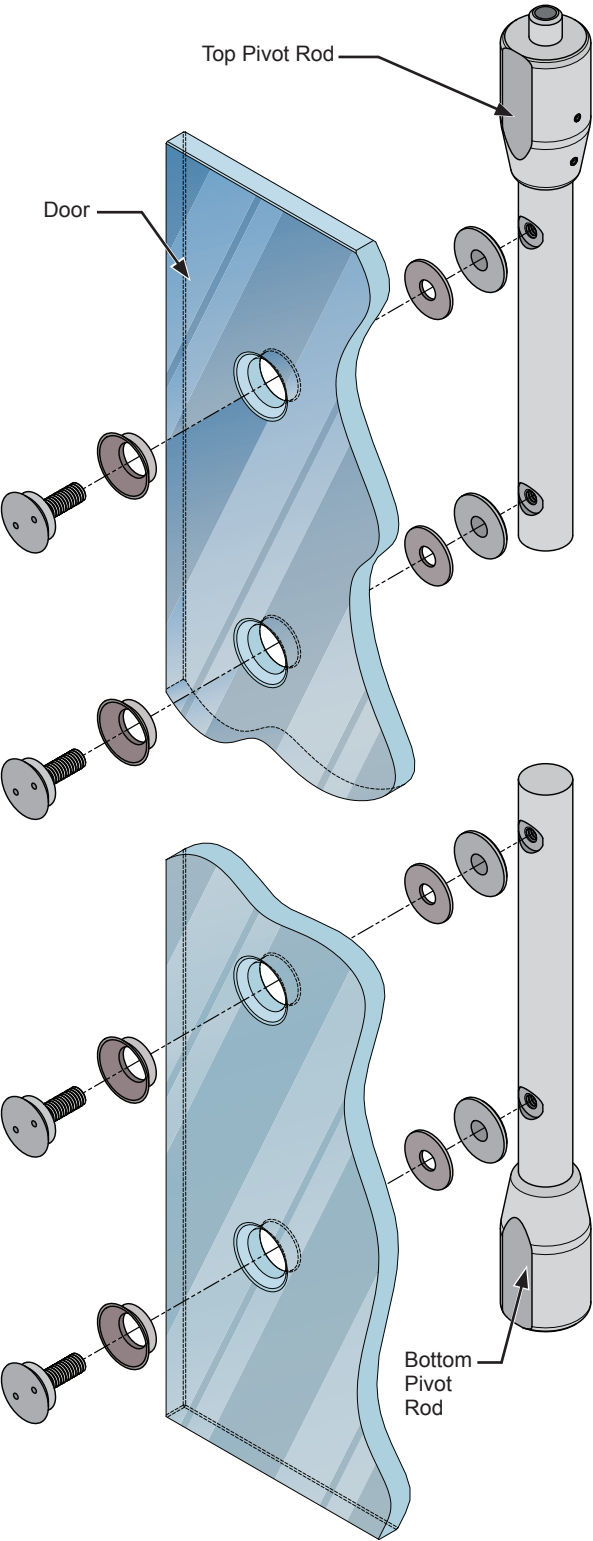

SURFACE MOUNT PIVOT RODS INSTALLATION

1. Install the Pivot Rods to the door as shown.

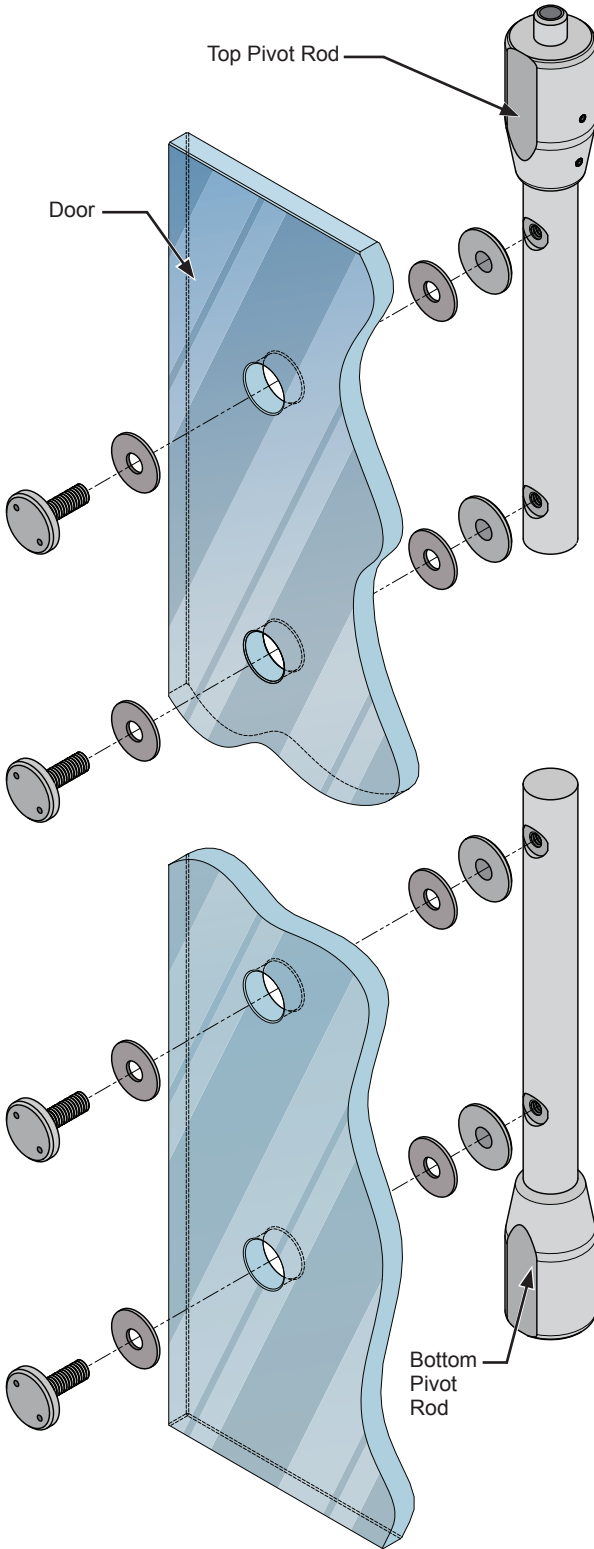


DOOR INSTALLATION

TOP PIVOT INSTALLATION

1. Drill a 1" (25.4 mm) diameter by 1-1/8" (28.5 mm) deep hole.
2. Secure the Free Swing Top Pivot with (1) #14 x 2" flat head screw (Not Included).
3. Install the floor closer or free swinging bottom pivot.


NOTE: Must be mounted to the drop soffit or ceiling with appropriate structural backing.

NOTE: Make sure to use a laser or plumb bob to ensure top and bottom pivots are aligned.

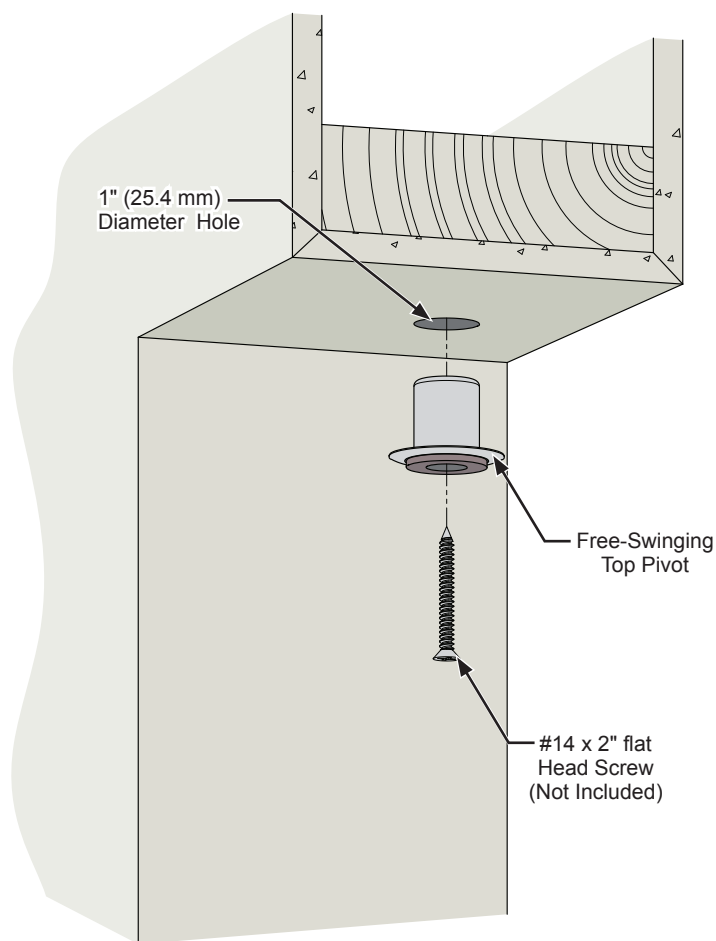

INSTALL THE DOOR

1. Loosen the (2) 10-32 set screws on the spindle of the Top Pivot Rod and glide the top pivot knuckle down.
2. Lift the door and place the Bottom Pivot Rod onto the closer spindle or pivot.

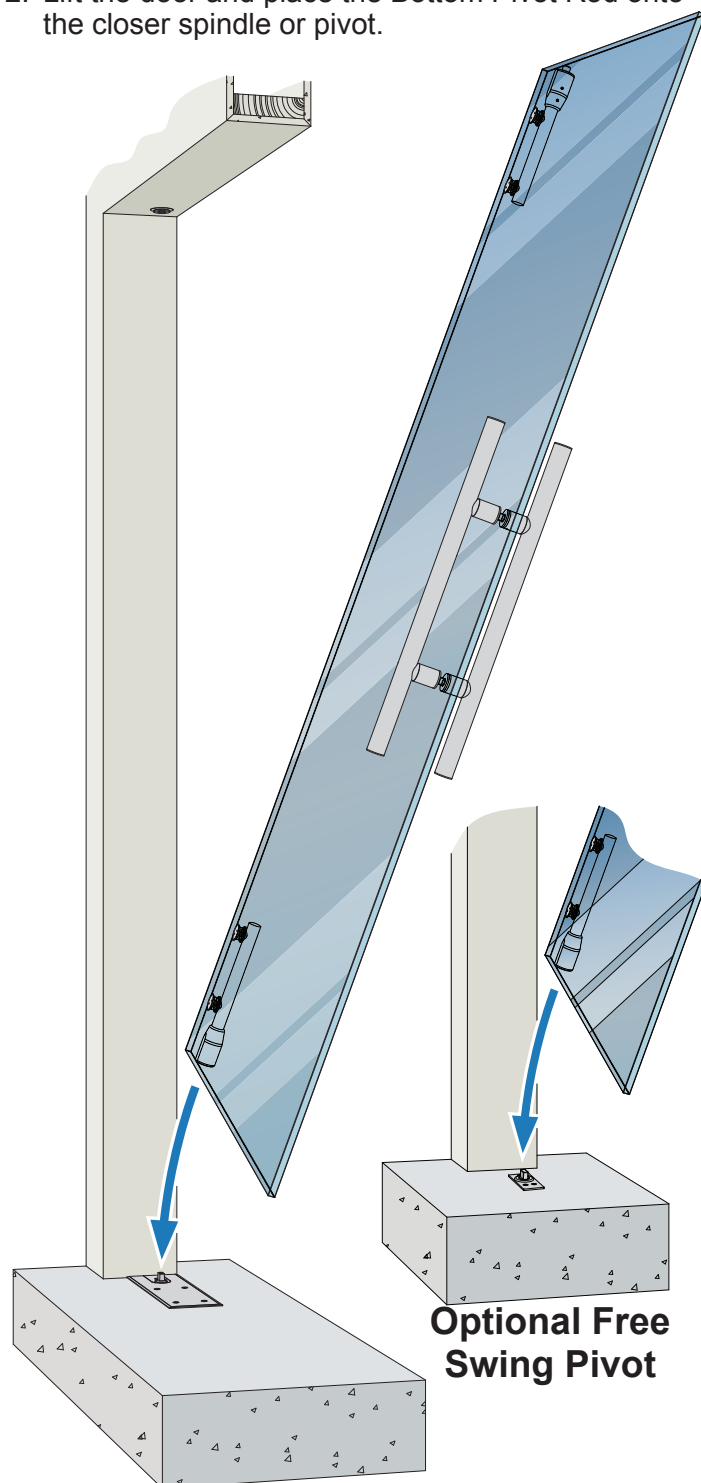

DOOR INSTALLATION

SECURE THE DOOR TO THE TOP PIVOT

1. Lift the spindle upwards into the Free-Swinging Top Pivot.
2. Secure the spindle by re-tightening the (2) 10-32 set screws.

