


### Pressomat 100 / 200 and retrofitting set (optional)

applies to Cat. No.: 553.69.003 553.69.004 553.69.007

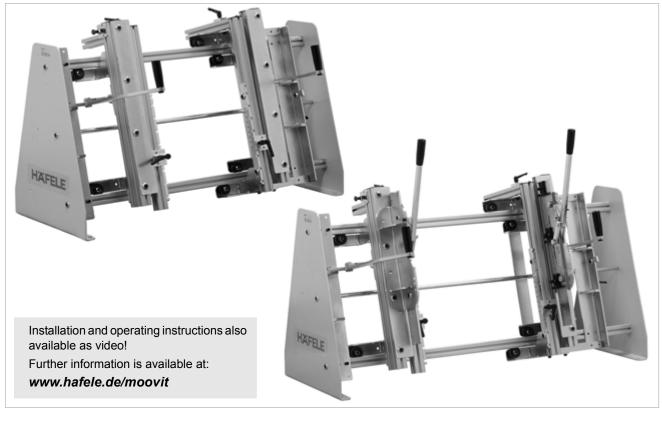

1. General information	2
2. Technical description	2
3. Appropriate application	2
4. Safety instructions	2
4.1 Safety instructions for the transport / installation	2
4.2 Safety instructions for installation	2
4.3 Safety instructions for the operation, maintenance	2
5. Transport	2
6. Unpacking / Check delivery	2
7. Installation	3
7.1 Installation conditions	3
7.2 Pressomat installation	3
7.3 Extension assembly	3
7.4 Retrofitting set assembly	
8. Operation	5
8.1 Set the drawer width.	5
8.2 Set the drawer length	5
8.3 Secure the bottom and rear panel	6
8.4 Insert drawer sides	6
8.5 Attach the drawer sides and rear panel. Pressomat 100:	7
8.6 Attach the drawer sides and rear panel. Pressomat 200:	7
9. Maintenance and repair	8
10. Spare parts	
11. Technical data	8

## 

### 1. General information

This guide is intended for woodworkers. Please read instructions completely before beginning operation. Please keep instructions with unit for future reference.

### 2. Technical description

Drawer components can be assembled in small batch production with the aid of the Pressomat.

- Maximum drawer width: up to 600 mm (without extension) up to 1200 mm (with extension (included)
- Required bottom panel thickness: 16 mm.
- Adjustable drawer side lengths: 270 300 350 -400 - 450 - 500 - 550 - 600 - 650 mm.

Two models are described in this manual. They differ as follows:

- Pressomat 100 (Cat. No.: 553.69.003): Drawer sides and bottoms are screwed together.
- Pressomat 200 (Cat. No.: 553.69.004): Drawer sides and bottoms are interlocked.

Pressomat 100 can be converted into a Pressomat 200 by attaching a retrofitting set (optional; Cat. No.: 553.69.007).

### 3. Appropriate application

The Pressomat may only be used in the manner as described in this manual. Any other use is considered as unintended and is therefore not allowed.

### 4. Safety instructions

### 4.1 Safety instructions for the transport / installation



### Risk of injuries from falling loads!

- Use suitable lifting equipment for transporting with a pallet, such as a forklift.
- Observe total weight (see "11. Technical Data").
- Call a second person to help when lifting from the pallet and setting up the Pressomat.

### 4.2 Safety instructions for installation



### Risk of crushing injuries during the installation of the extension!

- > Secure the Pressomat with wooden blocks against falling prior to removing the lateral metal plate.
- 4.3 Safety instructions for the operation, maintenance



### Risk of crushing injuries when operating with one hand!

> Only operate the levers simultaneously using both hands.

### 5. Transport



### Risk of injuries from falling loads!

- Use suitable lifting equipment for transporting with a pallet, such as a forklift.
- > Observe total weight
- (see "11. Technical Data").
- Call a second person to help when lifting from the pallet and setting up the Pressomat.

### 6. Unpacking / Check delivery

- [1] Remove straps.
- [2] Dispose of packaging material environmentally friendly.
- [3] Check the delivery for completeness and inspect for shipping damage.
- [4] Contact the manufacturer, if parts are missing or damaged.



### 7. Installation

### 7.1 Installation conditions

### Space requirements, table dimensions:

- without extension: Min. table length of 120 cm
- with extension: Min. table length of 180 cm
- Min. table width of 75 cm
- Clearance (in addition to table height): Pressomat 100 min. 90 cm; Pressomat 200 min. 110 cm
- Recommended table height: 350 400 mm

### Minimum load bearing capacity of the table


Pressomat 100: 200 kg Pressomat 200: 250 kg

### Installation tools

- Philips screwdriver
- 6 mm Hex key

### 7.2 Pressomat installation

- [1] Place the Pressomat on the table.
- [1] Screw in four screws (not included).

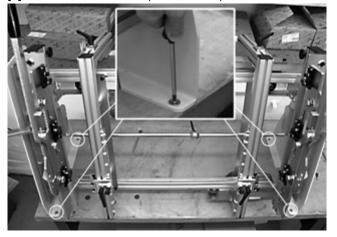

### 7.3 Extension assembly

### Risk of crushing injuries during the assembly of the extension!

> Secure the Pressomat with wooden blocks against falling prior to removing the lateral metal plate.


### Note:

The Pressomat can only be extended to the right..


[1] Place wooden blocks underneath.




[2] Unscrew three screws. Remove the right metal plate.

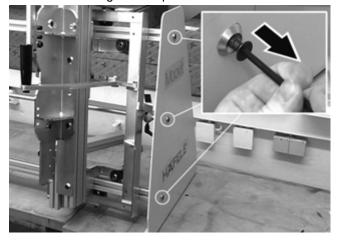


[3] Attach extension sections.

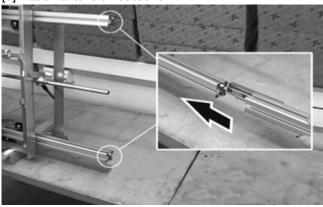


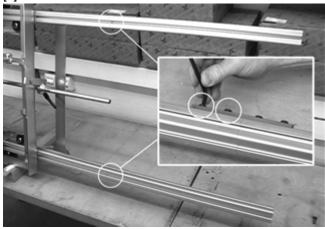

[5] Manually screw in the extension rod. Insert the right metal plate.

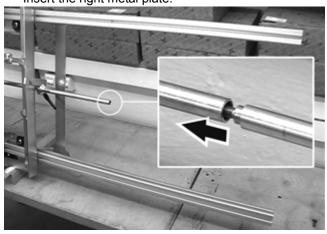

[6] Screw in three screws and tighten.

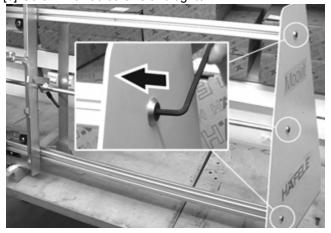


### 7.4 Retrofitting set assembly


[1] Unpack the retrofitting set and keep available.



[2] Unscrew four screws and set aside.

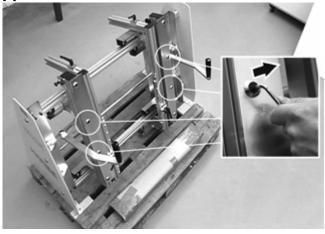

[3] Attach both clamping arms with two included screws (length of 30 mm). Observe the position (see image).

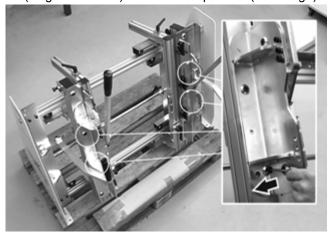


# HAFELE


### 8.1 Set the drawer width.

8. Operation

[1] Place the drawer bottom on the left clamping arm.

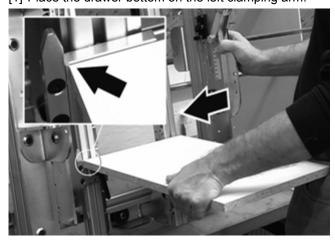

[2] Push the right clamping arm to the stop.

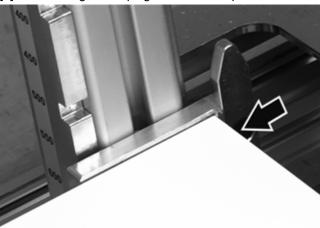


[3] Fix the position with the positioning device.




### 8.2 Set the drawer length.

[1] Slide the blocks to the required position by releasing the levers.

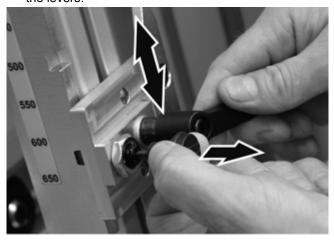

### Note:

Each notch is assigned to a certain drawer side length. The following drawer side lengths can be adjusted: 270 - 300 - 350 - 400 - 450 - 500 - 550 - 600 - 650.

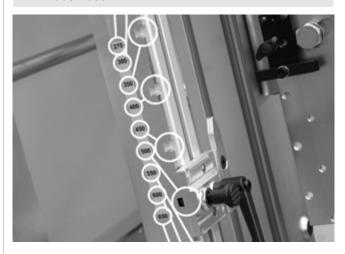

[2] Snap bracket into the desired notch. Secure the position by tightening the lever.



### 8.3 Secure the bottom and rear panel

### [1] Insert the bottom panel.



### [2] Push the back panel flush to the bottom.




## [3] Clamp the rear panel with depth gauges. Tighten the lever.




### 8.4 Insert drawer sides

[1] Push the drawer side from above between the bottom panel and the drawer side pin and press against the bottom. Repeat the process with the second drawer side.

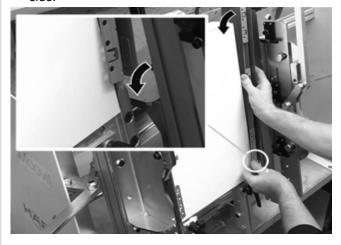

## Risk of crushing injuries when operating with one hand!


- > Only operate the levers simultaneously using both hands.
- [2] Press together both clamping levers.

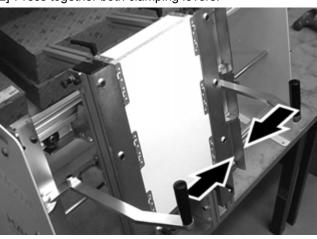




### 8.5 Attach the drawer sides and rear panel. Pressomat 100:


[1] Fix screws 3.5 x 15 mm ( #6 x 5/8"-Flathead) into bottom panel (quantity as required).

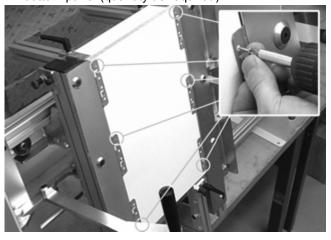

[2] Fix screws 3.5 x 15 mm (#6 x 5/8"-Flathead) into rear panel (quantity as required).

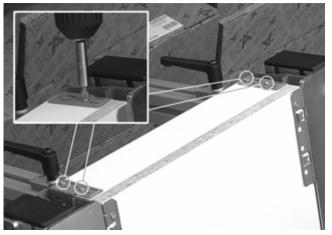


[3] Open both clamping levers. Remove the drawer.

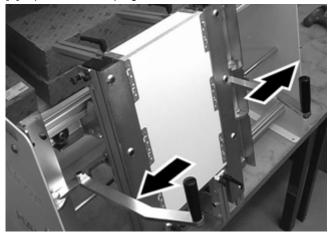


### 8.6 Attach the drawer sides and rear panel. Pressomat 200:

[1] If necessary, align the lower press in unit holder to the lower claws of the drawer sides. Remove the wing bolt and move the press in unit holder.

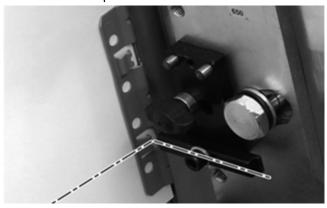


### Risk of crushing injuries when operating with one hand!

- Only operate the levers simultaneously using both hands.
- [2] Press both pressing levers up to the stop. The claws are thereby pressed into the bottom panel. Drawer sides and bottom panel are connected.

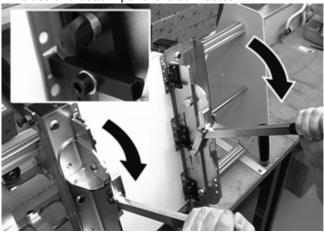

[3] Fix screws 3.5 x 15 mm (#6 x 5/8"-Flathead) into rear panel (quantity as required).

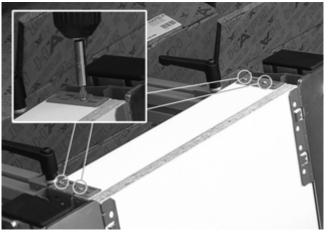

### 11. Technical data

### [4] Open all levers and remove the drawer.



### 9. Maintenance and repair

Lubricate all movable parts as necessary.

### 10. Spare parts

- · Replace damaged parts.
- Only use original replacement parts.
- For replacement parts please contact your local H\u00e4fele sales office.

### i. iccimicai data

### Dimensions of the Pressomat 100:

• Length (without extension): 116 cm

· Length (with extension): 177 cm

Width: 71 cmHeight: 81 cm

Weight: 82.5 kg (182 lbs)

### **Dimensions of the Pressomat 200:**

Length (without extension): 116 cmLength (with extension): 177 cm

Width: 71 cmHeight: 100 cm

Weight: 100 kg (220 lbs)

### Pressomat retrofitting set

Weight: 17.5 kg (39 lbs)