



Installation instructions

LEDTF-12V / LEDTF-24V Series

Cautions

1. The unit shall be installed by a qualified electrician.
2. The unit shall be installed in a well-ventilated area.
3. Indoor use only
4. Use only compatible magnetic low voltage dimmer for dimming application.
5. 50% minimum load is required for normal operation.


Installation

1. Verify if the input and output parameters on the product labels are adequate to your application.
2. Locate a well-ventilated, dry area to mount the unit. It has to be installed vertically and secured by inserting to screws to the keyholes on the top. Please also make sure that the mounting surface needs to be capable to support the unit's weight.
3. Turn the power off. Remove the wire compartment cover and knockout(s). Run the input and output wires to the wiring compartment.
4. Connect all the input/ output wires to the unit by the adequate wire nuts (refer to the wiring diagram on the other page). Make sure the unit is properly grounded by connecting the green ground wire.

Troubleshooting

In the event of overloading, please check if there is any shortage on the secondary circuit and make sure the total load doesn't exceed the maximum rated wattage. Press the overload fuse back to its normal position when all the errors are cleared.

LEDTF-12V Series

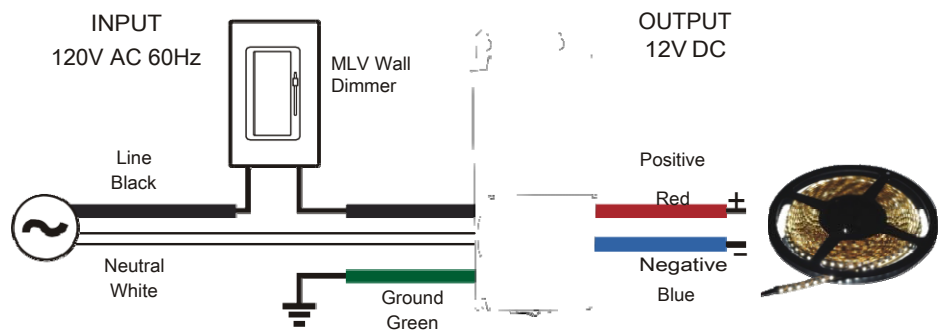

LEDTF-24V Series

