


PARALLEL ARM INSTALLATION

CLOSER MOUNTED ON DOOR ON PUSH SIDE

This drawing shown is RIGHT HAND DOOR, For LEFT HAND DOOR should be install in symmetry

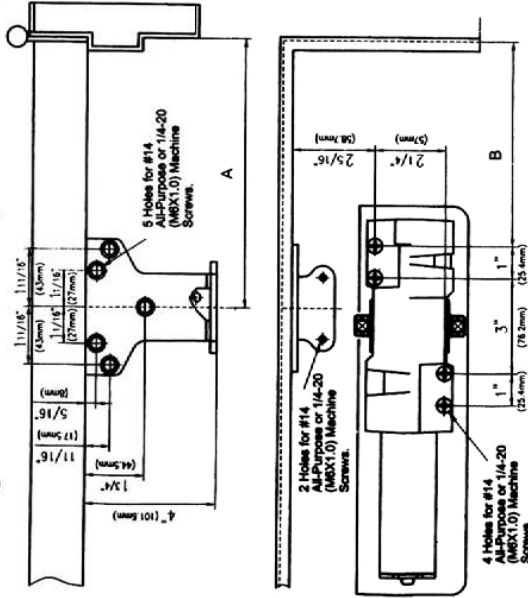

OPENING	"A"	"B"
TO 100"	9-7/16" (240)	8-1/4" (210)
TO 120"	8-5/8" (220)	7-5/16" (185)
OVER 140"	7-7/8" (200)	6-1/2" (165)


- Before installation, turn Back Check selector valve (found on the opposite side of closer from back check screw side) ALL THE WAY IN (CLOCKWISE).
 - Adjust spring power to match door width as indicated by chart on page 1.
 - Mount closer on door as dimensions shown. Tube and bracket with 7 pins are provided.
 - Back, locate closer and parallel bracket from CENTERLINE OF DOOR.
 - Open door and attach on 100mm hole and turn inward hinge arm about 30° and install nut and 100mm bolt. Insert screw into top of shaft and tighten.
 - Attach parallel bracket on frame as dimensions shown.
 - Insert rod and shoe to parallel bracket as shown.
 - Insert rod in forearm, and then insert main arm to closer parallel to door. Then insert forearm nut screw and tighten.
- (IF HOLD OPEN ARM IS USED, THE NUT IS ON THE TOP FOR RH DOOR AND BOTTOM FOR LH DOOR)

REGULATION:
A Normal closing time from 80° open position to door stop position is 4-6 sec., evenly divided between main swing speed and latch swing speed. Use socket key (furnished) to adjust speed. To slow main speed of door, turn regulating screw nearest shaft clockwise. To slow latch speed, turn regulating screw nearest hinge clockwise.

BACK CHECK
To increase back-check force, turn regulating screw nearest hinge clockwise. DO NOT USE ADJUST BACKCHECK OR EXPECT DOOR CLOSER TO ACT AS A DOOR STOP.

COVER
Please insert in proper cabinet, then push cover against door. Tighten both cover screw securely.

HOLD OPEN ADJUSTMENT (when hold open arm is used)
Loosen adjusting nut, open door to desired hold open position and tighten nut. Do not permit door to swing beyond hold open setting.

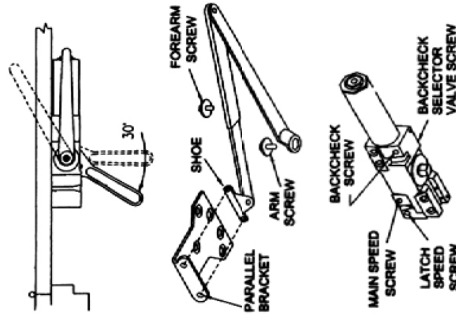


International[®] door closers


DOOR CLOSER
MODEL: 44CI

INSTALLATION INSTRUCTION


STANDARD MOUNT (PULL SIDE)

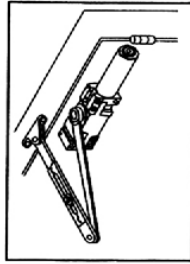

TOP JAMB MOUNT (PUSH SIDE)

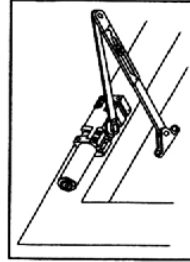

PARALLEL MOUNT (PUSH SIDE)


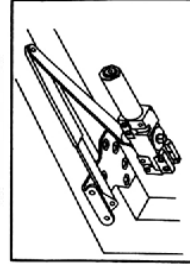


MAXIMUM DOOR WIDTH		FULL TURNS REQUIRED
EXTERIOR DOORS	INTERIOR DOORS	
—	5 lb-4"	5 TURNS C.C.W.
8.5 lb-4"	34" (864)	2 TURNS C.C.W.
30" (762)	38" (962)	0 TURNS
38" (914)	48" (1219)	5 TURNS C.W.
42" (1067)	54" (1372)	10 TURNS C.W.
48" (1219)	60" (1524)	15 TURNS C.W.

HOW TO DEFINE HAND OF DOOR



CONTROL RANGE

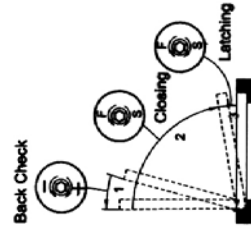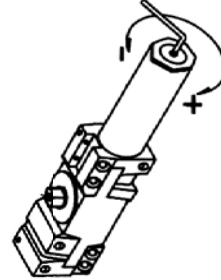


Spring Power Adjustment

STANDARD INSTALLATION

CLOSER MOUNTED ON DOOR ON PULL SIDE

This drawing shown is LEFT HAND DOOR, For RIGHT HAND DOOR should be install in symmetry.

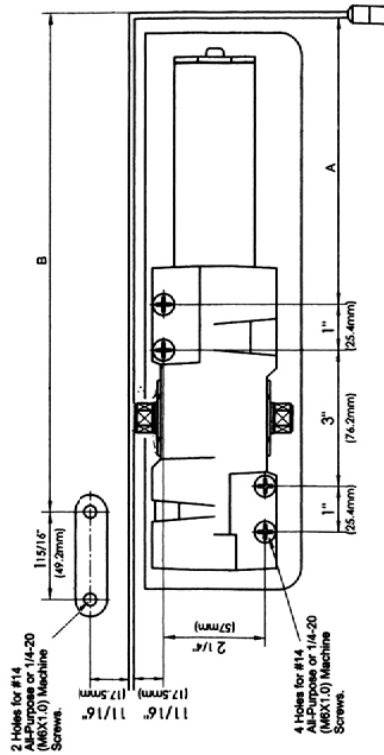

OPENING	'A'	'B'
TO 100"	7-5/16" (185)	11-13/16" (300)
TO 130"	6-1/4" (159)	10-13/16" (275)

1. Adjust spring power to match door width as indicated by chart on page 1.
2. Mount closer on door as dimensions shown. Tube end toward hinge if pivots are used, locate closer and shoe from CENTERLINE OF PIVOT.
3. Place main arm on top of shaft, 100% to closer body, insert arm screw into top of shaft and tighten.
4. Attach shoe to frame as shown. (If more latching power is required, rotate shoe 180°)
5. Open door and insert rod in forearm.
6. With forearm at right angle to door (90°), insert forearm set screw and tighten. (IF HOLD OPEN ARM IS USED, THE NUT IS ON THE TOP FOR RH DOOR AND BOTTOM FOR LH DOOR)

REGULATION:

A Normal closing time from 90° open position to door stop position is 4-6 secs, evenly divided between main swing speed and latch swing speed. Use socket key (furnished) to adjust speed. To slow main speed of door, turn regulating screw nearest shaft clockwise. To slow latch speed, turn regulating screw nearest latch clockwise.

BACK CHECK



 
To increase back-check force, turn regulating screw nearest hinge clockwise. DO NOT USE ABRUPT BACKCHECK OR EXPECT DOOR CLOSER TO ACT AS A DOOR STOP.

COVER

Place insert in proper cutout, then push cover against door. Tighten both cover screw securely.

HOLD OPEN ADJUSTMENT (when hold open arm is used)


Loose adjusting nut, open door to desired hold open position and tighten nut. Do not permit door to swing beyond hold open setting.

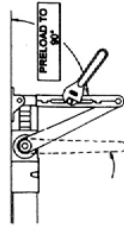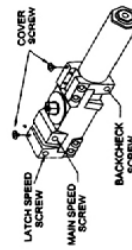

TOP JAMB INSTALLATION

CLOSER MOUNTED TOP JAMB ON PUSH SIDE OF DOOR

This drawing shown is RIGHT HAND DOOR.
For LEFT HAND DOOR should be install in symmetry.

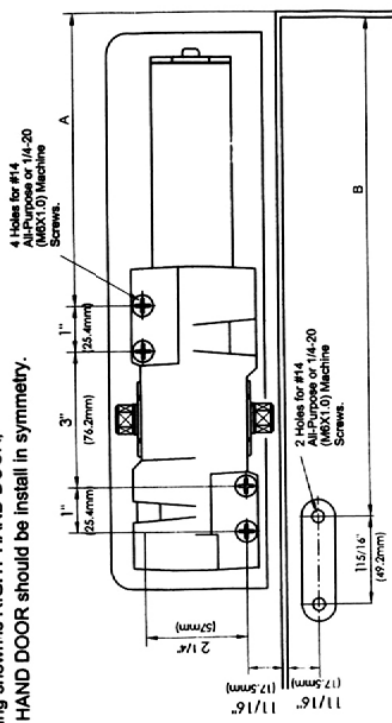

OPENING	'A'	'B'
TO 100"	7-5/16" (185)	11-13/16" (300)
TO 130"	6-1/4" (159)	10-13/16" (275)

1. Adjust spring power to match door width as indicated by chart on page 1.
2. Mount closer on frame as dimension shown. Tube end toward hinge. If pivots are used, locate closer and shoe from CENTERLINE OF PIVOT.
3. Place main arm on top of shaft, 100% to closer body, insert arm screw into top of shaft and tighten.
4. Attach shoe to door as shown. (If more latching power is required, rotate shoe 180°)
5. Open door and insert rod in forearm—for reveal 2 5/8" through 4 13/16" use long rod. For reveals 4 7/8" to 8" use FOREARM EXTENDER (ROD)—available from dealer.
6. With forearm at right angle to door (90°), insert forearm set screw and tighten. (IF HOLD OPEN ARM IS USED, THE NUT IS ON THE BOTTOM FOR RH DOOR AND TOP FOR LH DOOR)

REGULATION:

A Normal closing time from 90° open position to door stop position is 4-6 secs, evenly divided between main swing speed and latch swing speed. Use socket key (furnished) to adjust speed. To slow main speed of door, turn regulating screw nearest shaft clockwise. To slow latch speed, turn regulating screw nearest latch clockwise.

BACK CHECK

To increase back-check force, turn regulating screw nearest hinge clockwise. DO NOT USE ABRUPT BACKCHECK OR EXPECT DOOR CLOSER TO ACT AS A DOOR STOP.

COVER

Place insert in proper cutout, then push cover against frame. Tighten both cover screw securely.

HOLD OPEN ADJUSTMENT (when hold open arm is used)

Loose adjusting nut, open door to desired hold open position and tighten nut. Do not permit door to swing beyond hold open setting.

