


EZ LOAD SPRING AND DRIVER RELOADING TOOL



KEEDEX: New Reloading Tool

This unique tool uses a spring loaded ball bearing system and the pin chambers of the shell for perfect alignment every time. Cut down your loading time and your frustration with the **EZ Load Spring and Driver Reloading Tool**.

Because the tool aligns itself, all you need to do is start at the rear of the cylinder, drop a spring in, give it a shake and the spring will follow the V radius of the tool and drop into the pin chamber. Next drop in a driver, shake and the driver will drop in the chamber. Advance the tool to the next position and repeat the process until all chambers are complete.

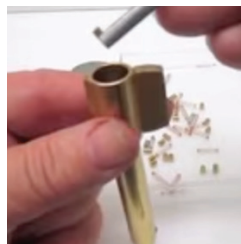

Talk with an IML Representative for full product details and availability

Part Number: KEEEX LOAD

Arizona Office

5620 South 32nd Street
Phoenix, Arizona 85040
Local: (602) 438-6068
Nationwide: (877) 438-6068

California Office

7655 North San Fernando Road
Burbank, California 91505
Local: (818) 781-9999
Nationwide: (800) 729-5444

Colorado Office

300 Bryant Street
Denver, Colorado 80219
Local: (303) 698-1898
Nationwide: (800) 323-8046

Nevada Office

3910 Graphic Center Drive
Las Vegas, Nevada 89118
Local: (702) 939-5625
Nationwide: (866) 809-5625

Utah Office (Corporate)

3106 South Main Street
Salt Lake City, Utah 84115
Local: (801) 486-0079
Nationwide: (800) 453-5386