


INSTALLATION INSTRUCTIONS

### INSTALLATION DESCRIPTION

The Series 2022xTJ22 / 3002LCxTJ22 is a 1200 pound holding force top jamb-mounted electromagnetic lock designed to secure a double-inswinging pair of doors. The lock requires both installation procedures as described herein and in the separate wiring instructions included.

Typical installation of the lock on double-inswing doors:

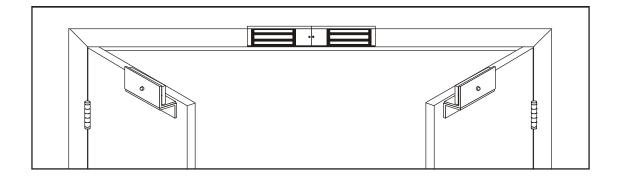

### HANDLING

Care must be taken that the lock face and armature face are kept free of dirt, rust, paint, or any other obstruction which may interfere with the lock and armature making good contact. These faces may be cleaned with a non-abrasive pad and wiped with an oil dampened cloth.

### **MECHANICAL INSTALLATION**

Familiarize yourself with the door and frame conditions. The lock must mount rigidly to the face of the door frame header. The door mounted armatures are supplied with adjustable mounting brackets and hardware that allow them to pivot slightly to compensate for reasonable misalignment.

NOTE: If this lock is supplied with the DSM2 feature be certain to mount the armatures with the DSM block extensions aligned with the wiring access covers of the lock.

### **ELECTRICAL INSTALLATION**

After mechanical installation is complete the lock needs to be wired to a 12 or 24 VDC/VAC power source. Once low voltage power is supplied the unit is fully operational. All other wiring is for selected options. Refer to the separate wiring instructions included for further information.




frame.

planned mounting location.

frame header.


# SERIES 2022xTJ22 / 3002LCxTJ22 ELECTROMAGNETIC LOCK

INSTALLATION INSTRUCTIONS

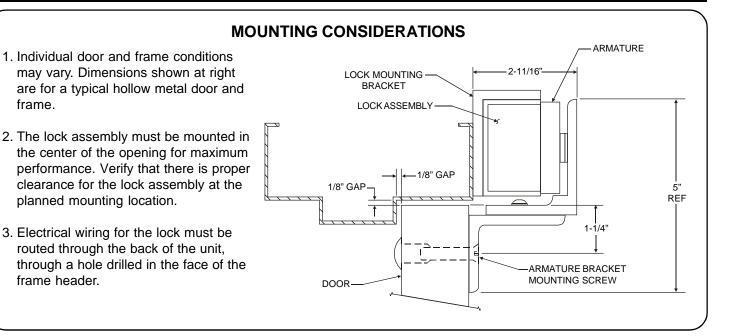

## INSTALL THE LOCK MOUNTING BRACKET

- 1. Standing at the "pull" side of the opening center the lock mounting bracket on the face of the frame header as shown below. Locate and mark the centers of the four slotted mounting holes and the wiring hole.
- 2. Drill the marked holes in the face of the frame header: a. Four (4) 1/8" dia. slotted mounting holes, 1" deep. b. One (1) 5/8" dia. wiring hole.
- 3. Attach the lock mounting bracket to the frame header using four (4) #10 x 1" pan head Tek screws. Temporarily tighten the screws.

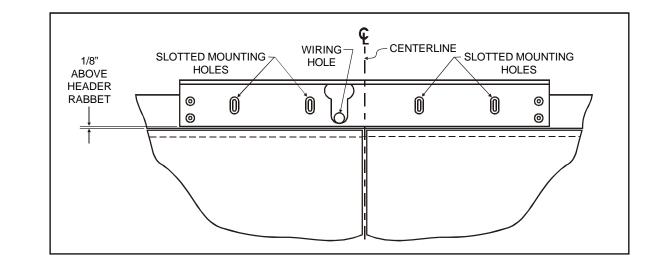




INSTALLATION INSTRUCTIONS

## ATTACH THE LOCK ASSEMBLY TO THE LOCK MOUNTING BRACKET

Using the three lock mounting screws and brass spacers attach the lock assembly to the lock mounting bracket as shown. The lock assembly will need to be removed later to add the remaining bracket mounting screws, after all hardware adjustments have been made.

Firmly tighten the mounting screws with a 3/16" hex wrench.

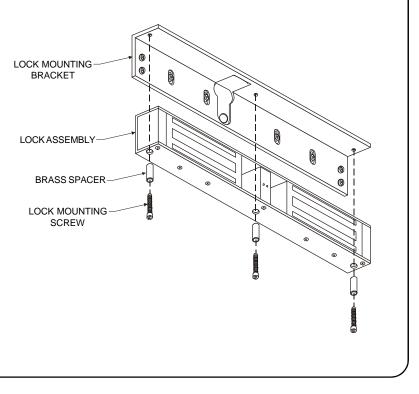


## ATTACH THE ARMATURES TO THE ARMATURE MOUNTING BRACKETS

Assemble the armature mounting brackets referencing the exploded parts view on page 7.

Locate the armature mounting hardware from the hardware kit and attach the armatures to the armature mounting bracket as shown. Firmly tighten the mounting screws with a 3/16" hex wrench.

Failure to properly secure the armatures to the brackets could result in serious injury or possible security breach.

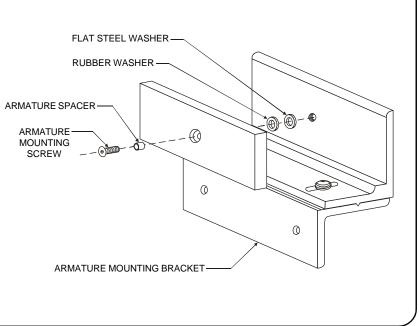




INSTALLATION INSTRUCTIONS


### **INSTALL THE ARMATURE MOUNTING BRACKETS**

1. Use the figures below to identify and mark the locations of the armature mounting bracket screw holes on each door.

Refer to door and frame prep drawing #301091 for further information.

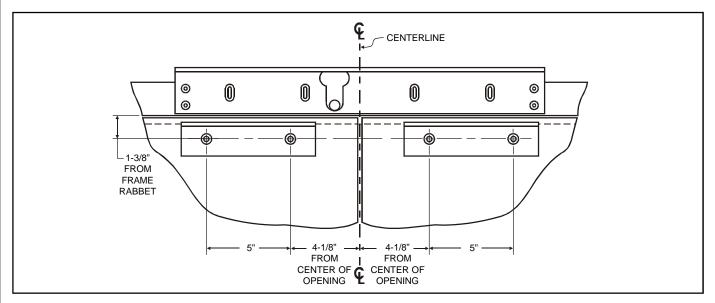

2. From the illustrations below select the one that resembles your door type and follow the instructions for drilling the armature mounting bracket screw holes.

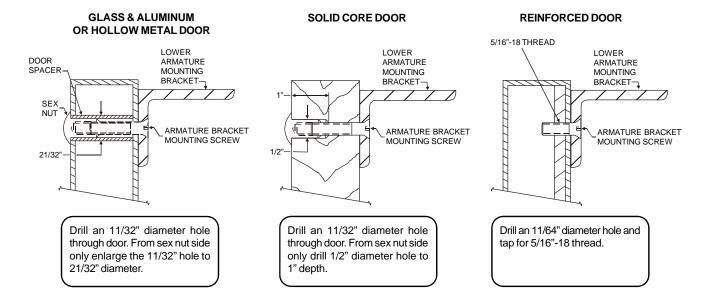

3. Mount the armature and mounting bracket assembly to each door using the appropriate hardware for you door type. Frimly tighten the mounting screws with a 3/16" hex wrench.



INSTALLATION INSTRUCTIONS


### ARMATURE AND LOCK ADJUSTMENT

#### ARMATURE ADJUSTMENT

- 1. Using a 5/32" hex wrench temporarily loosen the armature bracket assembly screws roughly 1-1/2 turns to allow the upper armature bracket to move in and out freely (Ref. Figure "A").
- 2. Close and latch both doors. The mating surfaces of the lock and armatures should fully contact each other. If necessary slide the armatures in or out to ensure full contact is made with the lock while still allowing the doors to properly close and latch.
- 3. When the desired adjustment is acheived slowly open the doors, taking care to maintain the position of the armature. Firmly tighten the armature bracket assembly screws with a 5/32" hex wrench, making sure that the locking ribs on the upper and lower bracket halves properly mesh (Ref. Figure "A").


#### LOCK ADJUSTMENT

1. Verify that the lock faces squarely align with the armature faces. To adjust the lock vertically, remove the lock assembly from the lock mounting bracket, loosen the two adjustment slot screws and re-position the bracket accordingly.

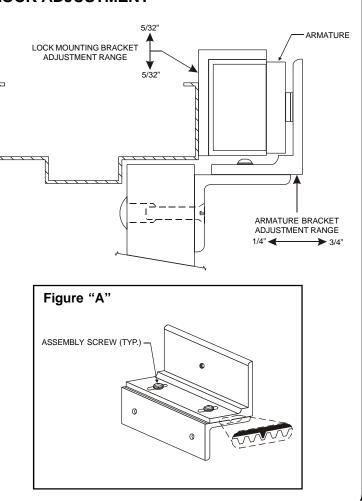

### LOCK MOUNTING BRACKET FINAL ASSEMBLY

- 1. Following adjustment (if required) firmly re-tighten the adjustment slot screws on the lock mounting bracket. Using the bracket as a physical template mark the centers of the four fixed mounting screw holes. Drill the holes in the header using a 1/8" drill, 1" deep.
- Complete the installation of the lock mounting bracket using four (4) #10 x 1 pan head Tek screws (Ref. Figure "B"). Firmly tighten all screws with a #2 phillips head screwdriver.

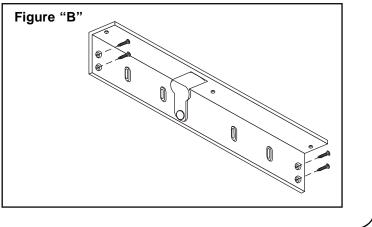



INSTALLATION INSTRUCTIONS

### SECURE THE LOCK ASSEMBLY TO THE LOCK MOUNTING BRACKET 1. Secure the lock assembly to the mounting bracket LOCK MOUNTING BRACKET using the three lock mounting screws and brass 0 spacers. Firmly tighten the the mounting screws with a 3/16" hex wrench. LOCK ASSEMBLY 2. Install the anti-tamper plugs from the hardware kit over the lock mounting crews. Gently tap into place using a rubber mallet. BRASS SPACER LOCK MOUNTING SCREW 3. The mechanical installation is now complete. Refer to the separate 2000/3000/300LC Wiring ANTI-TAMPER PLUG Instructions to complete the electrical installation. A

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
1	Lock Assembly	Consult Factory	10	Armature Bracket Assy. Screw	Hardware Kit P/N 301080
2	Lock Mounting Bracket	301073	11	Lock Washer	
3	Armature	300013	12	Anti-Tamper Plug	
4	Upper Armature Bracket	300724	13	Lock Bracket Mounting Screw	
5	Lower Armature Bracket	300725	14	Armature Mounting Screw	
6	Access Cover / Board Assy.	300906	15	Armature Spacer	
7	Access Cover Screw	300608	16	Rubber Washer	
8	Brass Spacer	300468	17	Flat Steel Washer	
9	Lock Mounting Screw	300603	18	Sex Nut	
Note: Refer to Page 7 for parts locations.			19	Door Spacer	-
			20	Armature Bracket Mtg. Screw	

## **EXPLODED PARTS VIEW LEGEND**


A



705 Emmett Street & Bristol, CT 06010 Ph/ 860.582.4761 & Fx/ 860.585.0338

## SERIES 2022xTJ22 / 3002LCxTJ22 ELECTROMAGNETIC LOCK

INSTALLATION INSTRUCTIONS

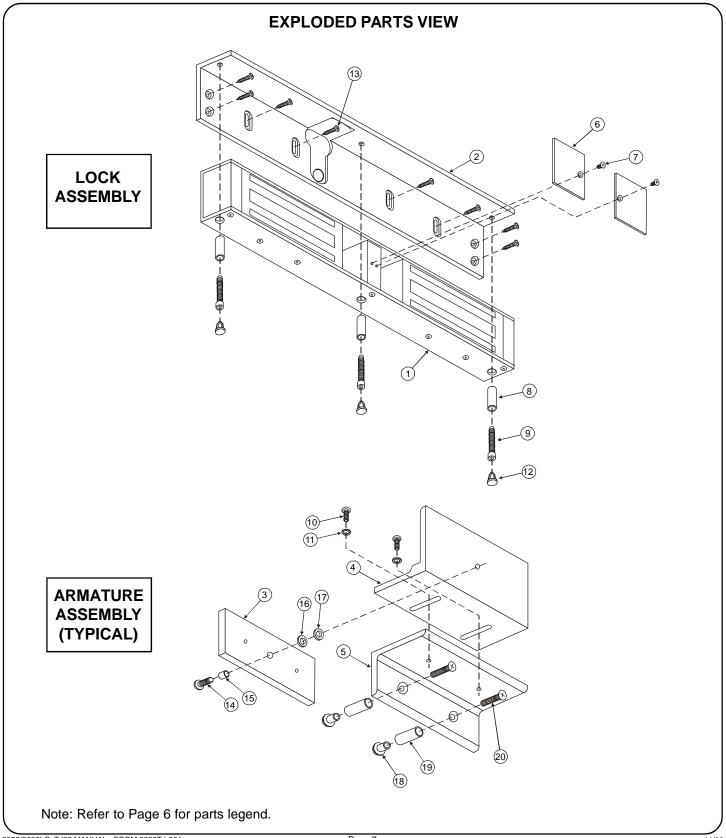

## FOR PRODUCT SUPPORT AND PARTS ORDERING INFORMATION CONTACT:

DynaLock Corp. 705 Emmett Street Bristol, CT 06010 Bus: (877) 396-2562 Toll-Free USA (860) 582-4761 Fax: (860) 585-0338

## DYNALOCK ON THE INTERNET:

E-mail: info@dynalock.com Website: www.dynalock.com