

#### **IMPORTANT**



Templates must be printed without size modifications and verified for dimensional accuracy.

- Before printing, select the printing options necessary to ensure that copies are produced without size adjustments.
- After printing, measure the dimensions indicated on the template to ensure correct scale.

## ETPDL


Trilogy® Panic Exit Device Trim




# Von Duprin

Model 99 Rim Exit Device


# INSTRUCTIONS & TEMPLATE

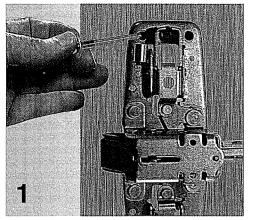


1. Existing installation: Remove Exit device from door.

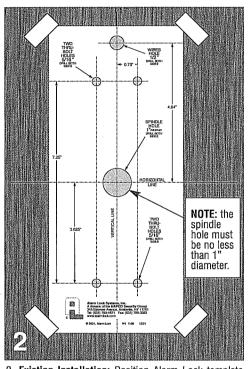


2. Existing Installation: Position Alarm Lock template on horizontal & vertical lines of existing spindle hole. New Installation: Locate and mark horizontal and vertical lines indicated in Exit Device Instructions/ Template. Line up Alarm Lock template with horizontal and vertical lines and tape on door.. Existing and New Installations: Mark all hole centers on each side of door Drill all holes from both sides of on each side of door. Drill all holes from both sides of

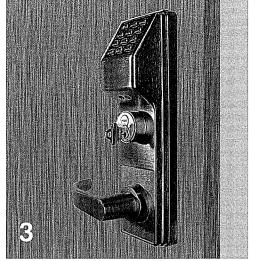


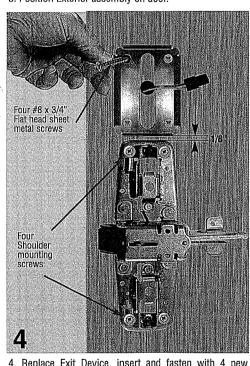

4. Replace Exit Device, insert and fasten with 4 new Shoulder mounting screws. Do not over tighten. Pull wires from door through Battery Mounting Plate. Do not pinch or cut wires. Position plate 1/8" minimum above Exit Device and fasten with four #8 x 3/4" flat

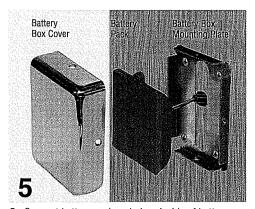

5. Connect battery pack and place inside of battery mounting plate. Position cover and fasten with three

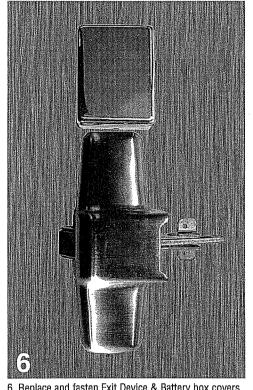

6. Replace and fasten Exit Device & Battery box covers.

Check lock for proper operation before closing door.

## Von Duprin Model 99 HOLE 3/4" DRILL BOTH TWO. THRU-BOLT HOLES 5/16" DRILL BOTH SIDES 4.84" SPINDLE HOLE 1"minimum DRILL BOTH 7.00" HORIZONTAL LINE TWO THRU-**BOLT** 3.50" **HOLES** 5/16" DRILL BOTH SIDES © 2001 Alarm Lock Systems, Inc.

WI 1121-V99 01/02


### To Change Cylinder

**IMPORTANT:** When replacing cylinder be sure to use the proper Cylinder Adapter and Tailpiece.



Alarm Lock Systems, Inc. A division of the NAPCO Security Group 345 Bayview Avenue, Amityville, NY 11701 Tel: (631) 789-4871 Fax: (631) 789-3383



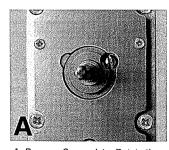

A. Remove Cover plate. Rotate the spindle either direction to expose and remove cylinder screws.



B. Remove old cylinder and Insert new cylinder.



C. NOTE the tailpiece must be in the above horizontal position.