HÄFELE

LED3108 – TUNABLE WHITE – 24 V

QUICK SETUP

Item No.
833.96.375


Step 1 Power the System



1) Plug Power Cord (833.95.017) into the Driver (833.95.011).



2) Connect the Connect Mesh Distributor (850.00.847) into Driver (833.95.011).

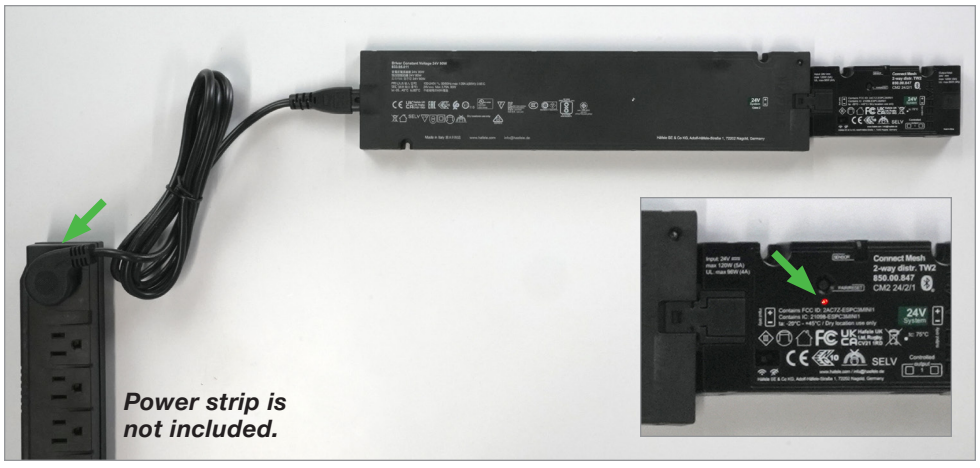

3) Plug Power Cord (833.95.017) with connected Driver (833.95.011) and Connect Mesh Distributor (850.00.847) into power outlet.


☑ Red light on the mesh box will begin blinking.

HÄFELE

LED3108 – TUNABLE WHITE – 24 V


QUICK SETUP

Step 2 Connect Lights

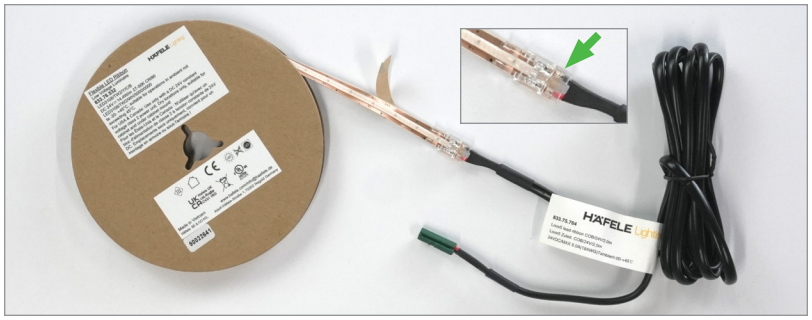

1) Connect the LED ribbon lead (833.75.764) to the LED ribbon (833.76.532). Line up the positive side of the strip light to the red wire of the lead, then push the COB Gold strip light under the metal contacts.

How to connect lead to COB ribbon

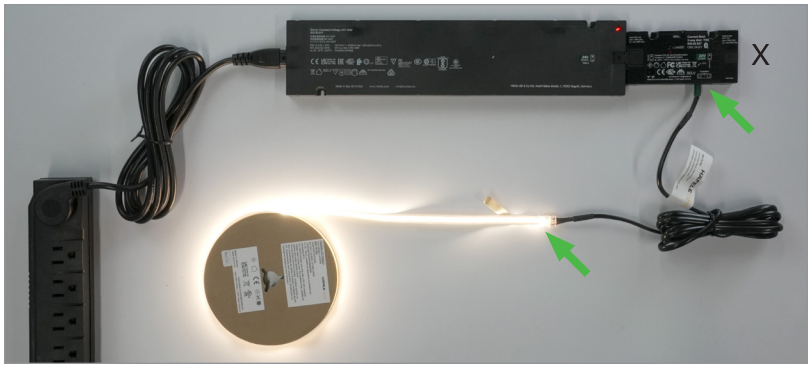

2) Connect the lead's ribbon assembly to the Connect Mesh Distributor (850.00.847) using either port on the front face of the distributor (see green arrow). The single port on the right side is a pass-through port and used to power an additional device. (see X)

☑ Lights will turn on

Step 3 Power the Switch / Remote



1) Remove back cover from the 4-Button wall switch (850.00.951) and insert the battery (002.99.032).

☑ Indicator light will begin blinking.

☑ After 60 seconds the light will stop flashing. To return it to pairing mode, press and hold the reset button for 10 seconds.

Step 4 Start Pairing



1) Press the 4-Button wall switch (850.00.951) reset button located on the back of the wall switch once.


☑ Indicator light on the wall switch will flash quickly.

HÄFELE

LED3108 – TUNABLE WHITE – 24 V

QUICK SETUP

Step 5 Pairing Process

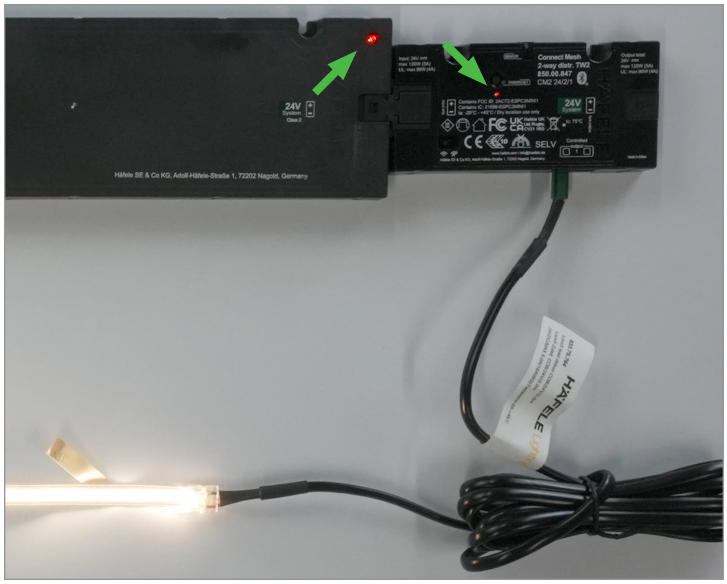


☑ Connect Mesh Distributor light and connected lights will flash.

Step 6 Pairing Complete



1) Connect Mesh Distributor (850.00.847) lights stop flashing.

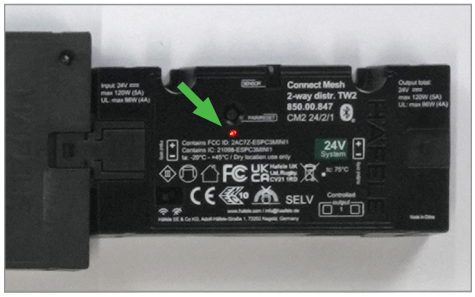

2) Connect Mesh Distributor (850.00.847) light stays solid for ~5 seconds.



☑ 4-Button wall switch begins slow blinking.

HÄFELE

LED3108 – TUNABLE WHITE – 24 V

QUICK SETUP

Step 7 Finish Setup



1) Press the reset button on the back of the 4-Button wall switch (850.00.951) to take it out of pairing mode.

☑ Indicator light stops blinking.



2) Replace the cover on the 4-button wall switch.

☑ System is now paired and ready to use.
*If you need to pair the switch with additional connect mesh distributors, press the RESET button again to put it back into pairing mode.

4-BUTTON WALL SWITCH FUNCTIONS



Button 1
Tap: On, Hold: Brightness up

Button 2
Tap: Temperature Up/Color Up

Button 3
Tap: Temperature Down/Color Down

Button 4
Tap: Off, Hold: Brightness down

Scan to download the Häfele Connect Mesh App for advanced control and customization.

Download on the App Store

GET IT ON Google Play

HÄFELE

PACKAGE CONTENTS

Item No.
833.96.375

Required Components

Description		Quantity
Driver Item No. 833.95.011		1
Power Cord, 2 m (78 3/4") Item No. 833.95.017		1
LED Ribbon, Tunable, 5 m (196 7/8") Item No. 833.76.532		1
Connect Mesh Distributor, 2-Way Item No. 850.00.847		1
Leads, 2 m (78 3/4") Item No. 833.75.764		2

Description		Quantity
4-Button Wall Switch Item No. 850.00.951		1
Wall Plate Item No. 820.66.753		1
Mounting Bracket Item No. 825.73.775		1
Battery (CR2032) Item No. 002.99.032		1

Optional Components

Description		Quantity
Clip Connectors Item No. 824.19.424 (Connects cables to ribbons, ribbons to ribbons, cables to cables)		10

Description		Quantity
Interconnecting Leads Item No. 833.75.766 (Connects ribbons to ribbons)		2