
Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130 (830)629-2900 /1-800-729-3839 /FAX(830)620-6711
E-MAIL: detex@detex.com INTERNET: www.detex.com


INSTALLATION INSTRUCTIONS FOR ADVANTEX/VALUE SERIES RIM ES PRODUCT

ES (Electric Signal)

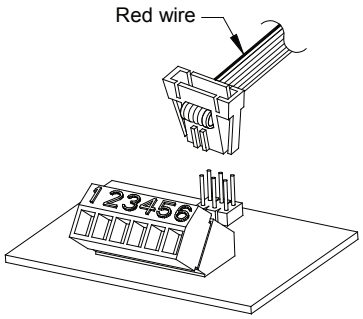

Advantex/Value Series product consists of two switches:

1) PushPad/LBM (Latch Bolt Monitor) monitors the pushpad and the deadlocking actuator in the latchbolt.
   PushPad/LBM Switch *Normally Open held closed (Door Secure)
2) Authorized (Auth) Access Switch is activated by operating outside trim.

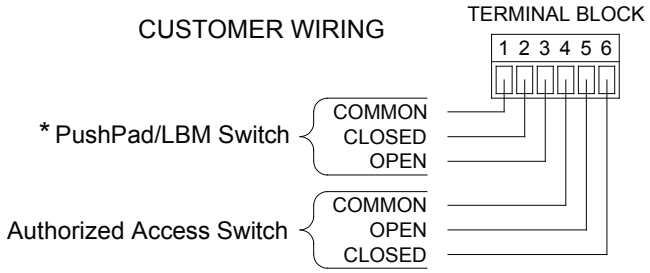

Theory of Operation:

- Door Closed - Deadlocking actuator activates PushPad/LBM Switch. Authorized Access Switch is not affected.
- Door Closed - Depressing the PushPad changes the state of the PushPad/LBM Switch. Authorized Access Switch is not affected.
- Door Closed - Authorized Access Switch is activated by operating outside trim. As the latchbolt begins to retract, the PushPad/LBM Switch is also activated.

Tools Required
Jewelers (Small) Screwdriver 