AIPHONE

AX-DV External Switch Modification

Connecting an external switch to the AX-DV


Use with:

AX Series

- INSTRUCTIONS -


Add two wires to unit to allow an external switch to activate the call in circuit.

DIAGRAM:

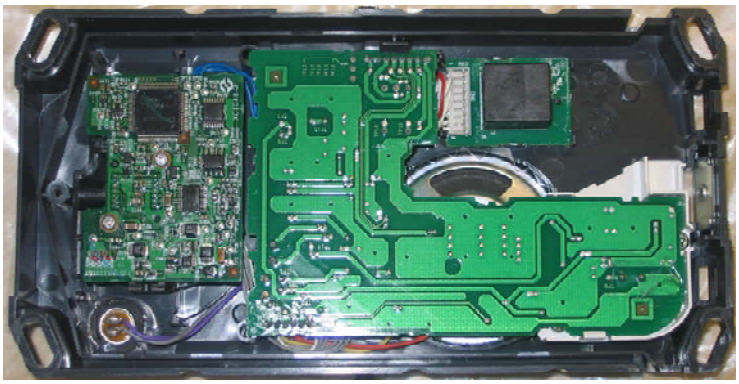

1) Remove front cover of AX-DV by removing security screw on bottom of unit.

2) Remove back cover by removing single screw on back of unit.

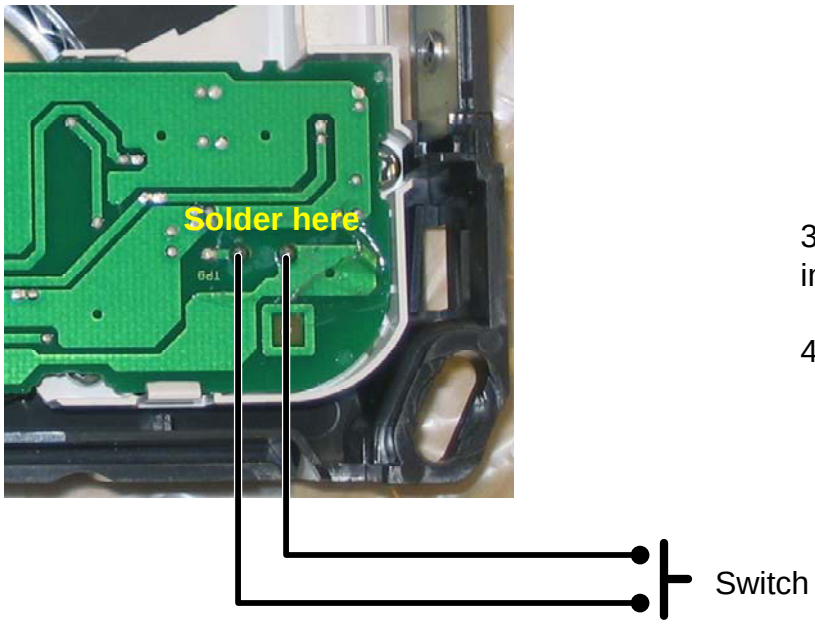

3) Solder two wires to back of switch as indicated by diagram.

4) Replace back cover and install unit.

Aiphone Communication Systems
1700 130th Ave. N.E.
Bellevue, WA 98005
(425) 455-0510
FAX (425) 455-0071

TOLL FREE TECHNICAL SUPPORT:
(800) 692-0200
TOLL FREE FAX LINE:
(800) 832-3765
E-MAIL: tech-serv@aiphone.com