AIPHONE

BA-1

Paging Adaptor


Use with:

LEM, LEF, LAF/LDF, or NEM/NDR Series Masters

- INSTRUCTIONS -

The BA-1 Paging Adaptor allows paging to external speakers from the NEM, LAF, LEF, LDF and LEM series master stations. For each zone of paging, use a BA-1 with the appropriate sized amplifier. The BA-1 provides outgoing paging only. Talkback is not available.

WIRING DIAGRAM:

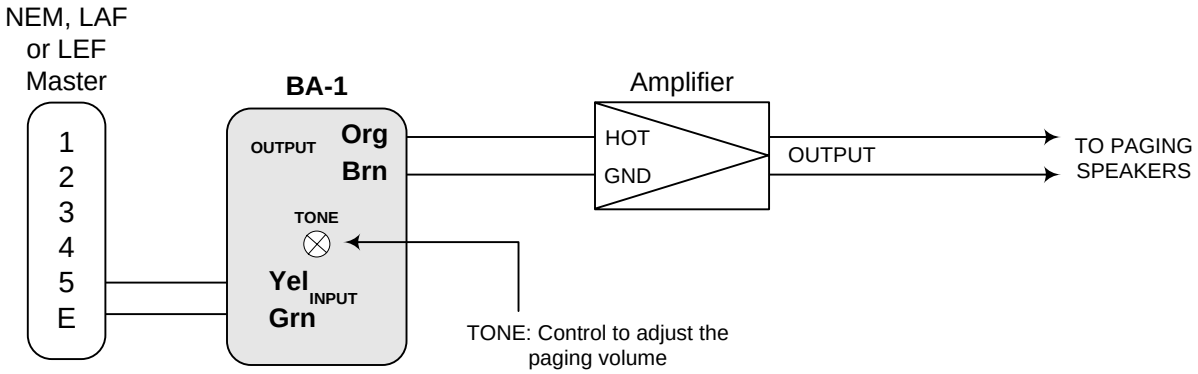

NOTES:

1. The above example shows station 5 accessing the paging zone. Any unused station can be used for a paging zone.

2. The colored wires at each end of the BA-1 are the Input and Output. Connect them to the intercom and amplifier as shown.

3. Only wiring concerning the BA-1 is shown here. For complete installation information see the system's instruction manual.

4. The TONE control is located on the top of the BA-1, and requires a screwdriver for adjustment.

SPECIFICATIONS:

Power Source:	Supplied by master
Input:	20 ohms
Output:	10K ohms
Amplifier input requirements:	Aux input (10K ohms)
Dimensions:	4-1/8"H x 2-1/2"W x 1-1/2"D

BA-1 COLOR CODE DEFINITIONS:

Org:	Hot side of output (Connect to amplifier input)
Brn:	Ground side of output (Connect to amplifier input)
Yel:	Hot side of BA-1 input (Connect to station # on master)
Grn:	Ground side of input (Connect to "E" terminal on master)

Aiphone Communication Systems
1700 130th Ave. N.E.
Bellevue, WA 98005
(425) 455-0510
FAX (425) 455-0071

TOLL FREE TECHNICAL SUPPORT:
(800) 692-0200
TOLL FREE FAX LINE:
(800) 832-3765
E-MAIL: tech-serv@aiphone.com