
DCN, DCR, B7 Series Cam Locks - *Standard Function*

CAM ASSEMBLY *for key removable in locked or unlocked position (standard function)*. All below configurations can be used with straight cam or offset cam (in either the inbent or outbent positions).


Function:
right-hand door, vertical drawer



Rear view

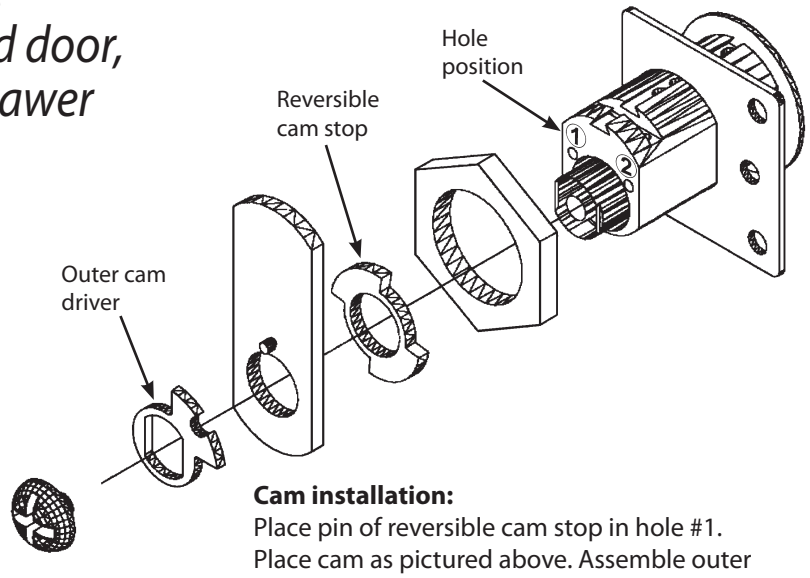


Cam installation:
Place pin of reversible cam stop in hole #1. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to left of the "ears." Screw in cam screw until tight.

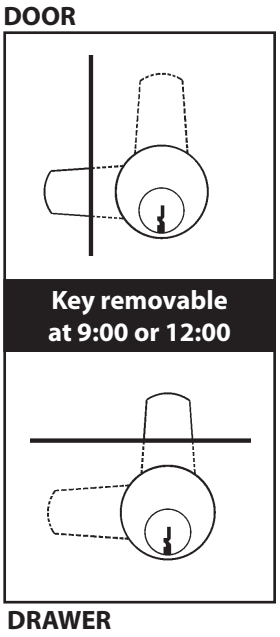


Function:
left-hand door, vertical drawer



Rear view

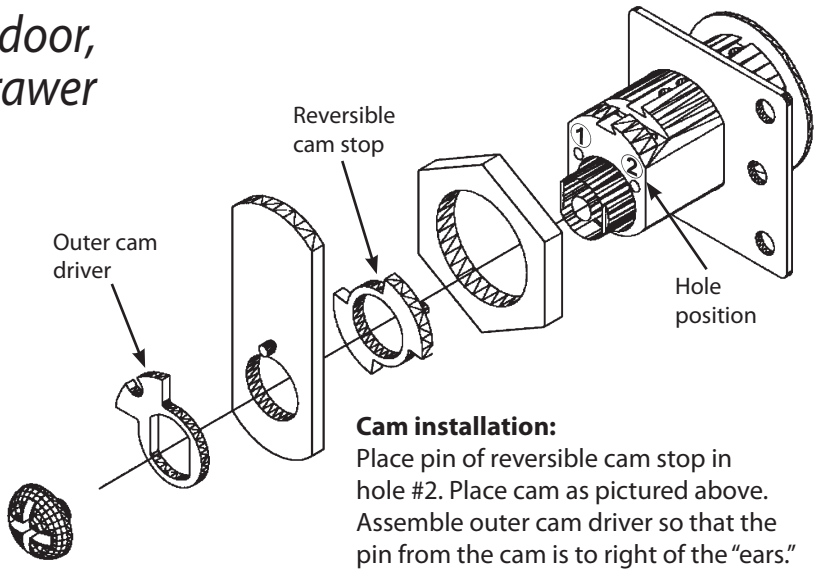

Cam installation:
Place pin of reversible cam stop in hole #2. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to right of the "ears." Screw in cam screw until tight.

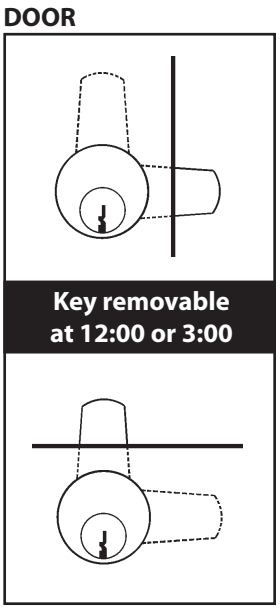

OLYMPUS LOCK, INC.
18424 Highway 99, Lynnwood, WA 98037
206-362-3290 | 800-525-0954 | Fax 206-362-3569
www.olympus-lock.com


DCN, DCR, B7 Series Cam Locks - *Standard Function*

CAM ASSEMBLY *for key removable in locked or unlocked position (standard function)*. All below configurations can be used with straight cam or offset cam (in either the inbent or outbent positions).


Function:
right-hand door, inverted drawer



Rear view

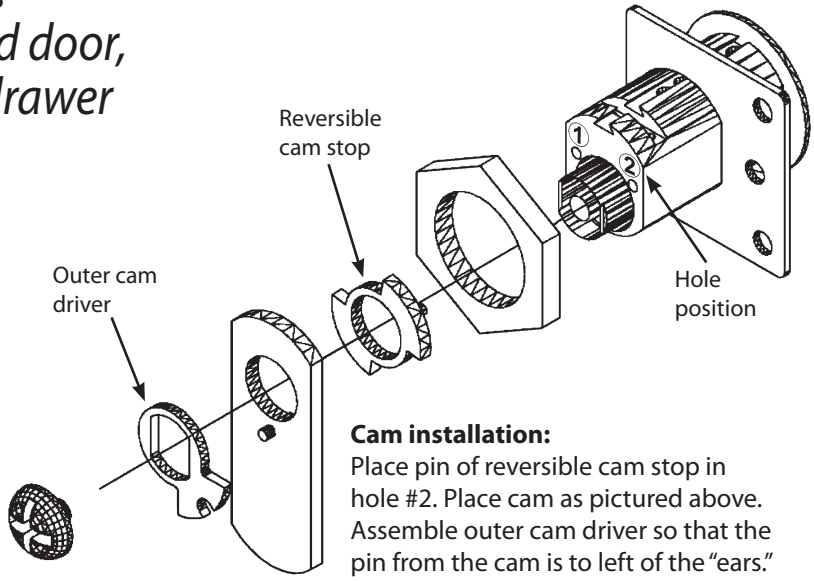


Cam installation:
Place pin of reversible cam stop in hole #2. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to left of the "ears." Screw in cam screw until tight.

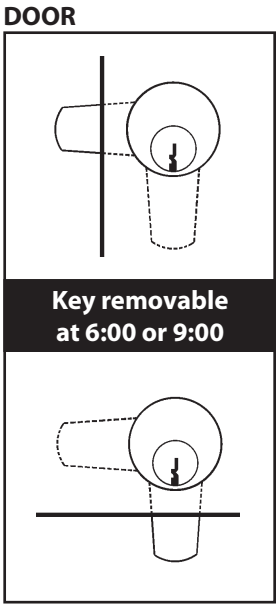


Function:
left-hand door, inverted drawer



Rear view

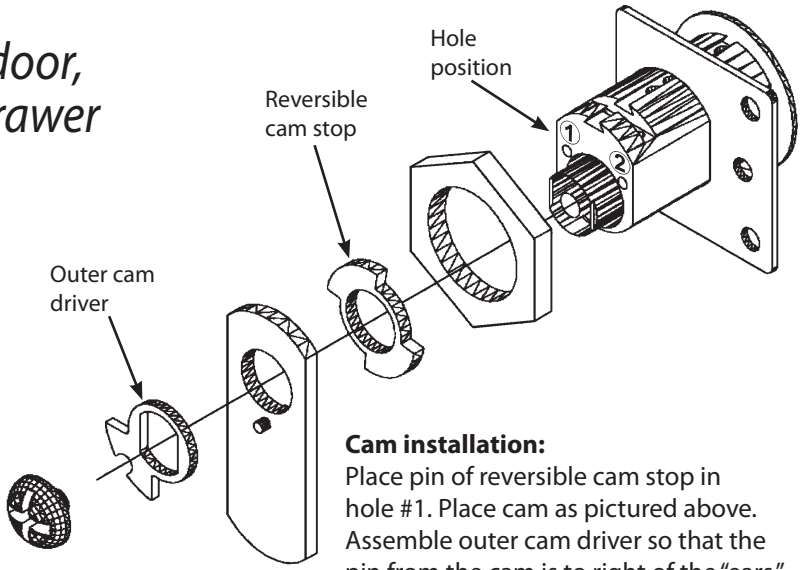

Cam installation:
Place pin of reversible cam stop in hole #1. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to right of the "ears." Screw in cam screw until tight.

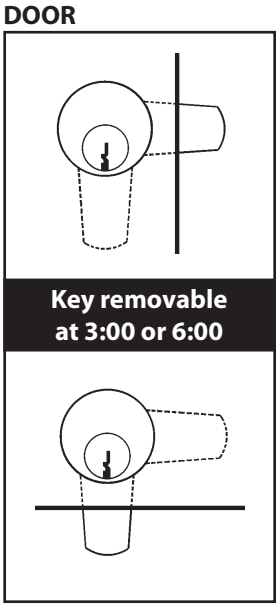

OLYMPUS LOCK, INC.
18424 Highway 99, Lynnwood, WA 98037
206-362-3290 | 800-525-0954 | Fax 206-362-3569
www.olympus-lock.com