SDC SECURITY DOOR CONTROLS
801 Avenida Acaso, Camarillo, CA 93012 • (805) 494-0622 • Fax: (805) 494-8861
www.sdcsecurity.com • E-mail: service@sdcsecurity.com

INSTALLATION INSTRUCTIONS
492 PULL STATION EMERGENCY DOOR RELEASE

INSTALLERS NOTE;

The station is supplied with the glass rod removed. It is recommended that the station be activated and tested prior to installation of the glass rod.

Glass Rod and Hardware are shipped in the station box.




REPLACEMENT OF GLASS ROD;

Use an Allen wrench to open front cover of station. Remove the glass debris from broken rod, then reset T-Handle to the normal position.

To replace Glass Rod, insert one end of Rod under Spring Tab. Then, with one finger lift other end of Spring Tab allowing Glass Rod to slip into place.

TO CLOSE STATION;

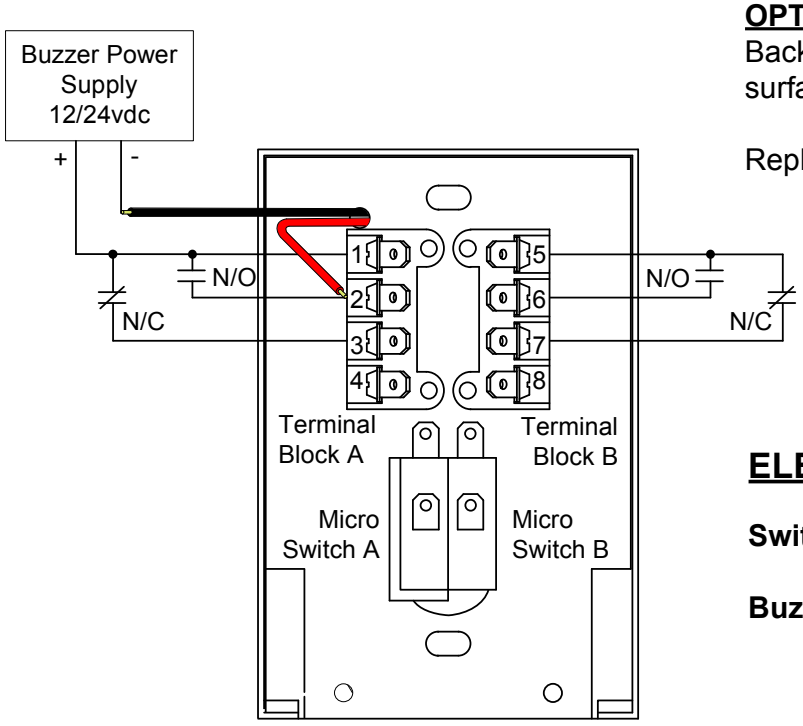

OPTIONAL;

Back box model #492-BB available for surface mount

Replacement Glass Rod #492-GL4

ELECTRICAL SPECIFICATIONS;

Switch Contacts: DPDT 10A @ 125vac

Buzzer: 12/24vdc @ 10/20ma

Any suggestions or comments to this instruction or product are welcome. Please contact us through our website or email engineer@sdcsecurity.com