Waste Bin

KESSEBÖHMER

http://www.cleverstorage.com/technical-support/

Mounting Instruction
Standard Single Pull-Out
Waste Bin
Bottom mounted

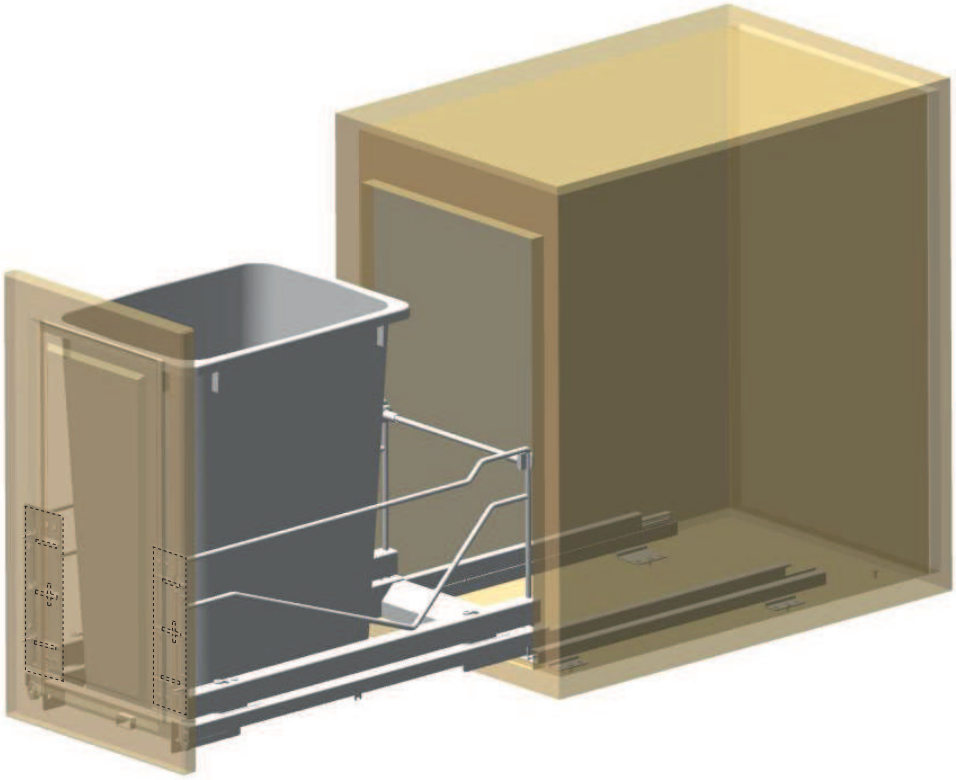

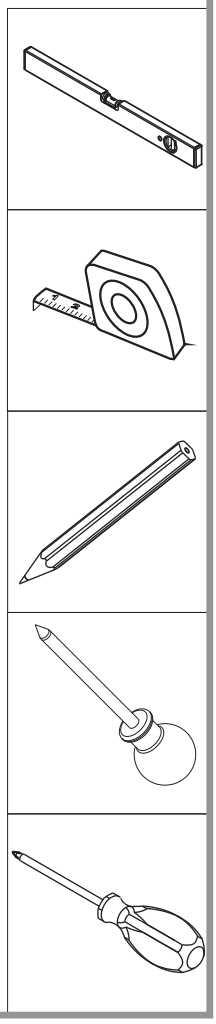

Waste Bin

KESSEBÖHMER

SYMBOLE • SYMBOLS • SYMBOLES • SYMBOLI • SIMBOLOS • SIMBOLOS • MERKIT • SYMBOLER • SYMBOLY • SYMBOLE •

Warnung! • Warning! • Avertissement! • Avvertenza! • ¡Advertencia! • Aviso! • Varoitus! • Advarsel! • Výstraha! • Ostrzezenie! •

Nicht korrekt! • Incorrect! • Incorrect! • Non corretto! • ¡Incorrecto! • Incorrecto! • Väärin! • Ikke korrekt! • Nesprávnê! • Nieprawidlowo!

Korrekt! • Correct! • Correct! • corretto! • ¡Correcto! • Correcto! • Oikein! • Korrekt! • Správnê! • Prawidlowo!!

Fixieren/fixiert! • Secure/Secured! • Fixer/fixé • Fissare/fissato! • ¡Fijar/fijado! • Fixar/fixo! • Kiinnitä/kiinnitetty! • Spænde/sændt •

Lösen/gelöst! • Release/Released! • Détacher/détaché • Allentare/allentato! • ¡Soltar/suelto! • Soltar/solto! • Irroita/irroitettu! • Løsne/løsnet • Povolit/povolento! • Zwolnic/zwolnione!

Keinen Akkuschrauber verwenden! • Do not use a cordless screwdriver! • Ne pas utiliser de tournevis à piles • Non utilizzare un avviatore a batteria! • ¡No itlizar tladro atornillador! • Não usar aparafusadora sem fio! • ÄlÄ käytä akkurruuvinväännintä! • Brug ikke batteriskukruetrækker! • Nepouzivejte akušroubovák! • Nie uzywac wkrtarki akumultorowej! •

PZ2-Schraubendreher verwenden! • Use a PZ2 screwdriver! • Utiliser un tournevis Pz2 • Usare il cacciavite Pz2! • ¡Utilizar un destornialldor Pz2! • Usar chave de parafusos Pz2! • Käytä PZ2-ruuviatalttaa! • Brug PZ2-skruetrækker! • Pouzijte krizový šroubovák Pz2! • Uzyc wkretaka Pz2!

Optionales Element! • Optional element! • Élément optionnel! • Elemento opzionale! • ¡Elemento opcional! • Elemento opcional! • Valinnainen elementti! •Valgfrit element! • Voltitelný prvek! • Element opcjonalny! •

Klick-Geräusch beim Einrasten! • Audible click on engagement! • <<Clic>> lors de l`encliquetage • Quando si innesta si sente un clic! • ¡Ciaondo encaja se oye un clic! • Ruído de clique ao engatar! • Lukittuessa kuuluu klik-ääni! • Klikyd ved monterging! • Slysitelné zacvaknutí! • Trzask przy zaskakiwaniu! •

Alle Maße in mm! • All dimensions in mm! • Toutes les dimensions en mm! • Tutte le dimensioni in mm! • ¡Todas las medidas son en mm! • Todas as medidas em mm! • Kaikki mitat mm! • Alle mal er mm! • Vsechny rozmery v mm! • Wszystkie wymiary w mm! •

Die technische Darstellung und Maßangaben -auch bei Abbildungen und Zeichnungen - sind unverbindlich. Konstruktionsverbesserungen sind vorbehalten! • Technical information and stated dimensions (including in illustrations and drawings) must not be regarded as binding. Design subject to change without notice (in interest of improvement)! • Les illustrations technique et les cotes y compris sur les schémas et les dessins sont non contractuelles. Sous réserve d'améliorations de la construction! • Le rappresentazioni tecniche e le indicazioni delle dimensioni anche nelle figure e nei disegni non sono vincolanti. Con riserva di miglioramenti di progettazione! • Las descripciones técnicas y los datos dimensionales, inclusive los incluidos en fotos y figuras, son meramente orientativos y no vinculantes. ¡Reservado el derecho a mejoras constructivas! • As descrições técnicas e as indicações de medidas também em ilustrações e desenhos não são de natureza imperativa. Salvo melhoramentos de construção! • Tekniset piirrokset ja mitat myös kuvissa ja piirroksissa olevat ovat sitoumuksetta. Oikeus teknisiin parannuksiin pidätetään! • De tekniske fremstillinger og måleangivelser også i figurer og tegninger er vejledende. Forbehold for konstruktionsforbedringer! • Technické znázornìní a rozmìry i na obrázcích a výkresech jsou nezávazné. Konstrukèní zmìny vyhrazeny! • Prezentacje techniczne i dane wymiarowe takze na rysunkach sa niewiazace. Zmiany konstrukcyjne zastrzezone! •

Waste Bin

KESSEBÖHMER

Door drilling position by using the template

1

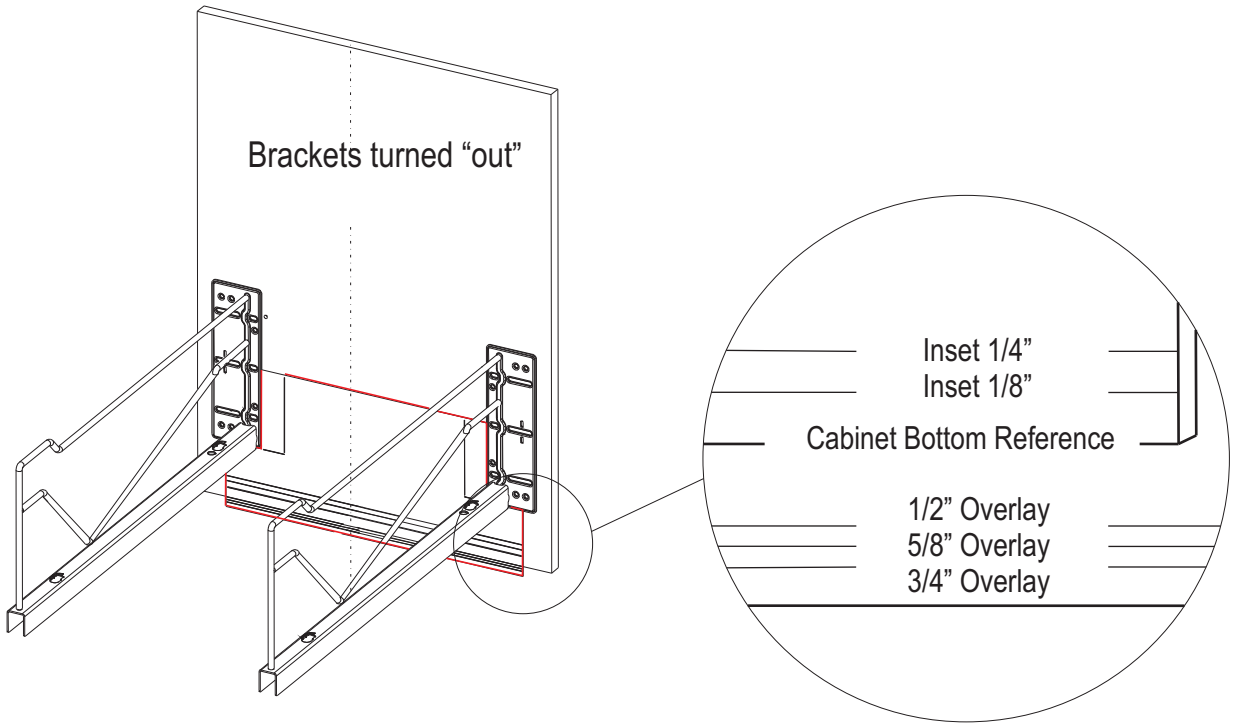

1.1

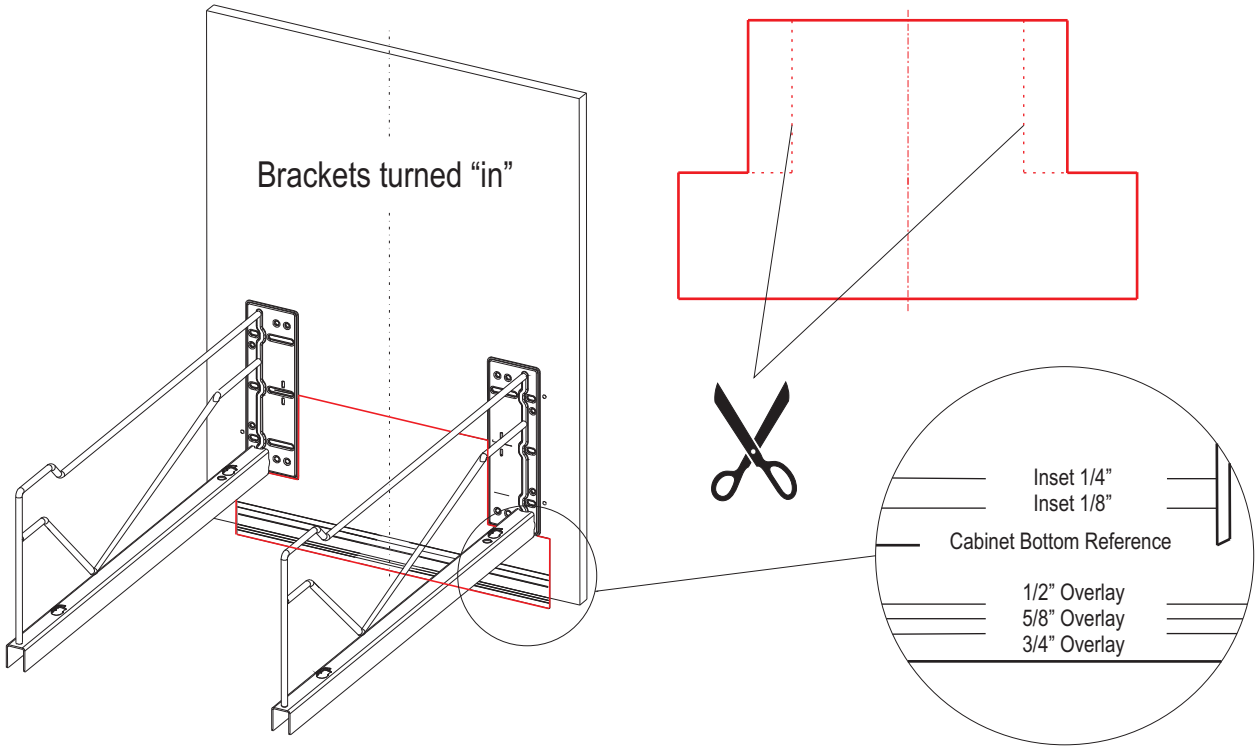

Waste Bin

KESSEBÖHMER

Drilling positions

2 Frameless cabinet

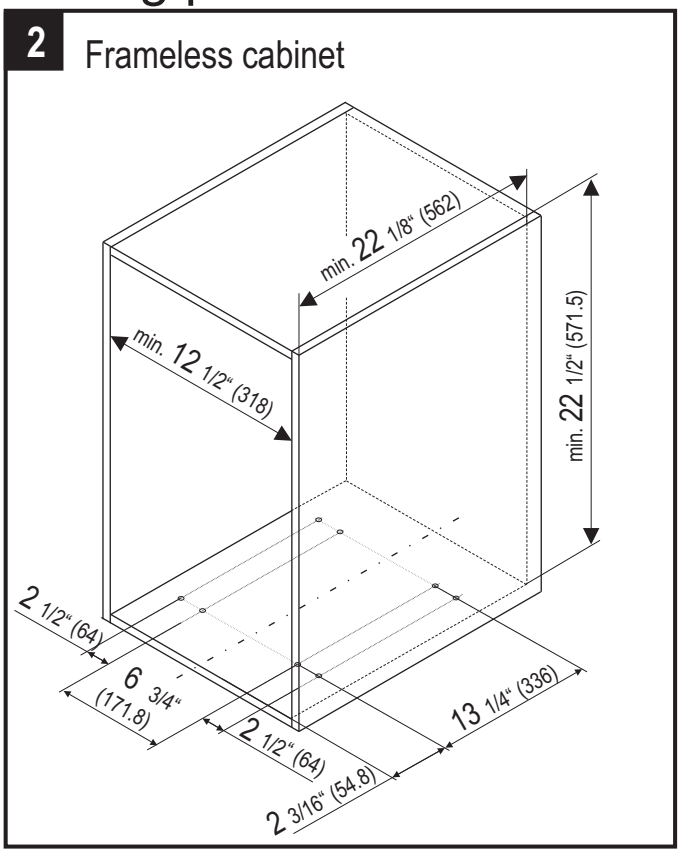

2.1 Framed cabinet with overlay door

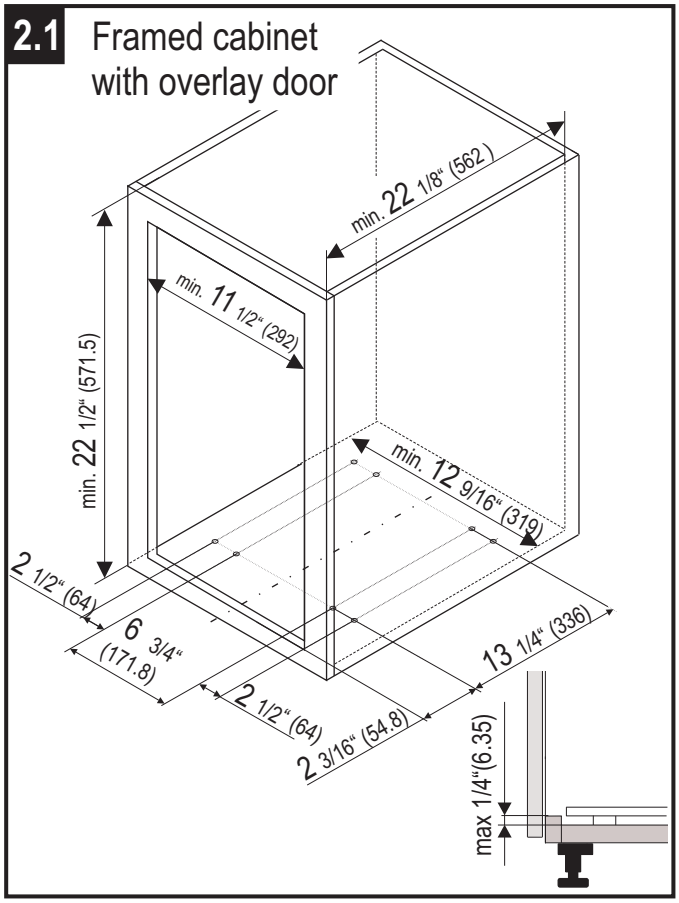

2.2 Framed cabinet with inset door

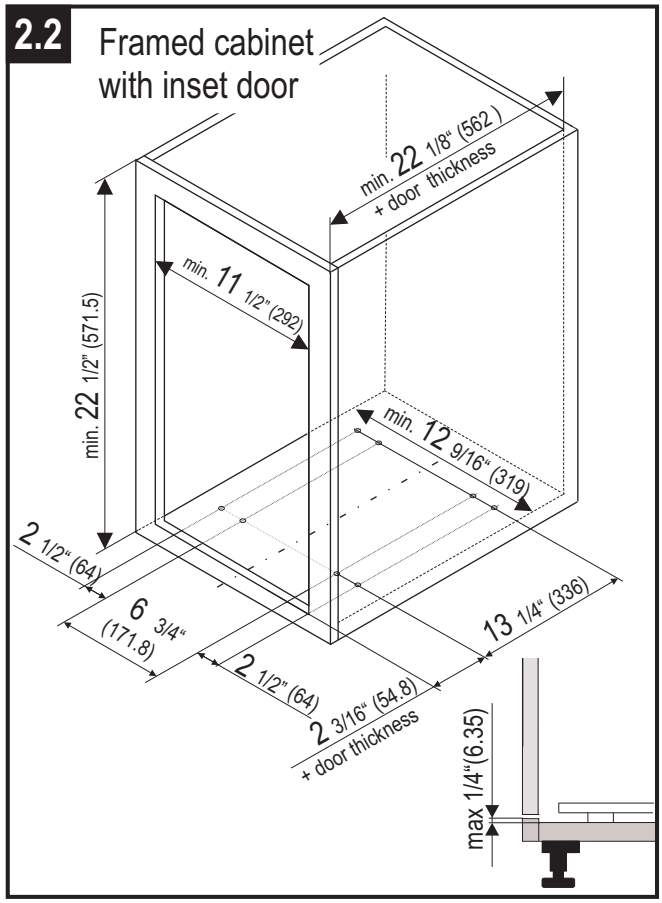

Waste Bin

KESSEBÖHMER

3

Please install screws on both sides of the runner supports at the front and back position!
Failure to install mounting screws on one side could lead to twisting of the runner during operation, causing lower stability and premature wear.

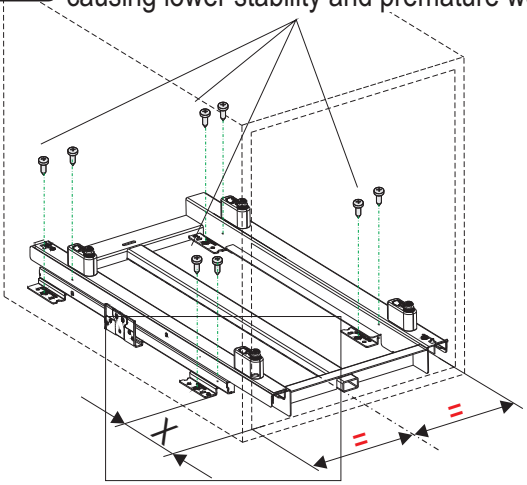

3.1

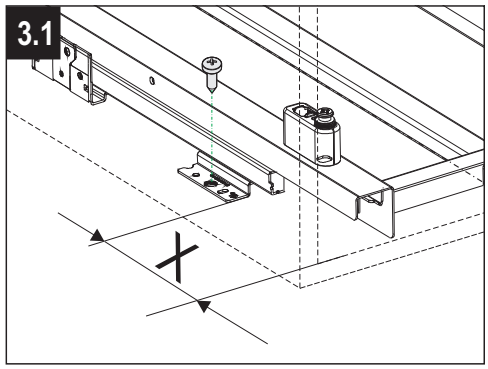

fasteners are not included

3.1a Frameless Door

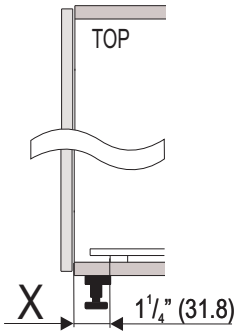

3.1b Faceframe Overlay Door

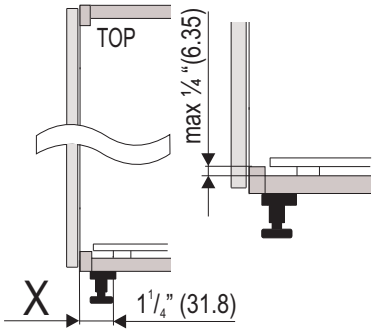

3.1c Faceframe Inset Door

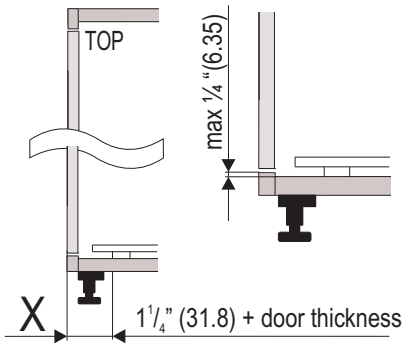

4

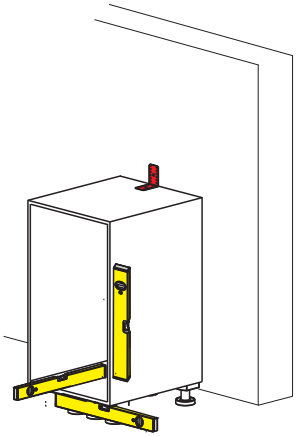

4.1

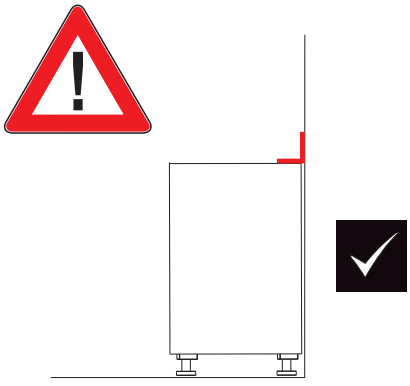

Waste Bin

KESSEBÖHMER

5.1 Brackets turned out

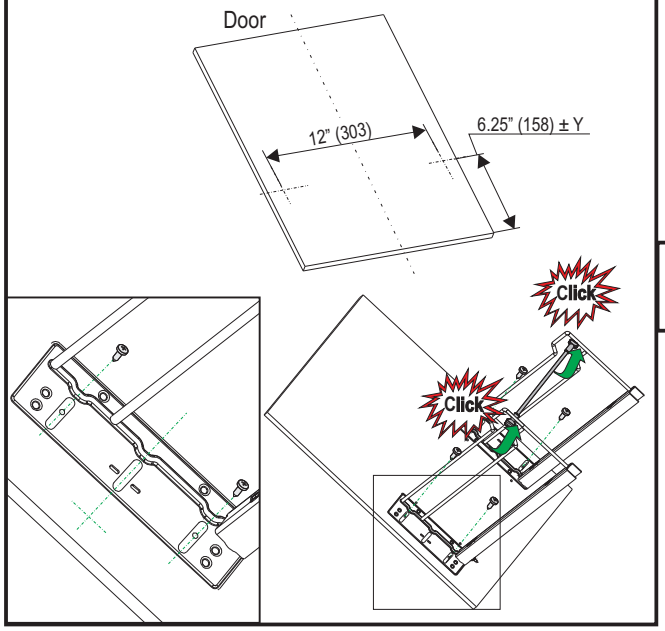

or

5.2 Brackets turned in

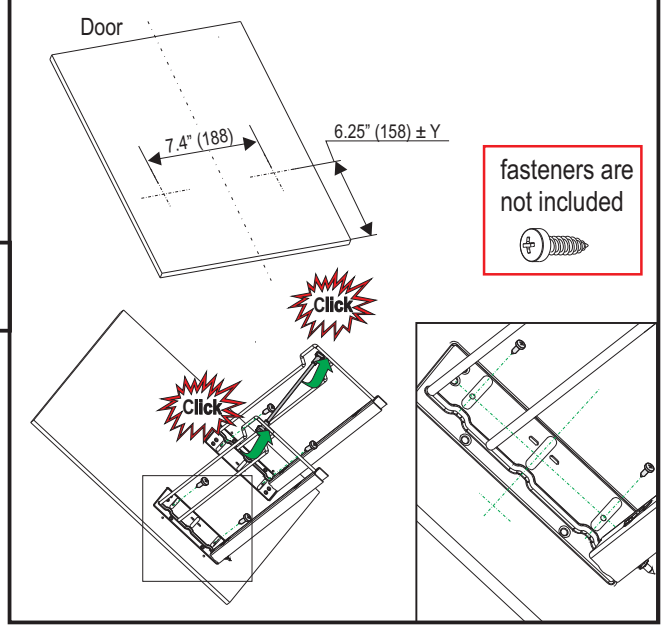

6.1 Frameless Door

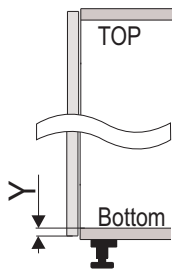

6.2 Faceframe Overlay Door

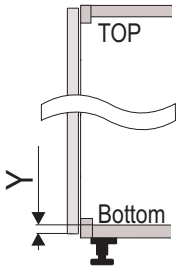

6.3 Faceframe Inset Door

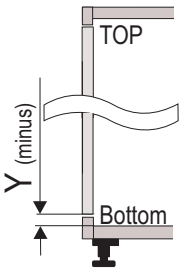

7

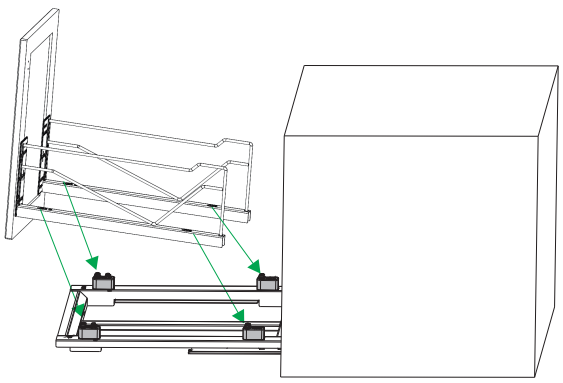

8

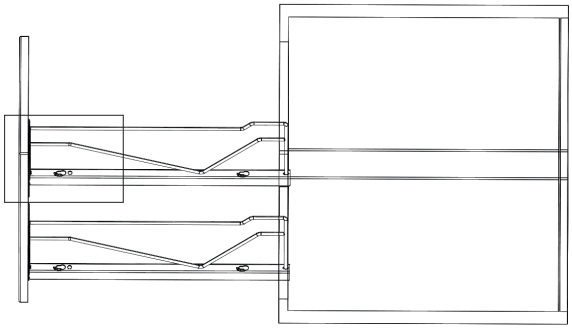

Waste Bin

KESSEBÖHMER

8.1

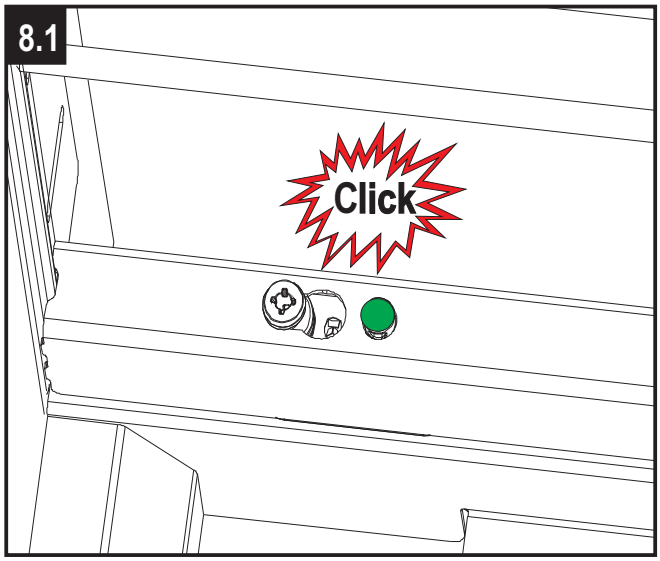

9

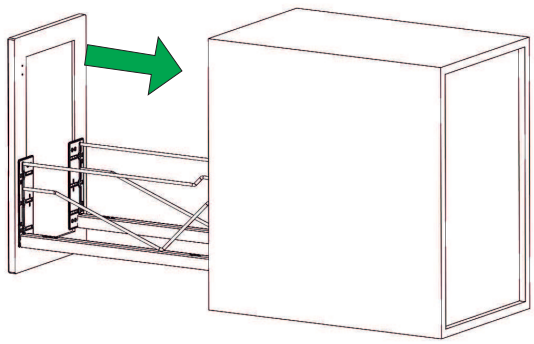

10

Wastebasket standard size (36qt (34l))

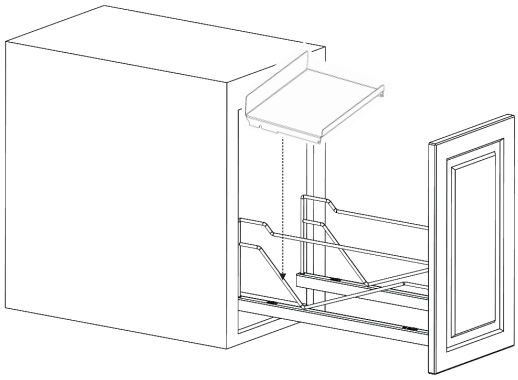

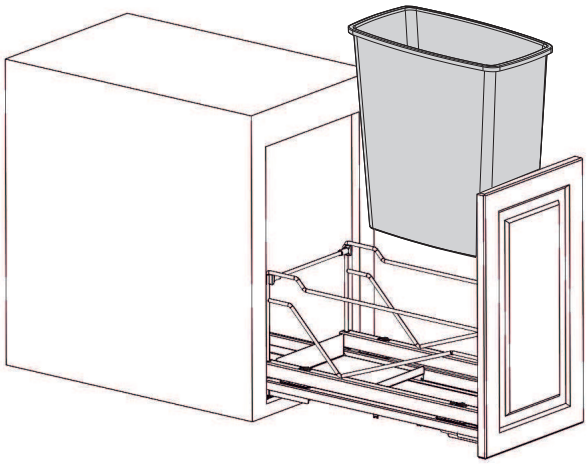

Waste Bin

KESSEBÖHMER

Adjustment Instructions
Standard Single Pull-Out
Waste Bin
Bottom mounted

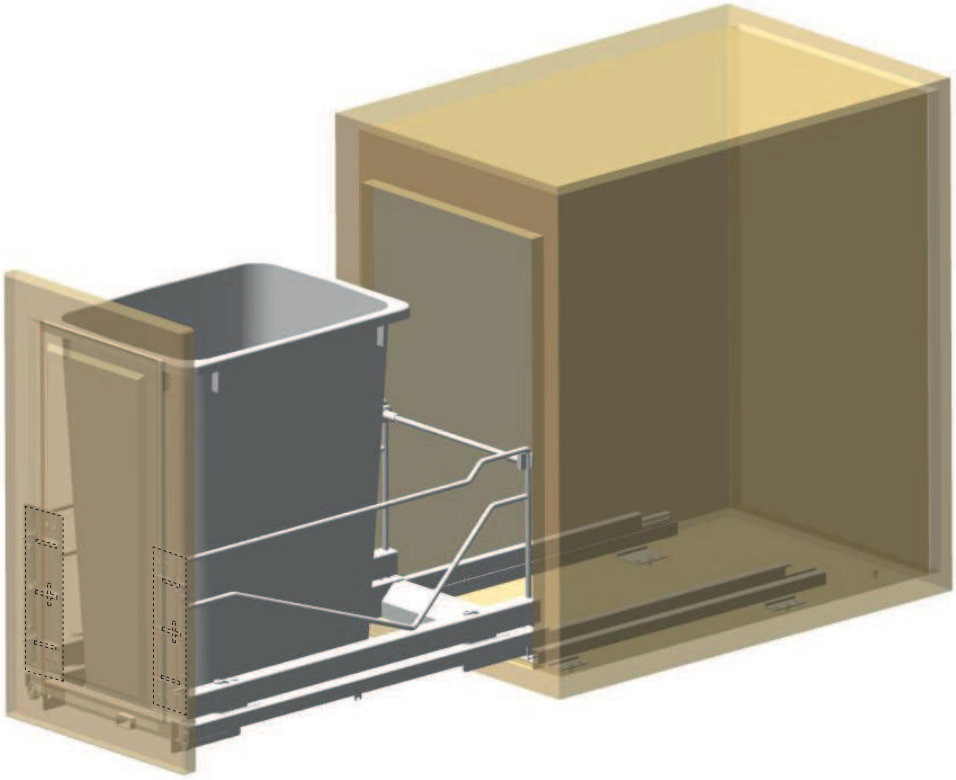

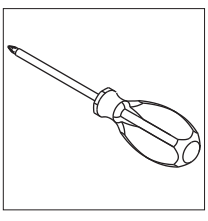

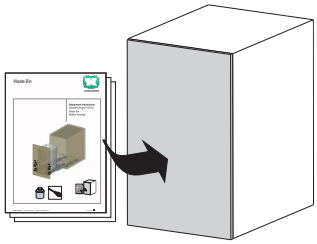

Waste Bin

KESSEBÖHMER

1

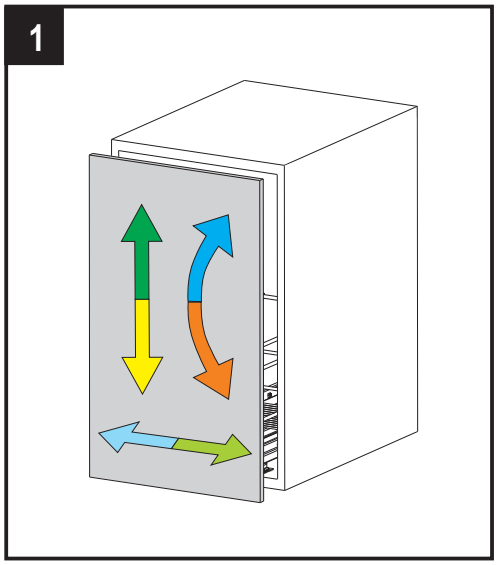

1.1

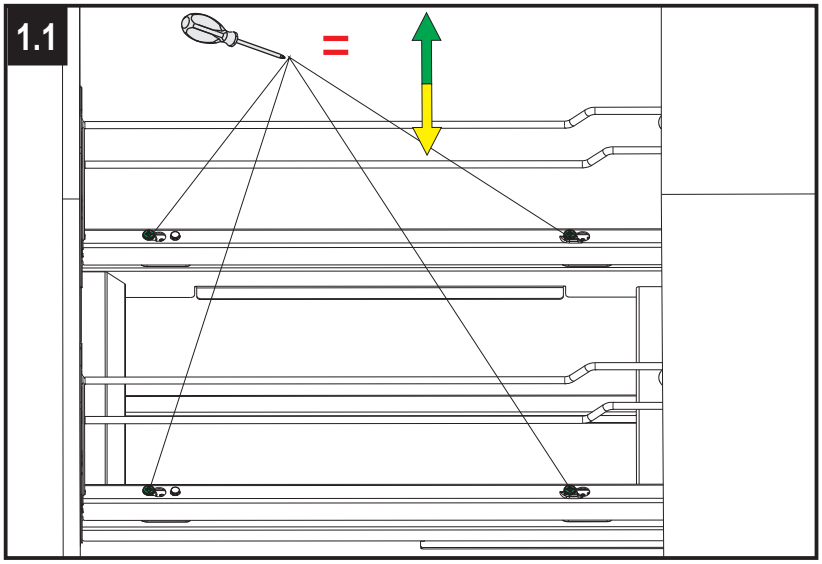

1.2

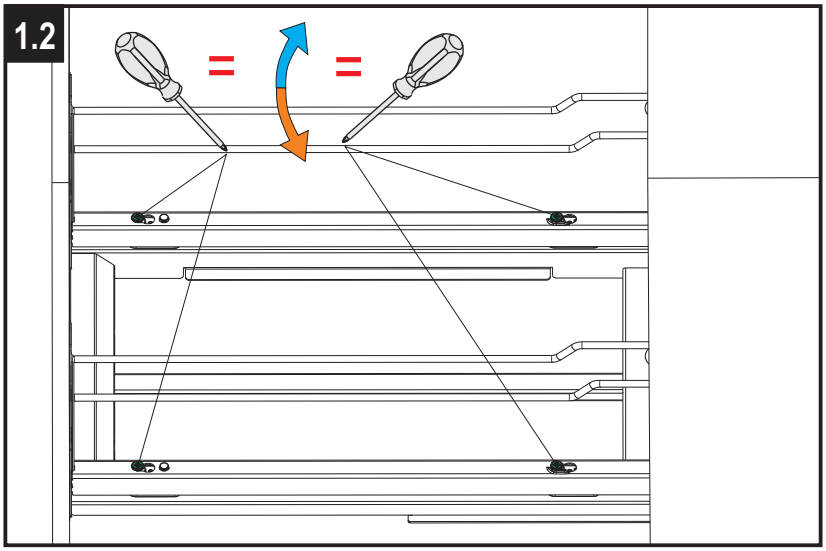
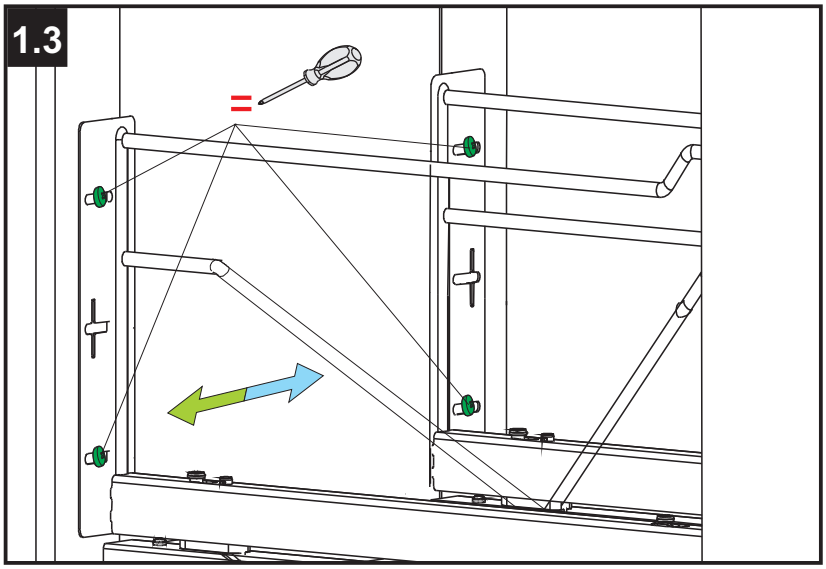
1.3