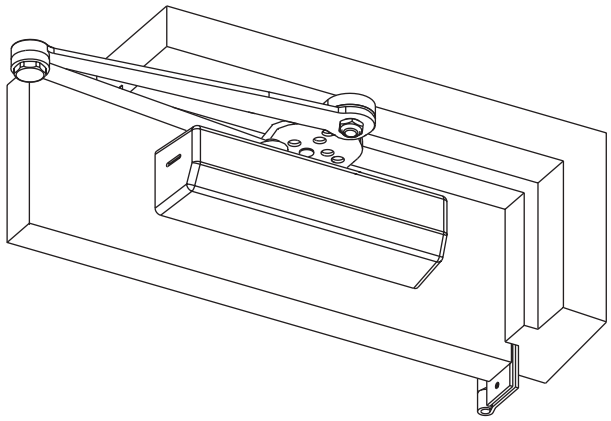



Installation Instructions

Corbin Russwin

Universal Door Closer with A14 Heavy Duty Friction Hold Open Parallel Arm

DC6210 Series
Multi-Sized 1 thru 6

DC6410 Series
Half-Size 1 thru 6

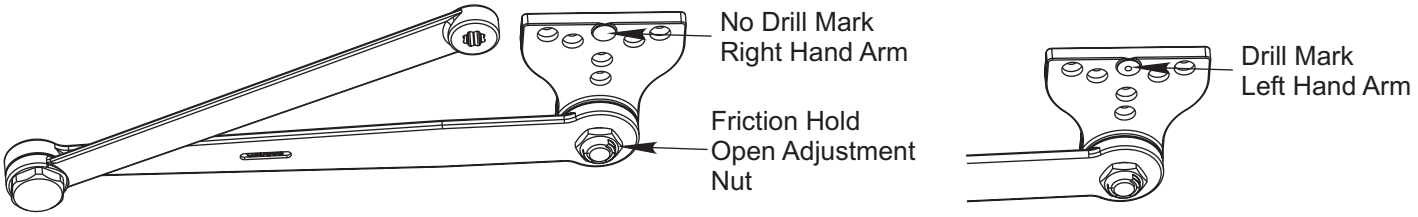

Heavy Duty Friction Hold Open

IMPORTANT:

- An improperly installed or incorrectly adjusted door closer may cause **property damage** or **personal injury;** and will void product warranty.
- To avoid personal injury, **DO NOT DISASSEMBLE THIS DOOR CLOSER BODY.**
- Door closers must be securely fastened to a properly reinforced door and frame with fasteners provided.
- An auxiliary door stop, BY OTHERS, is required for this Installation
- Arm is handed and must match hand of door.

BEFORE INSTALLING:




- The Americans with Disabilities Act (ADA) requires that doors having door closers have an opening force not to exceed 5 lbf.
- The door closer's power size adjustment feature may require adjustment to its lowest setting to comply with ADA opening force guidelines.
- ADA compliant closers are: DC6210 & DC6411.

Size of Door & Door Closer					
Type of Installation	Interior	Exterior In-swinging	Exterior Out -swinging	Recommended Closer Size	**Max. Opening Force lbs/f
Parallel Arm	2'4"	———	———	1	8
	2'6"	———	———	2	14
	3'0"	———	2'6"	3	16
	3'6"	———	3'0"	4	22
	4'0"	———	*3'6"	5	24
	4'6"	———	*4'0"	6	26

*DC6410 Series Recommended


**NOTE: These forces are for standard templating with bearing type hinges and do not account for pressure differentials and draft. Half size closers DC6410 are capable of being adjusted to next higher setting.

TO DETERMINE HAND OF YOUR DOOR:

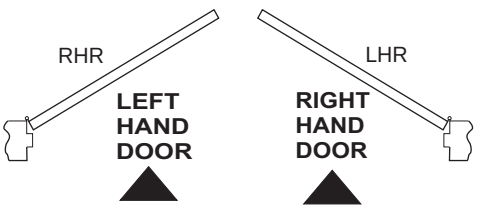


Installation Instructions

Parallel Arm Application
DC6210 / DC6410 Series x Heavy Duty Friction Hold Open Arm Option.

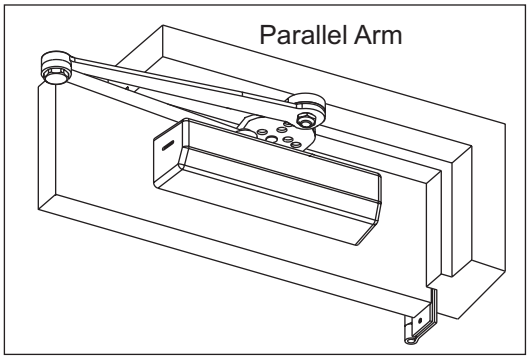

1. Template


Mark Door and Jamb (for closer bracket and arm bracket)
Use template and dimensions charted.

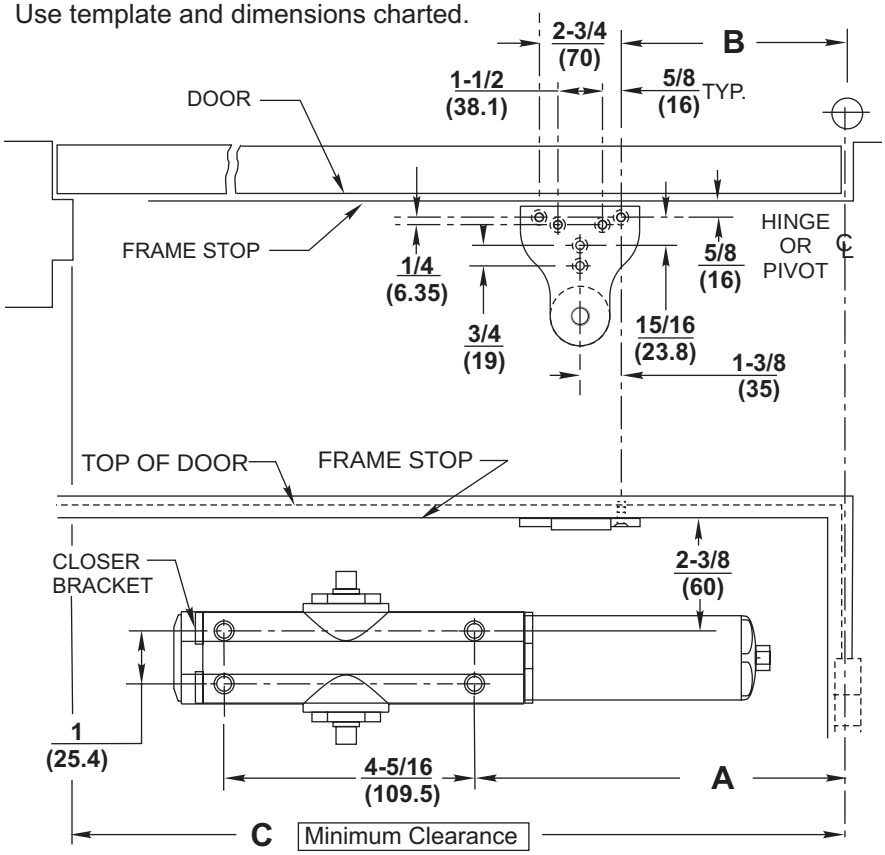


MAXIMUM OPENING	A	B	C	Application
90°	12-3/4 (324 mm)	11-5/8 (295 mm)	27-3/4" (705 mm)	NON A.D.A.
180°	8-11/16 (221 mm)	7-9/16 (192 mm)	23-5/8" (600 mm)	

NOTES:

- Check hand of door, see page 1.
- Right Hand Application Shown. Left Hand Opposite.
- Dimensions given in inches (mm). Do Not Scale Drawing.
- Closer must be installed in a true horizontal plane to ensure proper closer performance.
- Friction Hold Open arms are handed and not reversible. See handing marks on soffit plate.

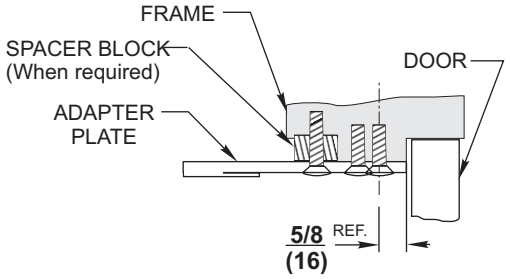

M85 OPTION 447F14
ANGLE SUPPORT BRACKET

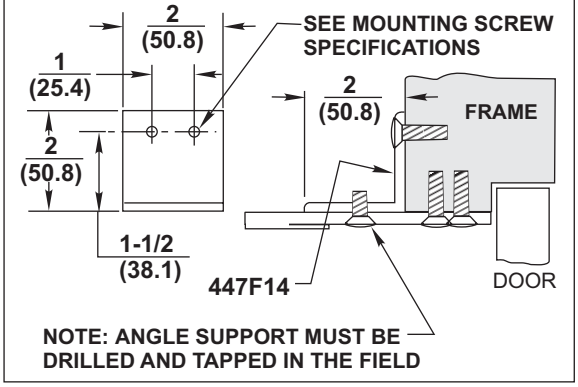


NOTE: ANGLE SUPPORT MUST BE DRILLED AND TAPPED IN THE FIELD

MOUNTING SCREW SPECIFICATIONS
ARM AND CLOSER BRACKET

1/4-20 oval head machine screw or 1/4-14 self-drilling screw. 3/16 (4.8) diameter pilot hole required for Wood Applications.


or

Option M54: Sex nuts, furnished when ordered

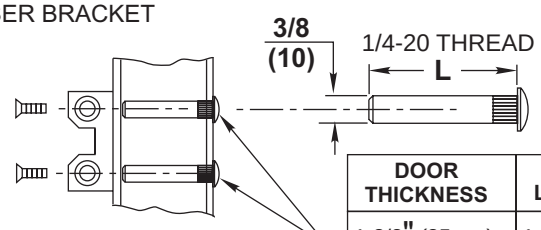


DOOR THICKNESS	SEX NUT LENGTH "L"
1-3/8" (35mm)	1-9/32" (33mm)
1-3/4" (44mm) & OVER	1-21/32" (42mm)

2. Install Closer Bracket

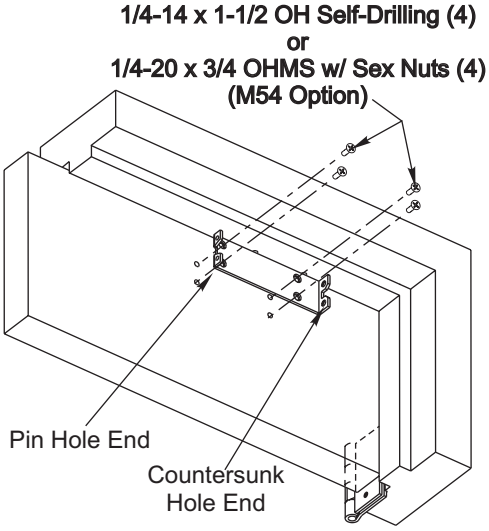

3. Mount Closer Body to Closer Bracket

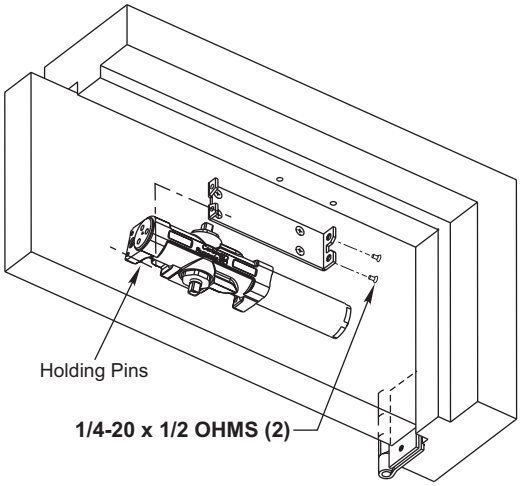



4. Fasten soffit plate to frame soffit (under side of frame).

5. Connect Arm To Closer


Using hex wrench provided close, (turn clockwise) CLOSING SPEED VALVE (see page 4 for location on closer). **DO NOT OVER TIGHTEN.**

- Open door to approximately 60°
- Using wrench on underside of spindle, rotate spindle approximately 135° toward hinge edge of door.
- Install arm on spindle at an approximate 90° angle to door.
- Reopen CLOSING SPEED VALVE.
- Install and tighten arm washer and screw

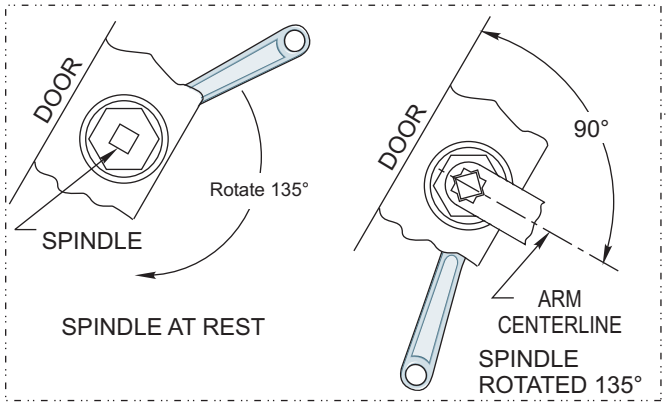


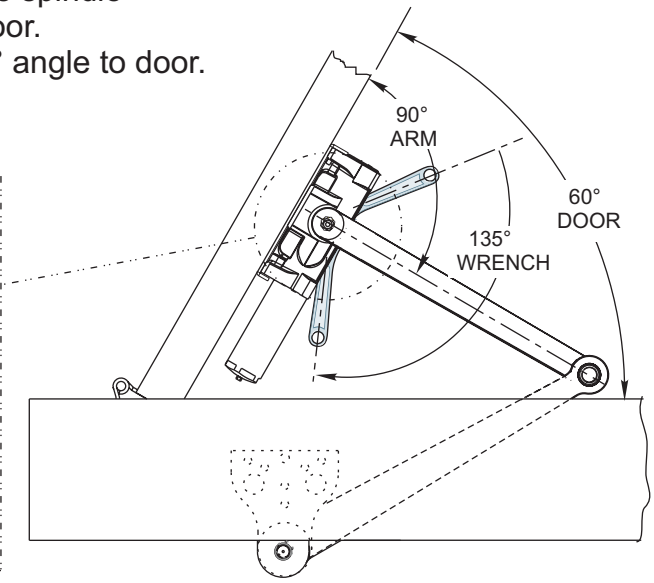

ALL ANGLES SHOWN ARE APPROXIMATE

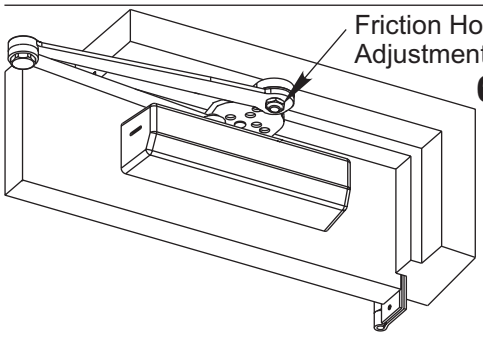

6. Adjust Hold Open Position

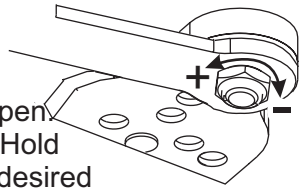

Open the door to desired degree of hold open. (If door does not open far enough, loosen Hold Open Adjustment Nut.) Place door at the desired degree for hold open and tighten the Hold Open Adjustment Nut.

Rotation:

Counter-clockwise will increase (+) angle.
Clockwise will decrease (-) angle.

- Pushing door beyond the set hold open point may cause damage to product.


Spring Power Adjustment


Locate spring power adjuster from Illustration below
DC6400 Half Size Adjustment as Desired
DC6200 Size 1 thru 6 Adjustment See Chart


DC6200 SPRING POWER ADJUSTMENT CHART

- All DC6200 closers are factory set at an approximate **Size 3.**
- Adjust closer as necessary for door size using this chart.
- Readjustment may be required to suit prevailing conditions.

Size of Door			No. of Full (360°) Turns Clockwise of Power Adjuster	Equivalent Closer Size (Approx.)
Interior	Exterior In Swing	Exterior Out Swing		
2'4" (712)	2'6" (764)		4	2
2'6" (764)	3'0" (915)		8	3
3'0" (915)	3'6" (1067)	2'6" (764)	12	4
3'6" (1067)	4'0" (1219)	3'0" (915)	16	5

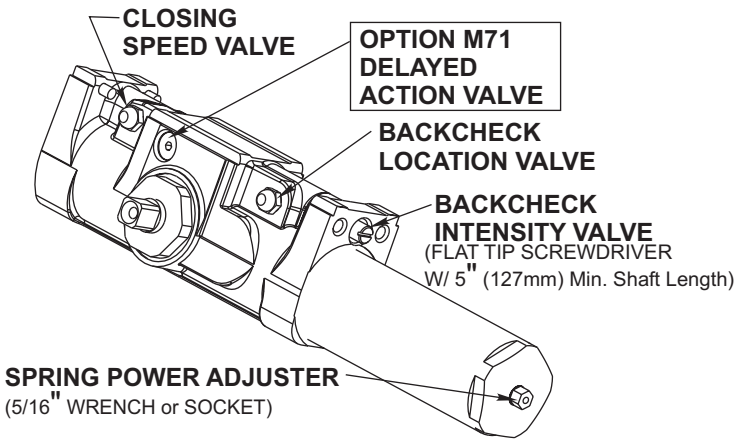

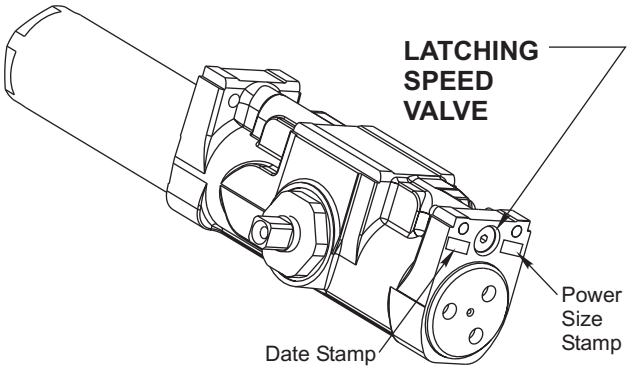

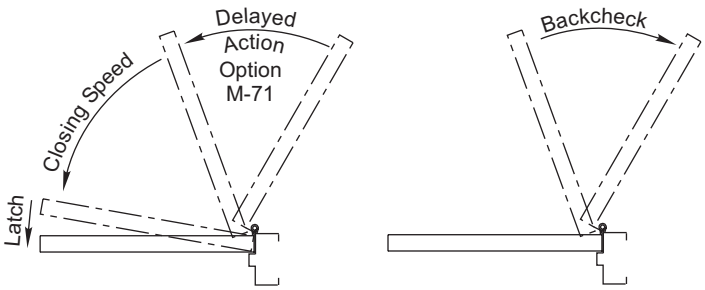

Backcheck Location Valve (3/32 Allen Wrench Provided)

Valve is closed, as shipped, from factory. To increase the degree of door opening where backcheck takes effect, turn valve counter-clockwise.

VALVE	OCCURS AT
CLOSED	65°-70°
OPEN	95°-100°

Degrees shown are approximate

Backcheck Intensity Valve

Turn valve COUNTER-CLOCKWISE to reduce backcheck or CLOCKWISE to increase backcheck. (Backcheck should be set to give a soft cushioning action, not a sudden stop).

Closing Speed Valve (3/32 Allen Wrench Provided)


To adjust speed of door closing from fully open to a position 2" to 5" from closed, turn Closing Speed Valve CLOCKWISE to SLOW closing, COUNTER-CLOCKWISE to SPEED closing.

Latching Speed Valve (3/32 Allen Wrench Provided)


After closing speed has been obtained, turn latching speed valve CLOCKWISE to SLOW latching or COUNTER-CLOCKWISE to SPEED latching for last 2" to 5" of door travel.

NOTE: Set combination of CLOSING and LATCHING speeds to between 3 and 7 seconds Use of door by handicapped, elderly or small children may require even greater closing time.

Installing Cover



Slip cover over closer. Hold tightly against closer mounting surface. Secure on each side with 6-32 x 1/4" PBHMS screws.

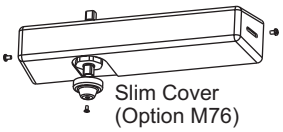

Slim Cover Option M76 only
Position spindle cap over unused spindle and secure with 10-32 x 3/8 PTHMS screw.