
Corbin Russwin®

ASSA ABLOY

Installation Instructions

As Easy As A–B–C→G

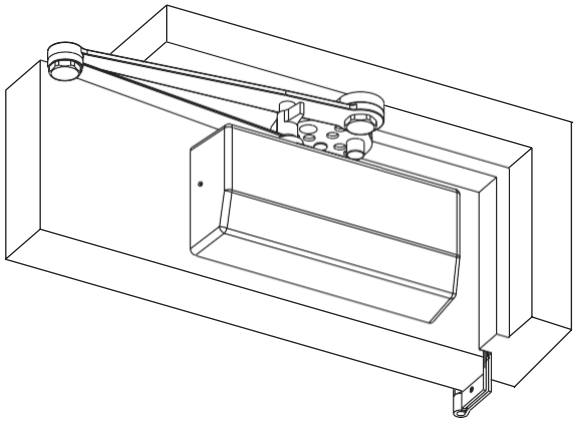


DC8210 Series

Multi-Sized1 thru 6


Universal Door Closers
with Heavy Duty Parallel Arms:
A2 - H.O. without Backstop
A4 - N.H.O. with Backstop
A5 - H.O. with Backstop

A2 Arm

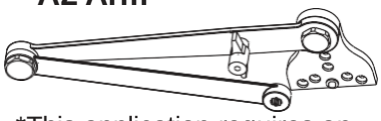


*This application requires an auxiliary door stop "by others"
Hold Open Only
(No Stop Feature)

A4 Arm

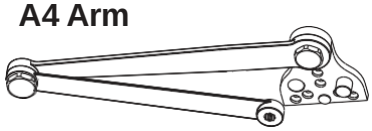

Non-Hold Open with Backstop

A5 Arm

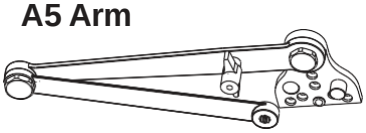


Hold Open with Backstop

IMPORTANT:

- An improperly installed or incorrectly adjusted door closer may cause **property damage** or **personal injury;** and will void product warranty.
- To avoid personal injury, **DO NOT DISASSEMBLE THIS DOOR CLOSER BODY.**
- Door closers must be securely fastened to a properly reinforced door and frame with fasteners provided.
- Door closers witha HOLD OPEN ARM are not permitted to be installed in fire door assemblies.
- Door and frame must be specifically templated for 85°, 90°, 100° or 110° door swing.
- Doors should be hung on ball bearing or anti-friction hinges/pivots.
- Door closer must not be installed on the exterior of a door in an exterior wall of a building.


Size of Door & Door Closer					
Type of Installation	**Interior**	**Exterior In -swinging**	**Exterior Out -swinging**	**Recommended Closer Size**	****Max. Opening Force lbs/f**
Parallel Arm	2'4"	———	———	1	8
	2'6"	———	———	2	14
	3'0"	———	2'6"	3	16
	3'6"	———	3'0"	4	22
	4'0"	———	3'6"	5	24
	4'6"	———	4'0"	6	26

TO DETERMINE HAND OF YOUR DOOR:

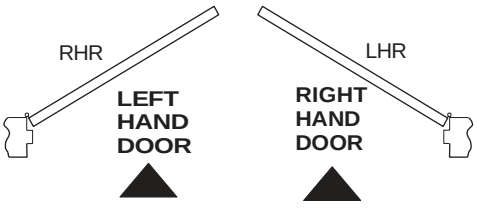


****NOTE: These forces are for standard templating with bearing type hinges and do not account for pressure differentials and draft.**

DC8210xA2, A4, or A5 HD Parallel Arm Installation Instructions

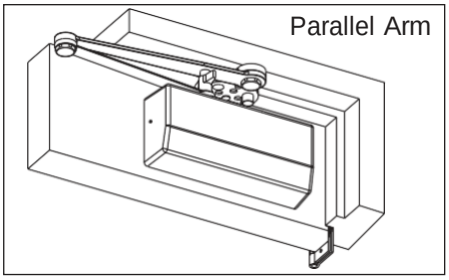


A Template

Mark Door and Jamb (for QUIK-INSTALL® bracket and arm bracket)
Use template and dimensions charted.

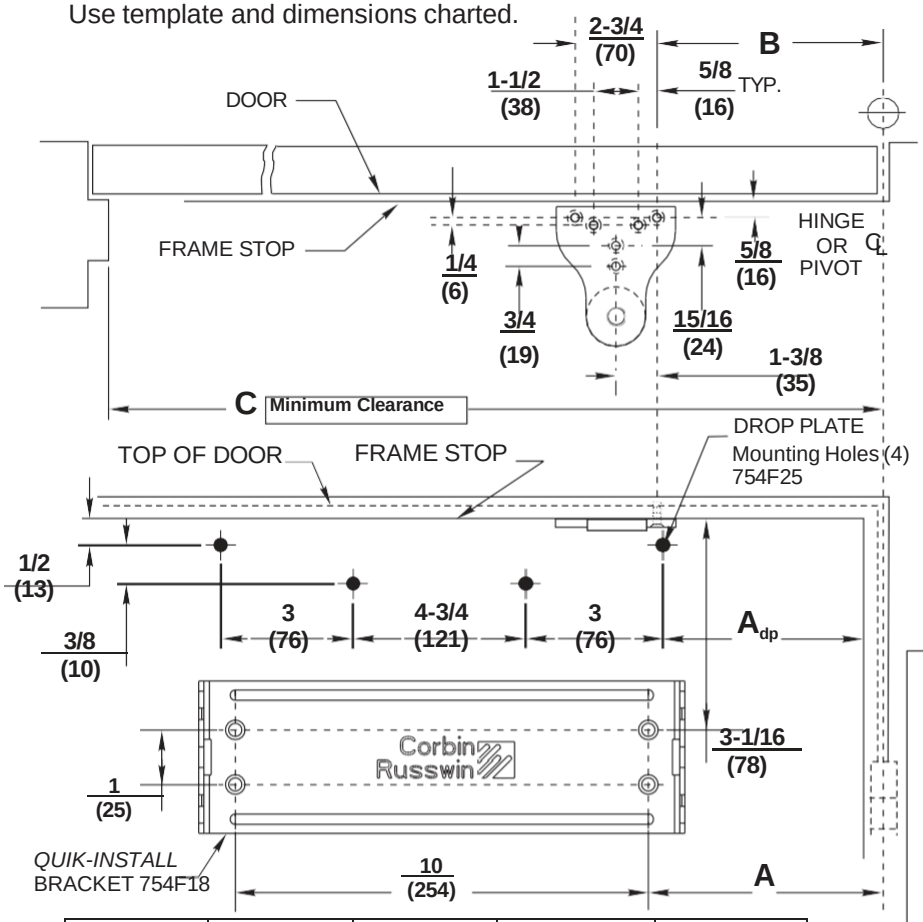


NOTES:

- Check hand of door, see page 1.
- Right Hand Application Shown Left Hand Opposite
- Dimensions given in inches (mm). Do Not Scale Drawing.
- Closer must be installed in a true horizontal plane to ensure proper closer performance.

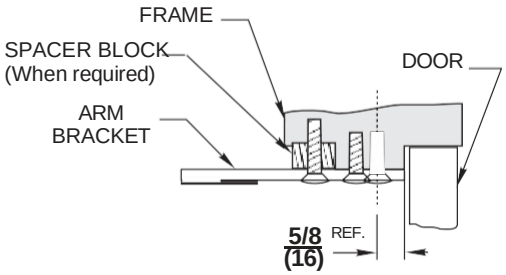

OPENING MAXIMUM	A Quick Install Bracket	Adp Drop Plate	B Soffit Bracket	C MINIMUM Clearance
85°	8-3/4 (222)	8-3/8 (213)	12-7/16(316)	28-7/8 (733)
90°	7-3/4 (197)	7-3/8 (187)	11-1/2 (292)	28 (711)
100°	6-1/4 (159)	5-7/8 (149)	10 (254)	26-3/8 (670)
110°	4-7/8 (124)	4-1/2 (114)	8-5/8 (219)	25-1/8 (638)

M85 OPTION 447F14 ANGLE SUPPORT BRACKET

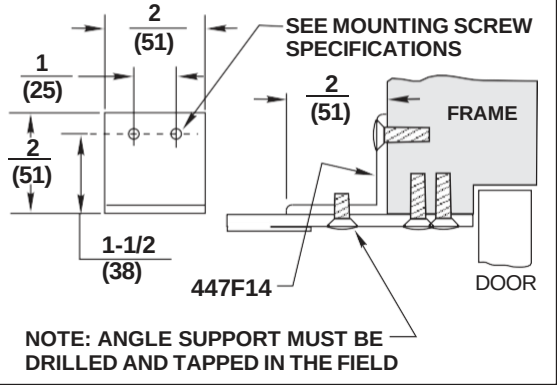

NOTE: ANGLE SUPPORT MUST BE DRILLED AND TAPPED IN THE FIELD


MOUNTING SCREW SPECIFICATIONS

ARM AND *QUIK-INSTALL* BRACKET

#12-14 self-drilling screw. 1/8 (3) diameter pilot hole required for Wood Applications.

or

Sex nuts, furnished when ordered

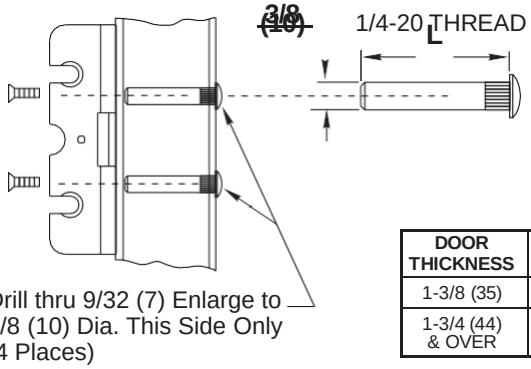

DOOR THICKNESS	SEX NUT LENGTH "L"
1-3/8 (35)	1-9/32 (33)
1-3/4 (44) & OVER	1-21/32 (42)


Corbin Russwin®
ASSA ABLOY

DC8210xA2, A4, or A5 HD Parallel Arm Installation Instructions

A B C D E F G


Previous Page (2) This Page

B Mount QUIK-INSTALL® Bracket

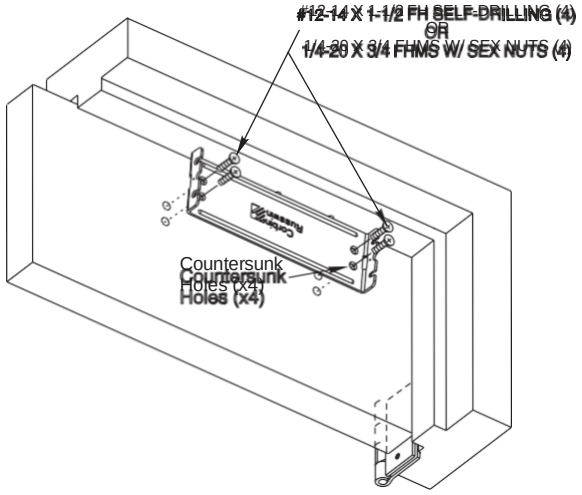

C Mount Closer Body to *QUIK-INSTALL* Bracket


- Start the four mounting screws into the four closer mounting holes .
- Place the closer onto the *QUIK-INSTALL* bracket with the four mounting screws inserted into the four *QUIK-INSTALL* bracket slots.
- Tighten the four mounting screws to fasten the closer body to the *QUIK-INSTALL* bracket.

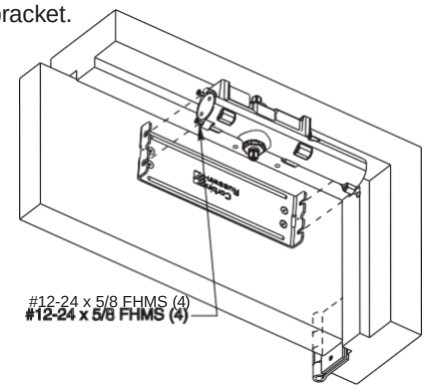


D A4 & A5 Backstop Arms Only

Arms shipped for Left Hand Door. To change handing:

Remove Stop from Soffit with 5/32 Allen Wrench. Remove Filler Plug. Switch Stop and Filler Plug to opposite sides. Insert Stop and tighten. Push Filler Plug into hole.

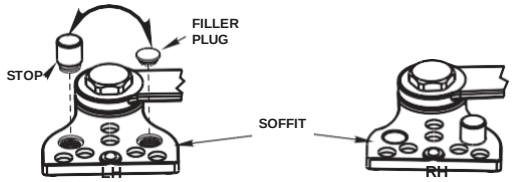

E Mount Arm to Door Frame

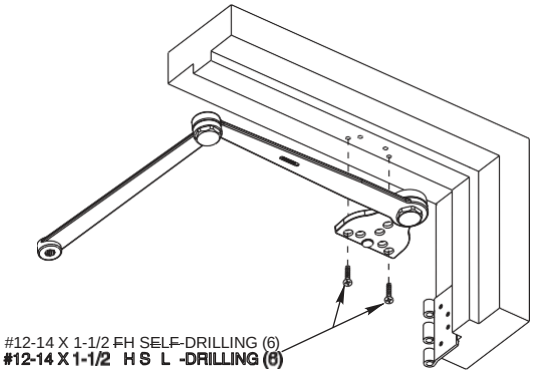



F Connect Arm To Closer

Using 1/8 hex wrench provided, close (turn clockwise) CLOSING SPEED VALVE (see page 4 for location on closer). **DO NOT OVER TIGHTEN.**

- Open door to approximately 60°
- Using wrench on underside of spindle, rotate spindle approximately 135° toward hinge edge of door.
- Install arm on spindle at an approximate 90° angle to door.
- Reopen CLOSING SPEED VALVE.
- Install and tighten 5/16 Hex Head Arm Washer and Screw Assembly.

ALL ANGLES SHOWN ARE APPROXIMATE

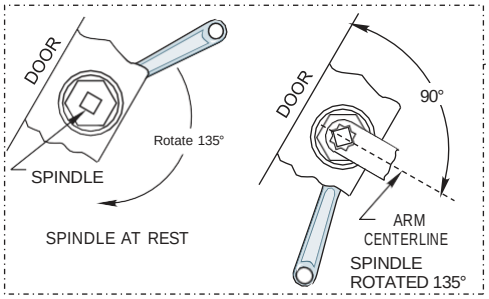

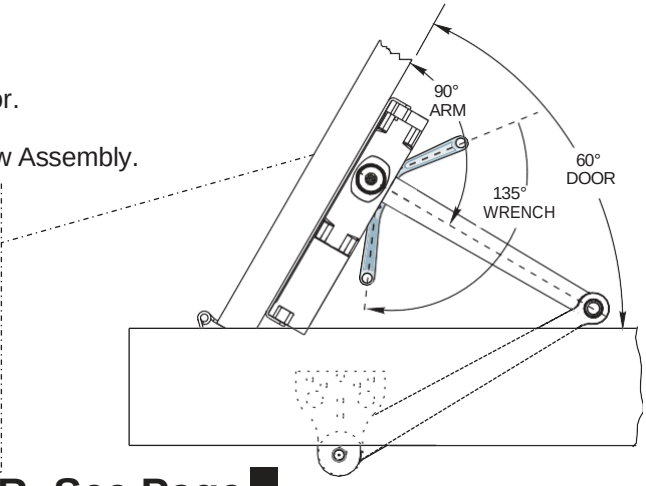

G ADJUST CLOSER: See Page 4

Corbin Russwin®

ASSA ABLOY

DC8210xA2, A4, or A5 HD Parallel Arm Installation Instructions

Spring Power Adjustment


Locate spring power adjuster from Illustration below


DC8200 Size 1 thru 6 Adjustment See Chart

Size of Door			Spring Power Adjustment No. Full Turns Clockwise	Equivalent Closer Size (Approx.)
Interior	Exterior In Swing	Exterior Out Swing		
2' 4" (712)	2'6" (764)	——	2-7	3
2' 6" (764)	3'0" (915)	——	7-11	4
3' 0" (915)	3'6" (1067)	2'6" (764)	11-15	5
3' 6" (1067)	4'0" (1219)	3'0" (915)	15-17	6

DC8200 SPRING POWER ADJUSTMENT CHART

- All DC8200 closers are factory set at an approximate **Size 3.**
- Adjust closer as necessary for door size using this chart.
- Readjustment may be required to suit prevailing conditions.

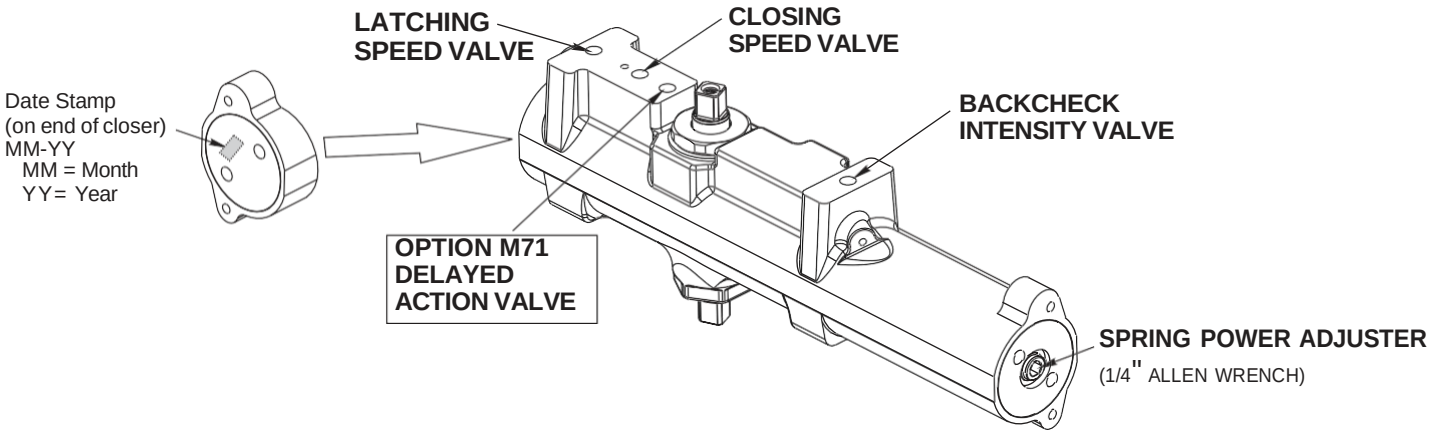

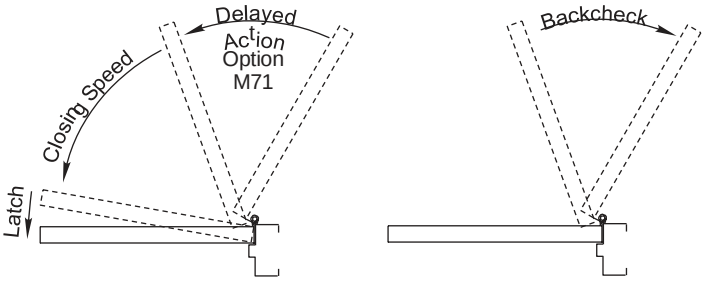

Closing Speed Valve (1/8 Allen Wrench Provided)

To adjust speed of door closing from fully open to a position 2" to 5" from closed, turn Closing Speed Valve CLOCKWISE to SLOW closing, COUNTER-CLOCKWISE to SPEED closing.

Latching Speed Valve (1/8 Allen Wrench Provided)

After closing speed has been obtained, turn latching speed valve CLOCKWISE to SLOW latching or COUNTER-CLOCKWISE to SPEED latching for last 2" to 5" of door travel.

NOTE: Set combination of CLOSING and LATCHING speeds to between3 and 7 seconds Use of door by handicapped, elderly or small children may require even greater closing time.

Delayed Action Valve (1/8 Allen Wrench Provided)


Turn valve CLOCKWISE to SLOW closing, COUNTER-CLOCKWISE to SPEED closing. Delayed action may be adjusted from 20 seconds to 90 seconds, depending on degree of door swing. Delay occurs at the beginning of the door closing cycle from fully open down to 70°, where the closing speed valve then begins its control.

Backcheck Intensity Valve

Turn valve COUNTER-CLOCKWISE to reduce backcheck or CLOCKWISE to increase backcheck. (Backcheck should be set to give a soft cushioning action, not a sudden stop.)


Installing Cover

- Slip cover over closer.
- Hold tightly against QUIK-INSTALL® Bracket surface.
- Secure on each side with 6-32 x 1/4" PBHMS screws.

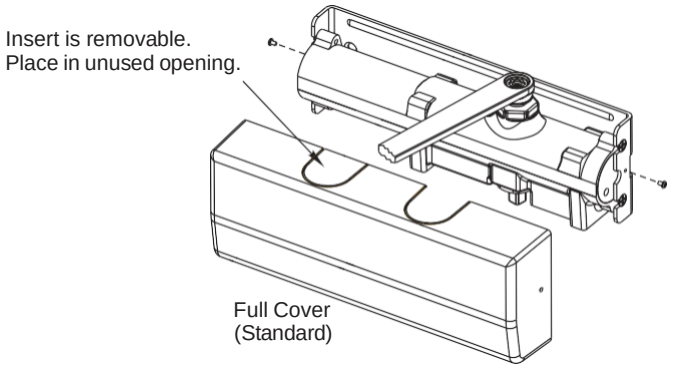

Hold Open Operation (A2 and A5 Arms only)

A quarter turn of the tee handle in either direction engages or disengages the hold open feature.

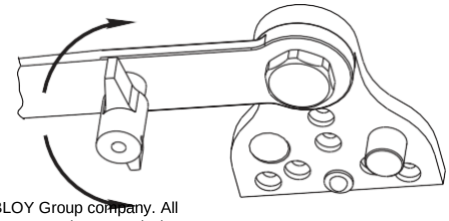

Corbin Russwin®
ASSA ABLOY

80-9380-8001-152 **Rev. 07/09**

Copyright © 2006, 2009, Corbin Russwin, Inc., an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Corbin Russwin, Inc. is prohibited.

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.