Installation and Wiring Instructions for 58- and 12-58- Prefix (Electric Dogging) 80 Series Exit Device to ElectroLynx® Connector System

SARGENT®

ASSA ABLOY

Hardwiring Made Easy®

For assistance, contact SARGENT at
800-810-WIRE (9473) or www.sargentlock.com


ASSA ABLOY, the global leader in door opening solutions

A. Function

When the 58-80 series exit device is energized and the rail is depressed, it will continuously hold the push rail down and latch in an unlocked (dogged) position. When the device is de-energized (or power is interrupted), the latch will extend.

B. Important

1. **Caution:** Disconnect all input power before beginning installation to prevent electrical shock and equipment damage.
2. Installer must be a trained, experienced service person.
3. All wiring must comply with applicable local electrical codes, ordinances and regulations.

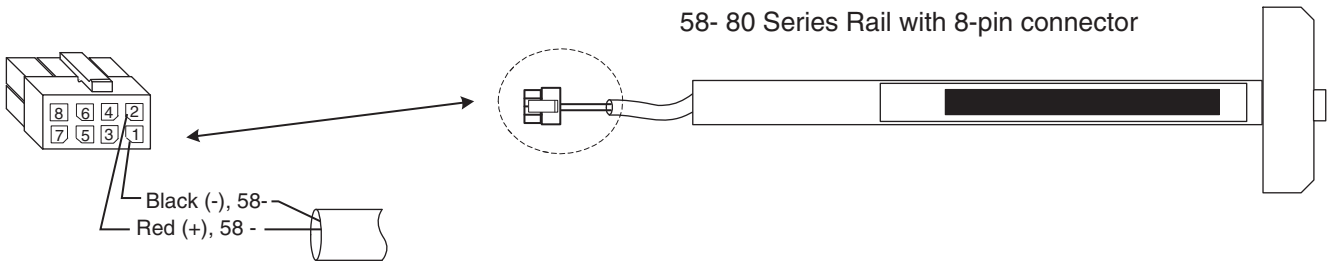


C. ElectroLynx Connector System Notes:

The system is designed to be installation friendly with quick connectors from the electric hinge through the door to the rail. The only wiring required is to the loose wires on the pigtail harness assembly on the frame side of the electric hinge.

IMPORTANT:

The plug and receptacle connectors are designed to mate and lock together as shown in the figure. Plug the connectors into each other with the locking mechanism aligned as indicated.

Do NOT force connectors on any other way.

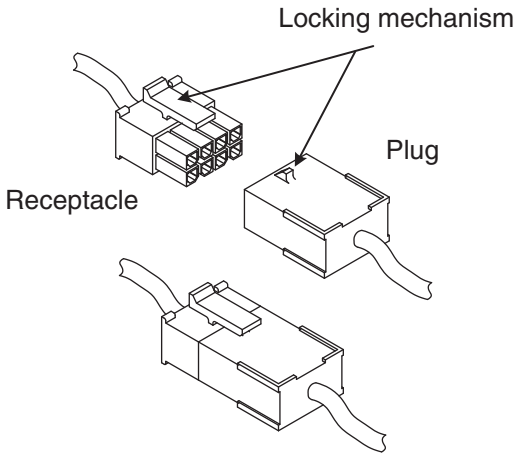


Copyright © 2004, 2008, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.

D. Installation Notes

1. With new applications a raceway harness with 8 & 4-pin connectors will be pre-installed inside door by ASSA ABLOY door manufacturer when specified during ordering process. Raceway harness kits are also available for retrofit applications.
2. If door does not have a raceway harness with connectors, cut connectors off product, or consult factory for raceway retrofit kit.
3. Wiring to pigtail harness is per facility wiring requirement. The rail, raceway, electric hinge and pigtail connector terminations and wire colors all match.

E. 58- 80 Series Electric Dogging Installation and Wiring

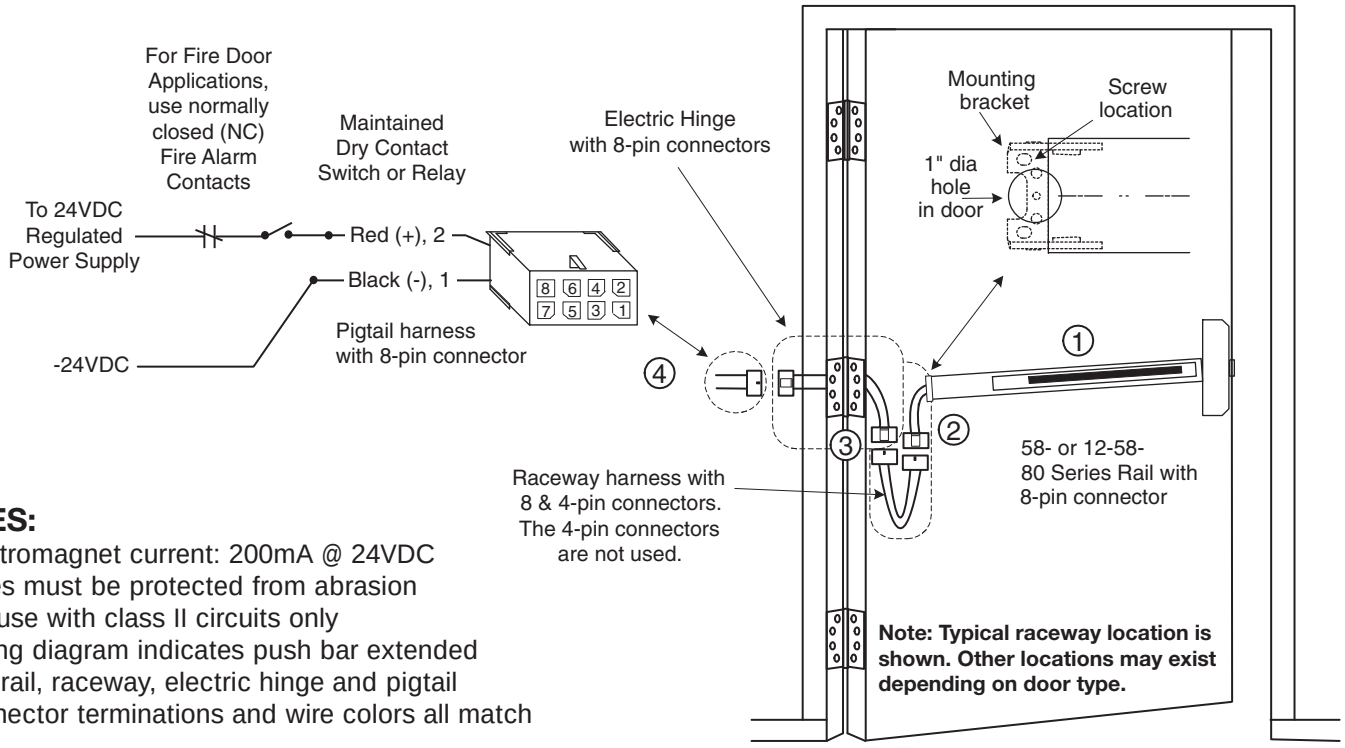

NOTES:

1. Electromagnet current: 200mA @ 24VDC
2. Wires must be protected from abrasion
3. For use with class II circuits only
4. Wiring diagram indicates push bar extended
5. The rail, raceway, electric hinge and pigtail connector terminations and wire colors all match

① Mount exit device per instruction sheet provided

To insure trouble free operation, check that the push rail can be fully depressed. On vertical rod exit devices, check that the latch bolts do not go into hold back position until the push rail is fully depressed.

② Plug rail connector into raceway connector then feed through 1" hole in door. Install rail mounting bracket with two screws supplied. Install rail insert and end cap.

③ Plug raceway connector into electric hinge connector then feed through door prep. Mount electric hinge to door.

④ Go to (A) if wiring now. Go to (B) if wiring is to be done later.

A. Wire frame side wires to wires on pigtail harness as required using connectors allowed by local code. Plug pigtail harness connector into electric hinge connector. Feed harnesses through frame prep and mount electric hinge.

B. Plug pigtail harness connector into electric hinge connector. Feed harnesses through frame prep and mount electric hinge.

Copyright © 2004, 2008, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.