
Magnetic Lock Mounting Accessories

SECURITRON ASSA ABLOY

Experience a safer and more open world

Electromagnetic locks (maglocks) can be installed on various frames and doors using accessories. To figure out what you need for a maglock install, first measure the door stop. Most maglocks require 2-1/4" to 2-1/2" of flat mounting space for direct mount or mounting bracket. You may need one or more accessories if the door stop is less than 2-1/2".

- M38, M68, M32, M380E, M680E and DEM680E Magnalocks[®] fit in 2-1/4" of flat mounting space.
- M62, DM62 and M82 Magnalocks fit in 2-1/2" of flat mounting space.

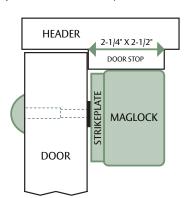




Which maglock accessories does your door need?

Aluminum Spacer Brackets (**ASB**)


- For aluminum doors
- Used when the blade stop requires the maglock to be lowered
- Available for M32, M62 and M82 only

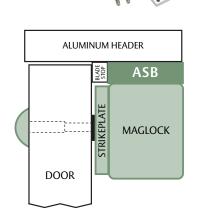

Stop Filler Plates (SFP)


- For steel and wood frames
- Fills or extends a door stop
- Available in 1/4", 3/8", 1/2" and 5/8" thicknesses; all 1-1/4" wide



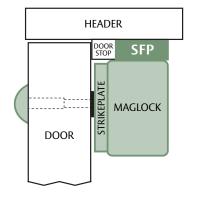


Universal Header Bracket (**UHB**)

- Extends the header 1" to 1-1/2" to create enough space to mount the magnet
- Provides concealed wiring chamber

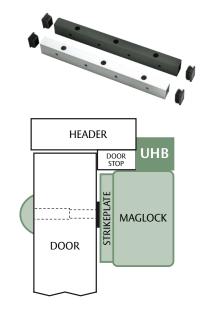

Magnetic Lock Mounting Accessories

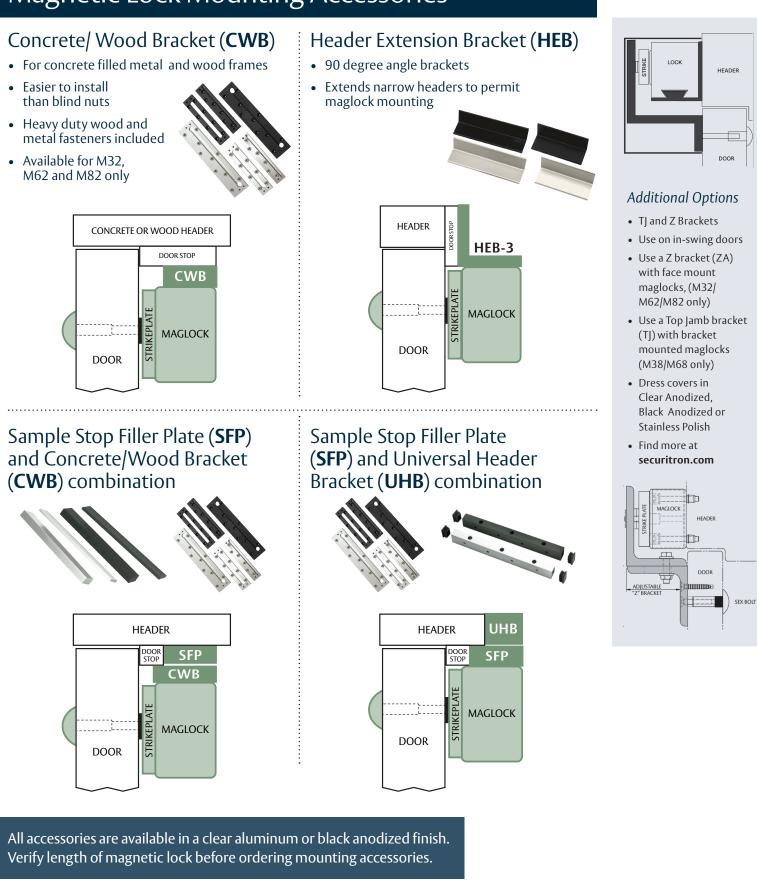

Securitron

securitron.com | 800 626 7590 10027 S. 51st Street, Ste. 102 Phoenix, AZ 85044 USA Printed in the U.S.A.

Patent pending and/or patent www.assaabloydss.com/patents Copyright © 2022, Hanchett Entry Systems, Inc., an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Hanchett Entry Systems, Inc. is prohibited. SEC-096-0222