

Architectural Door Accessories

ASSA ABLOY

Pemko Residential Threshold

The global leader in
door opening solutions


Applies to the following products:

146, 147, 136, 2813


Installation Instructions:

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops. Position flat (or top) portion of threshold directly under door. Lower slope should point to the exterior. Follow steps 1 and 2 to install the pan.
3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Caulk ends of threshold (important for effective sealing and moisture control).
5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)
6. Caulk around mounting screws as needed.

Top (plan) view of door opening (out-swing type)

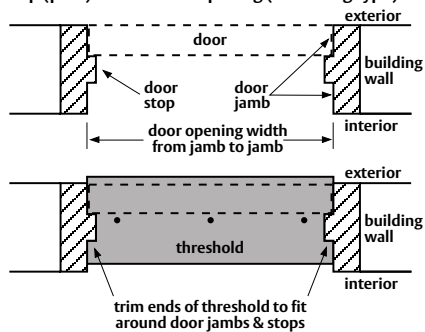

Tools Required:



www.pemko.com

MEMPHIS, TN USA VENTURA, CA USA VANCOUVER, BC CA TORONTO, ON CA
P: 800 824-3018 P: 800 283-9988 P: 877 535-7888 P: 877 535-7888
F: 800 243-3656 F: 800 283-4050 F: 877 535-7444 F: 877 535-7444

Copyright © 2017 Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Company is prohibited.

Testing/Ratings: