

# Architectural Door Accessories

**ASSA ABLOY**

## Pemko Commercial Threshold/Floor Plate


The global leader in  
door opening solutions

Applies to the following products:

**190, 191, 192, 193, 228, 2286, 19125**


### Installation Instructions:

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops.
3. Select method for installation suitable for application.
4. If installing with screws, drill appropriate holes in floor plate
5. If ordered drilled from the factory, use pre-drilled holes in threshold to drill pilot holes in floor.
6. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
7. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included)

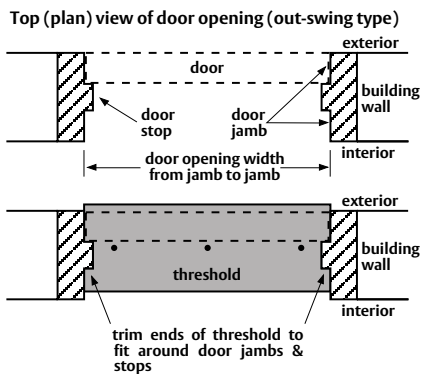

NOTE: Depiction used for general reference. Actual threshold dimensions and appearance will vary, depending upon selected profile.

### Tools Required:

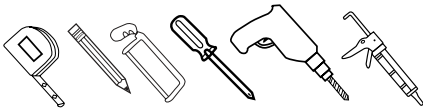

### Testing/Ratings:

Gasketing material for fire doors intended for application to listed steel frames and/or classified steel covered composite type, and hollow metal type fire doors rated up to 3 hours; wood and plastic covered composite type fire doors rated up to 1-1/2 hours; and wood core type fire doors rated up to 20 minutes. (Thresholds may or may not contain gasketing material).

