
Installation Instructions


BCA

S91-055/S91-055A (Bottom Cover Assembly)

IMPORTANT: **All fasteners must be securely tightened to approximately 60 ft./lbs. All mounting hardware provided by Bradley is essential for properly securing units. Bradley cannot assume responsibility for units improperly installed.**

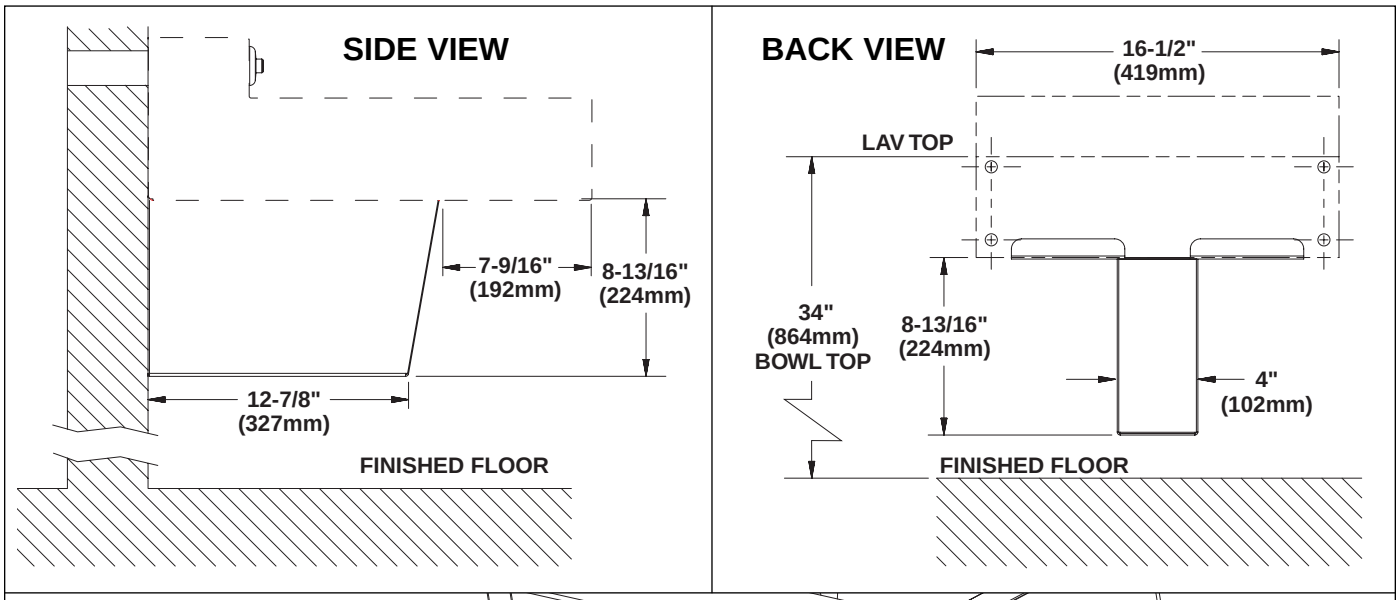

INSTALLATION

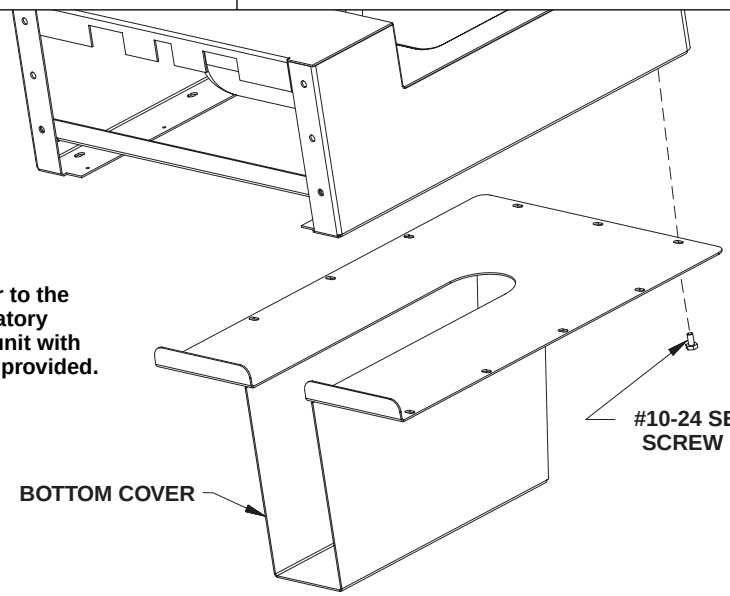

Secure the bottom cover to the bottom side of the lavatory through the holes in the unit with the #10-24 security screws provided.

#10-24 SECURITY SCREW (qty. 11)

BOTTOM COVER

215-409 Rev. B; EN 03-780
© 2004 Bradley Corporation

P.O. Box 309, Menomonee Falls, Wi 53052-0309
TEL. 1-800-BRADLEY FAX 262-251-5817
http://www.bradleycorp.com