


Installation Instructions

BCA

S91-058/S91-058A (Bottom Cover Assembly)



IMPORTANT: All fasteners must be securely tightened to approximately 60 ft./lbs. All mounting hardware provided by Bradley is essential for properly securing units. Bradley cannot assume responsibility for units improperly installed.

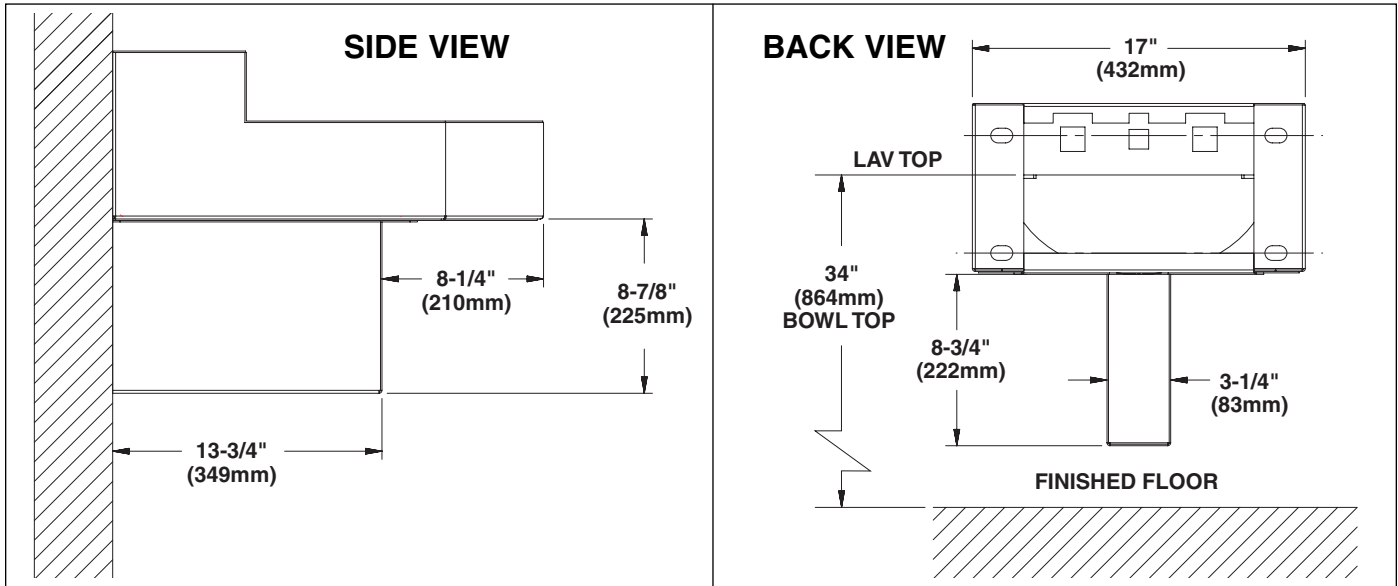

INSTALLATION

Secure the bottom cover to the bottom side of the lavatory through the holes in the unit with the #10-24 security screws provided.

BOTTOM COVER

#10-24 SECURITY SCREW (qty. 13)

