
Installation Instructions

AB

S91-024/S91-024A (Angle Bracket)

IMPORTANT: **All fasteners must be securely tightened to approximately 60 ft./lbs. All mounting hardware provided by Bradley is essential for properly securing units. Bradley cannot assume responsibility for units improperly installed.**

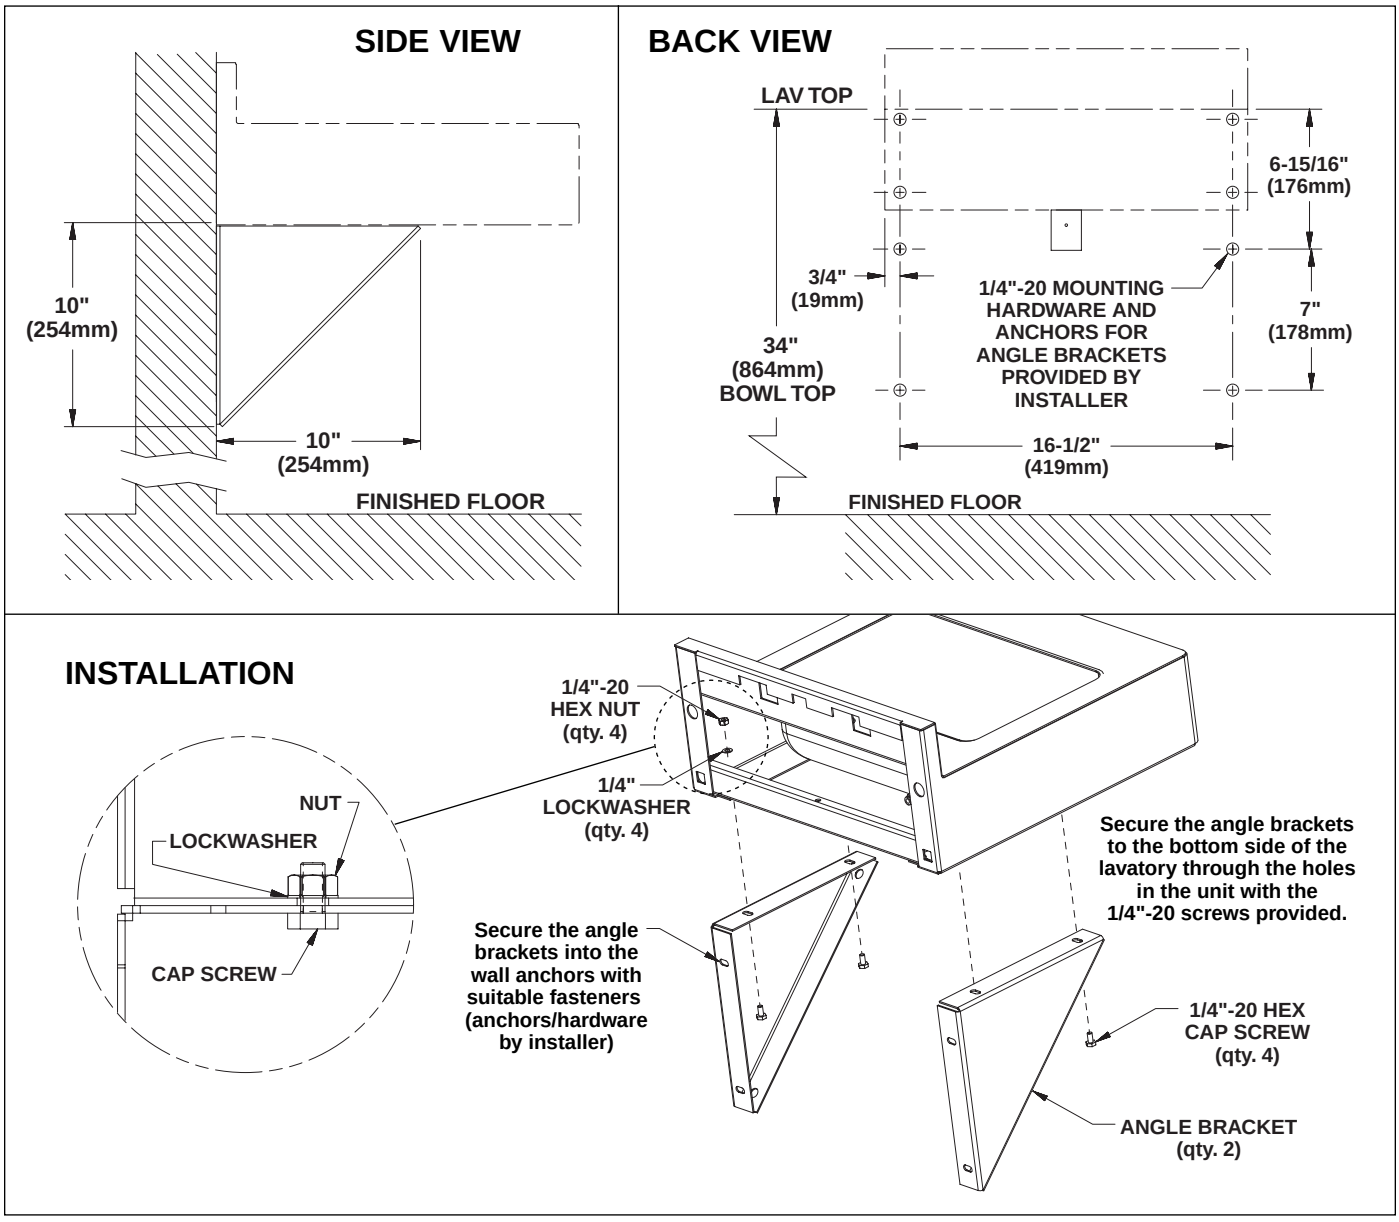

215-1303 Rev. B; EN 03-780
© 2004 Bradley Corporation

P.O. Box 309, Menomonee Falls, Wi 53052-0309
TEL. 1-800-BRADLEY FAX 262-251-5817
http://www.bradleycorp.com