Installation Instructions

TH


Towel Hook

(S91-038)

NOTE: Refer to the illustration below when installing the towel hook.

1. Insert the spring and then the ball into the larger hole in the towel hook.
2. Holding the spring and ball in place, position the two smaller holes in the towel hook against the two towel hook holes in the cabinet.
3. Holding the towel hook securely against the cabinet, bolt the towel hook to the cabinet unsing the backplate and two screws and lockwashers provided.

NOTE: Tighten the screws to 65 in-lbs.

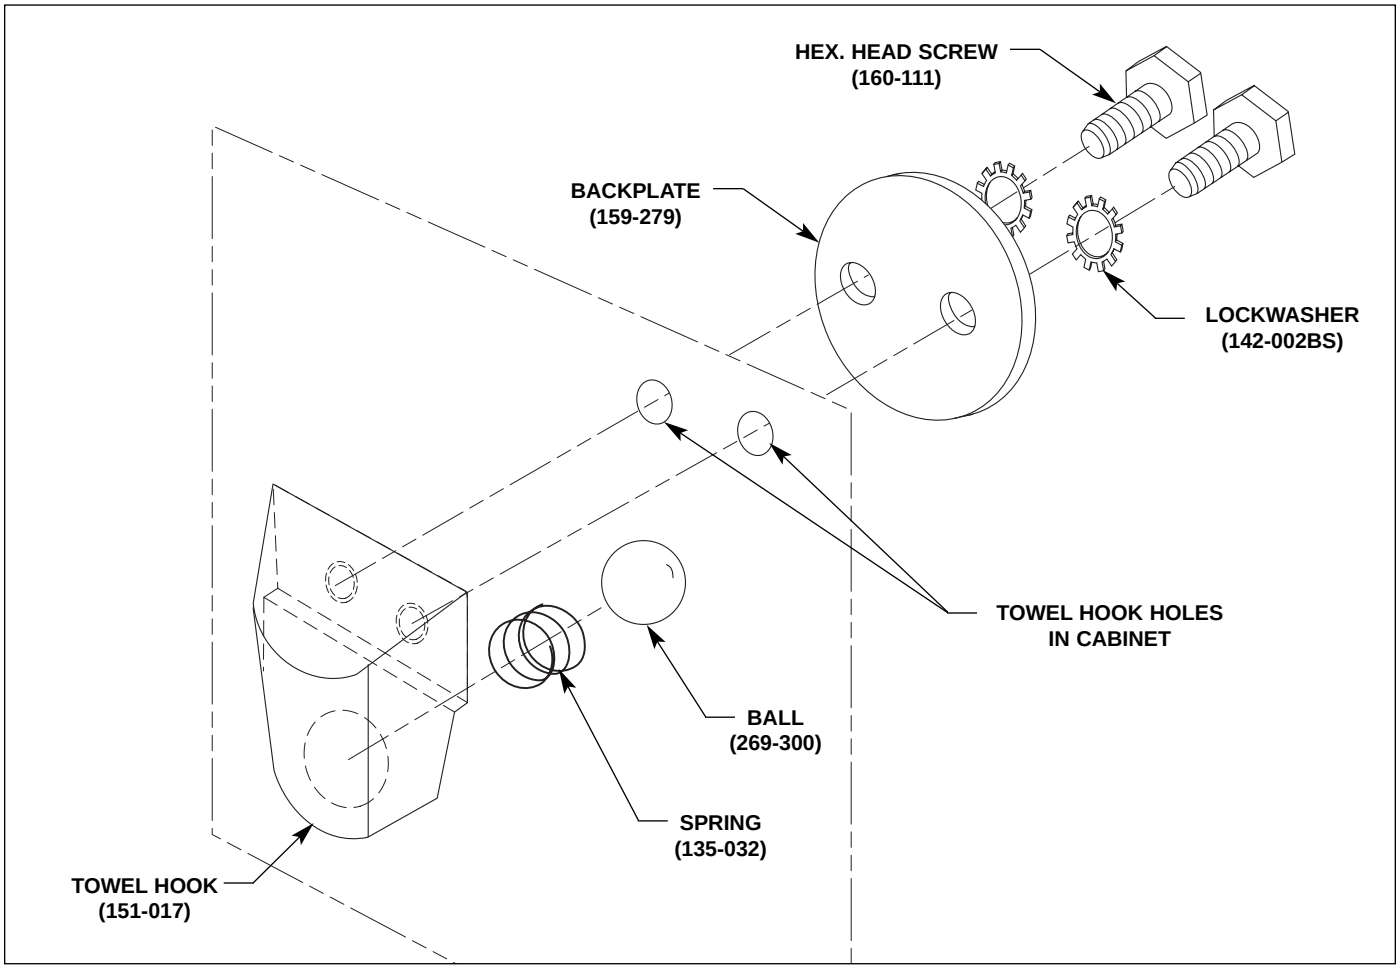

215-544 Rev. C; EN 03-751
© 2003 Bradley Corporation

P.O. Box 309, Menomonee Falls, Wi 53052-0309
TEL. 1-800-BRADLEY FAX 262-251-5817
http://www.bradleycorp.com