
Instructions for Combi-Code Lock Codefinc

HÄFELE
FINDING BETTER WAYS

Article 231.16.999

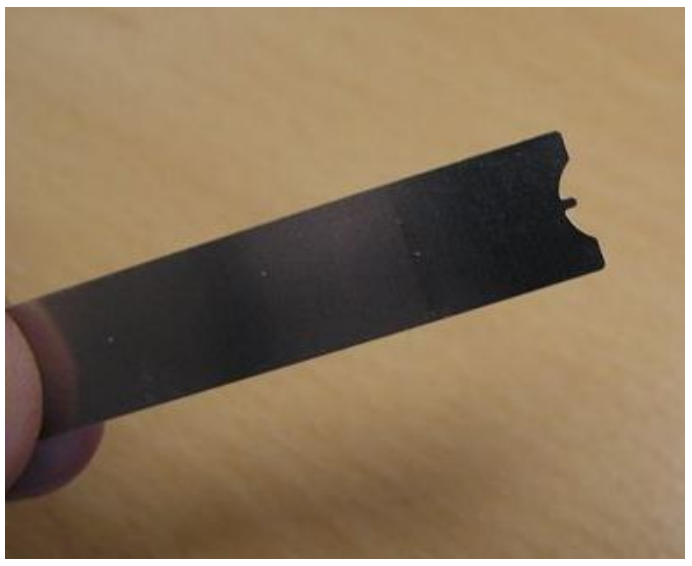



The steel plate codefinder must be inserted into the slot on the left side (art. 231.16.300 or 231.16.310) or on the right side of the right wheel (ar or 231.16.311).

Hold steel plate codefinder upright using slight and constant downward pres advance the left (right) wheel with a screwdriver in numerical order (0, 1, until the spike of the steel plate drops slightly at the correct digit and advance the wheel further.

Follow this procedure with the center wheel and then the right (left) wheel.

When completed, be certain to record the correct combination code for futur

of the left wheel
t. 231.16.301

sure. Then
, 2, 3, …)
you cannot

.

e reference.