


INSTALLATION TEMPLATES

K-TMPA/R INSTALLATION TEMPLATE FOR ADAMS RITE

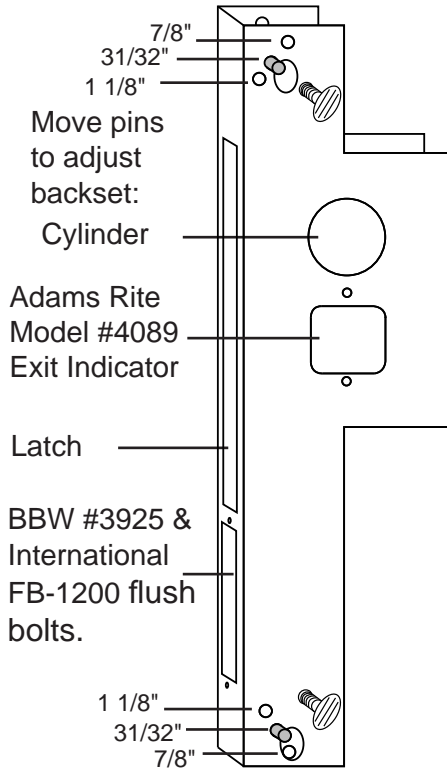


- This tool allows you to make precise installation of Adams Rite 1850S, 4530, 4710 & 4711 series locks. Also works with the International DH 1822 & DL4511. Covers the following backsets: 7/8", 31/32" & 1 1/8".
- Includes guide for Adams Rite exit indicator #4089.
- Has cutout for BBW #3925 & International FB-1200 flush bolts.

Manufacturer	1/2" Template Guide#	Nut
Black & Decker	62946-00	62942-00
Bosch	82988	
Bosch	RA1109 (Model# 1613, 1613EVS, 1614 & 1614EVS)	
Craftsman	Use 5/8" guide (25082 is part# for 3 piece set which includes a 5/8" guide) with a 3/8" bit. • Craftsman does not make a 1/2" guide.	
Hitachi	303351	
Makita	323449-0 (Fits Model#3601B)	
Makita	164776-4 (Model# 3606, 3612B, 3612BR & 3620)	
Milwaukee	Use 5/8" guide (49-54-0530) with a 3/8" bit. Milwaukee does not make a 1/2" guide.	
Porter Cable	42033	42237
Ryobi	6072083	
Skil	91805	

This template is designed to be used with a 1/2" router guide with a 1/4" bit.

K-TMPDOR • INSTALLATION TEMPLATE FOR DOR-O-MATIC® 990/1990 & 1090/2090 SERIES EXIT DEVICES.

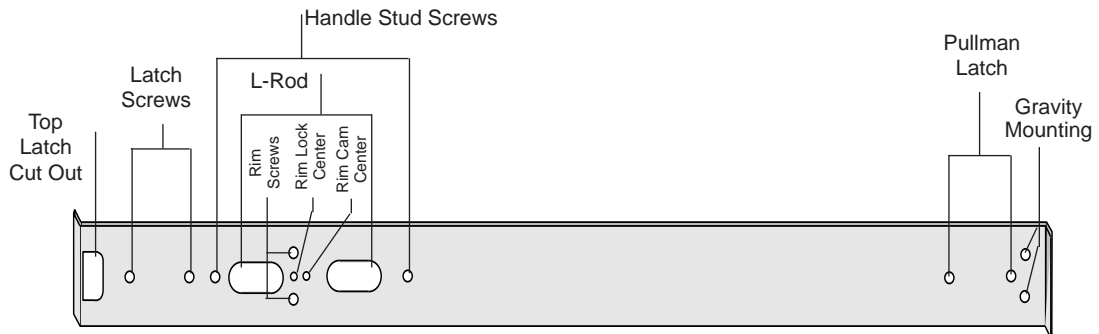

WARNING: Wear Eye Protection



VISIT OUR WEBSITE @ WWW.KEEDEX.COM
Tel: 714-993-4300 • Fax: 714-993-4303