

MOUNTING AND INSTALLATION

For factory prepped doors, use dimensions shown. Dimensions are referenced from center of 1¼" cylinder hole. The Adams Rite® lock determines the backset.

When mounting the new Adams Rite® locks:

- Do not install the outside cylinder – this trim replaces it;
- Do not install the faceplate (access to the cylinder set screw in the lock is required during mounting and installation).

Mechanical Override Cylinder Cams

The DL1200 and DL/PDL1300 trim requires the use of an oval *Alarm Lock* cam (supplied with cylinder). For other manufacturers, please see the charts below.

Cams for Standard Mortise Cylinders	
Corbin-Russwin	HW1344
Marks	HW1346
Arrow	HW1348
Sargent	HW1348
Schlage	HW1349


Cams for IC Mortise Cylinders	
Best*	HW1343
Corbin-Russwin	HW1345
Medeco	HW1347
Schlage	HW1350
Yale	HW1351
*Will be supplied together with Best IC Housing (HW1352)	

Cylinder Length	Collar P/N
1-¾"	HW1331
1-½"	HW1342


Cylinder Collars:

The DL1200 and DL/PDL1300 can use a 1-¾" & 1¼" mortise cylinder without the use of a collar (1¼" requires two plastic spacers, supplied). For cylinders longer than 1¼" a collar is required.

Order collars from an *Alarm Lock* distributor.

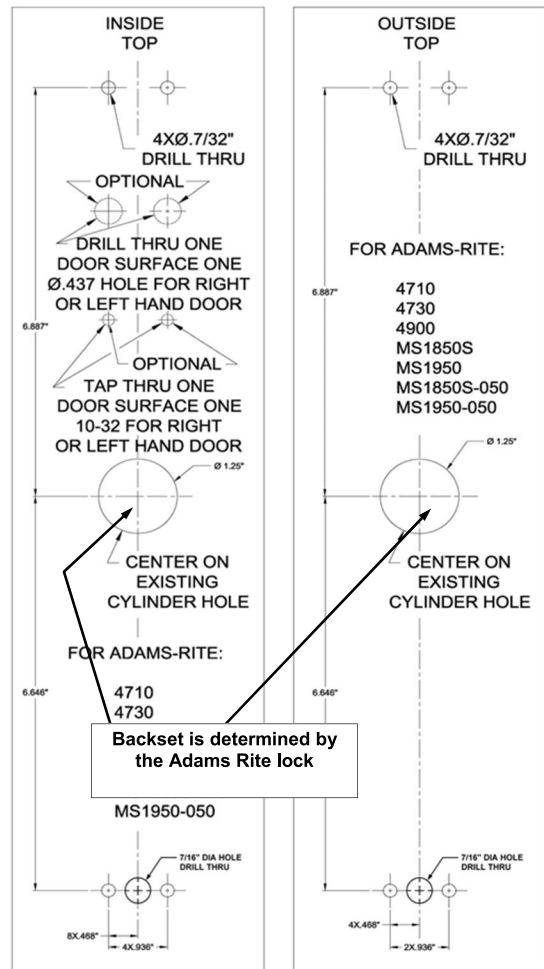

Template (use W11459)

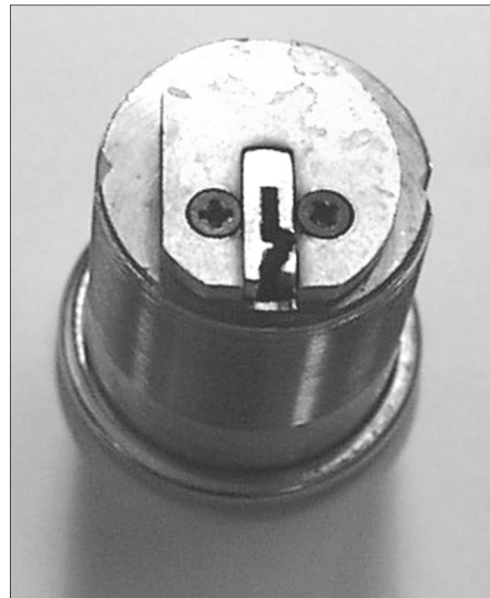

Cam for Mechanical Override Cylinder