

5080
(CONCEALED LATCH)

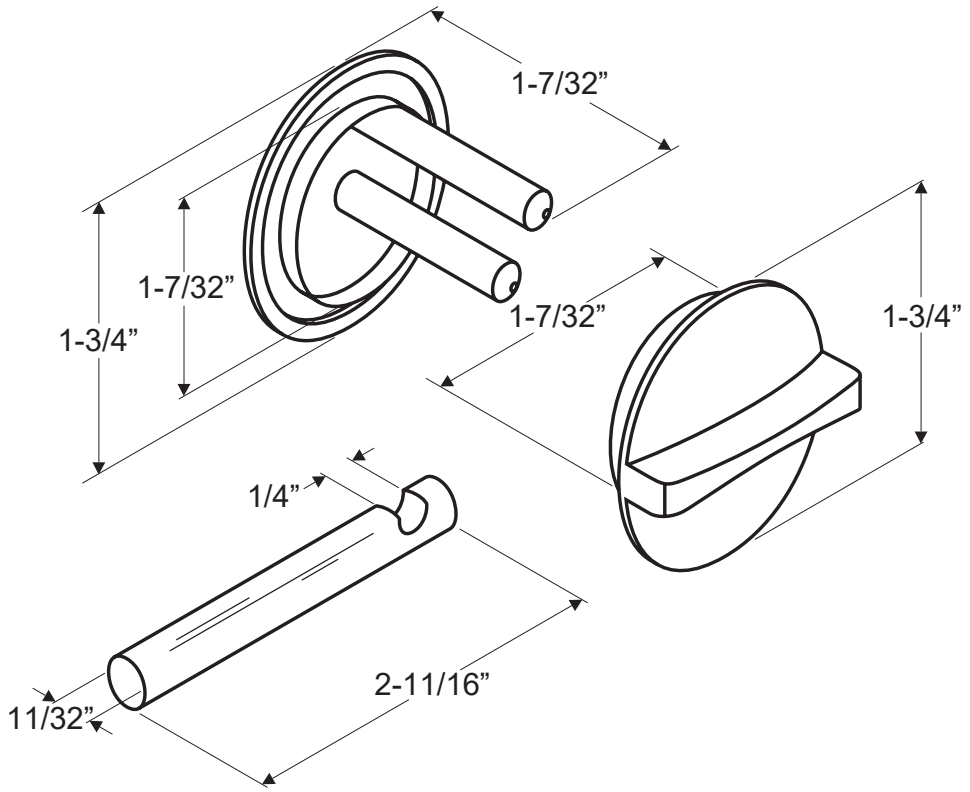

Copyright - 2007 Jacknob Corp. all rights reserved Revised - 08/29/16

INSTRUCTIONS FOR INSTALLING
5080, 6080, 8080 CONCEALED LATCHES

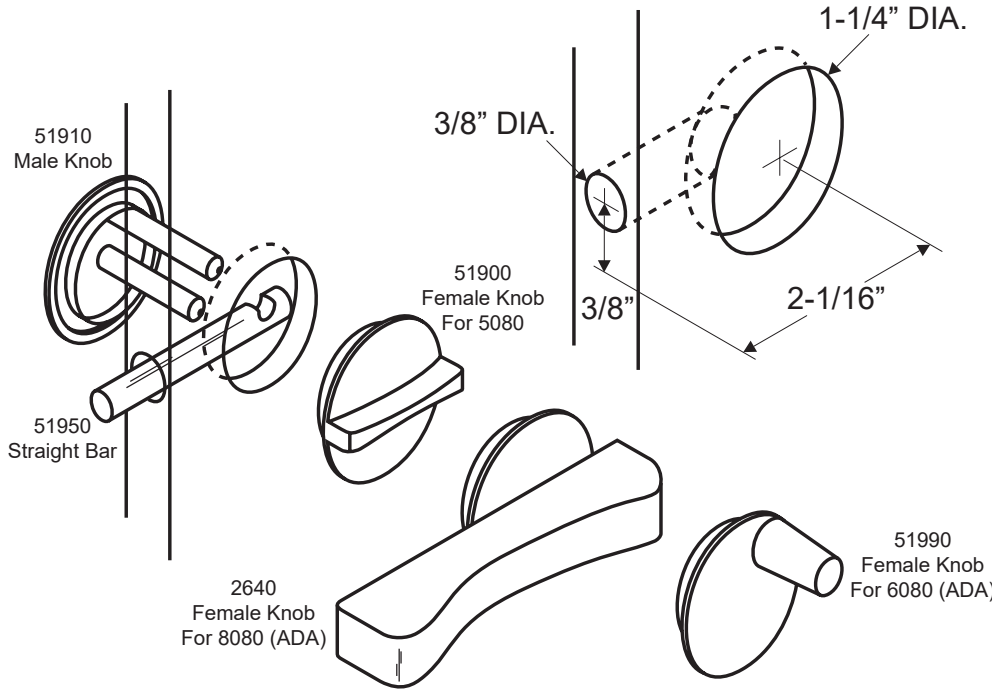

1. **Insert bar through edge of door - notched end first.**
2. **Insert male knob in door, engage upper pin of knob into notch of straight pin.**
3. **Insert female knob - engage both pins of male knob, hold one knob and apply pressure to the other to to engage retainer ring.**

REMOVAL - To remove latch, drill 3/8” diameter hole through center of female knob 5/8” deep. Pull knob set apart.

Copyright - 2007 Jacknob Corp. all rights reserved Revised - 12/06/07