
INSTRUCTIONS FOR INSTALLING
30414 ANCHORING PACK

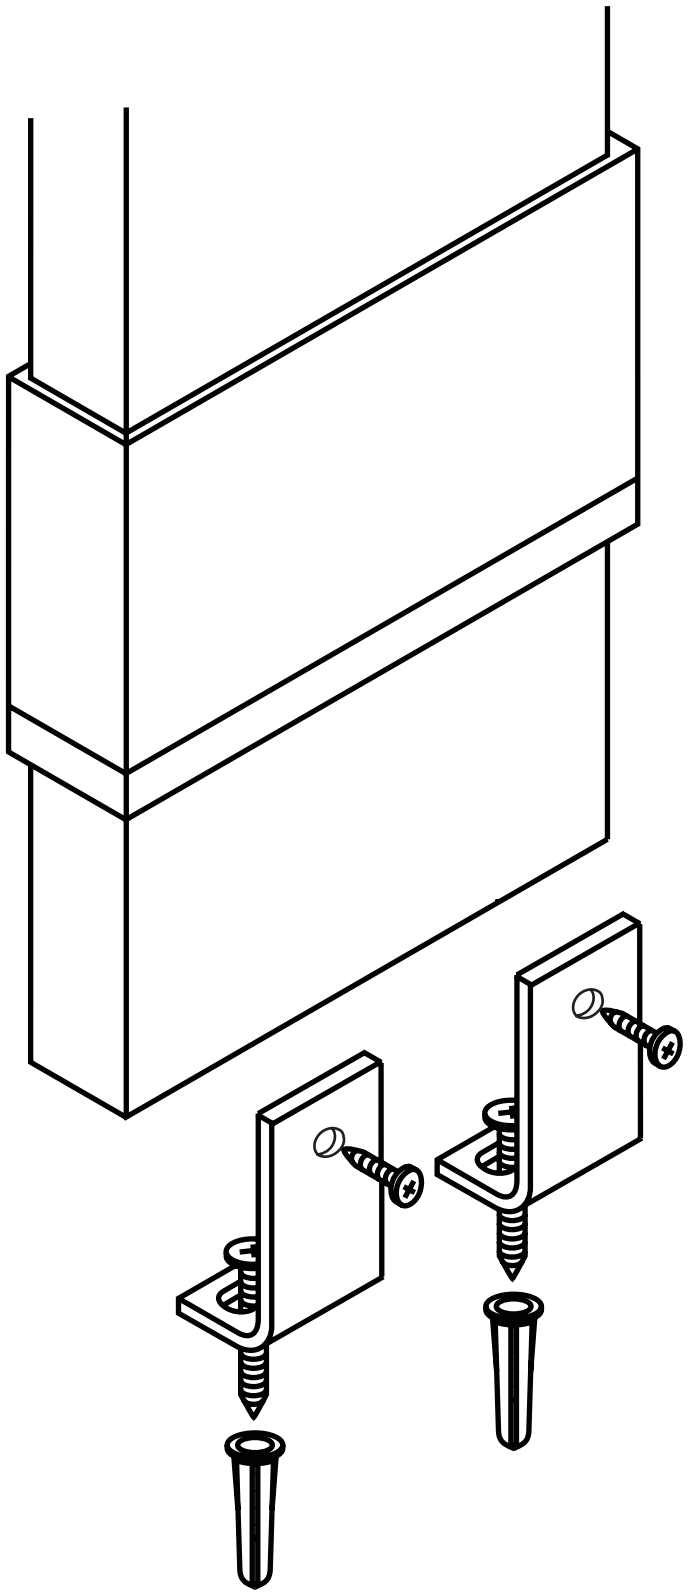

Copyright - 2010 Jacknob Corp. all rights reserved