

5190
(CONCEALED LATCH)

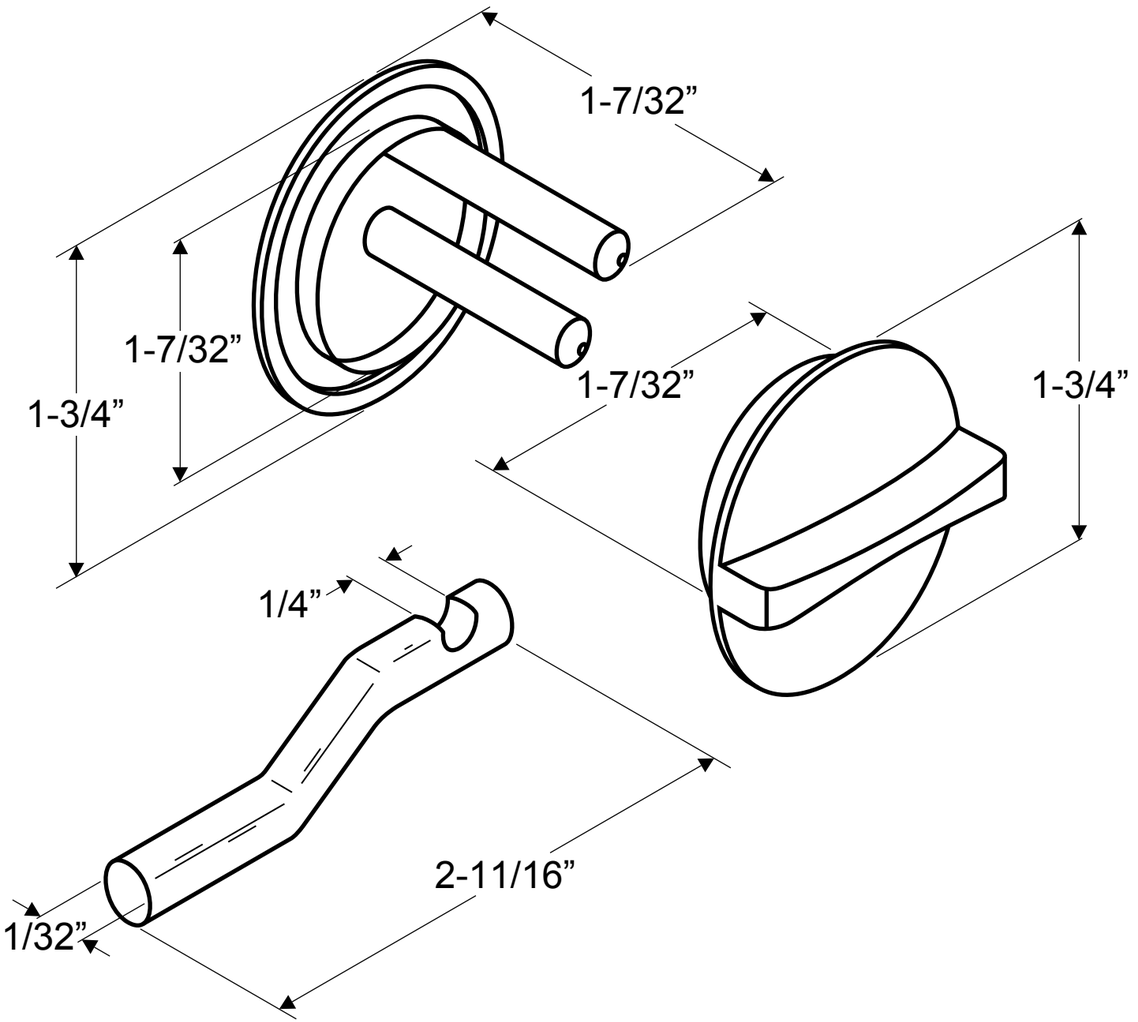

Copyright - 2007 Jacknob Corp. all rights reserved Revised - 12/06/07

INSTRUCTIONS FOR INSTALLING
5190, 6190, 8190 CONCEALED LATCHES

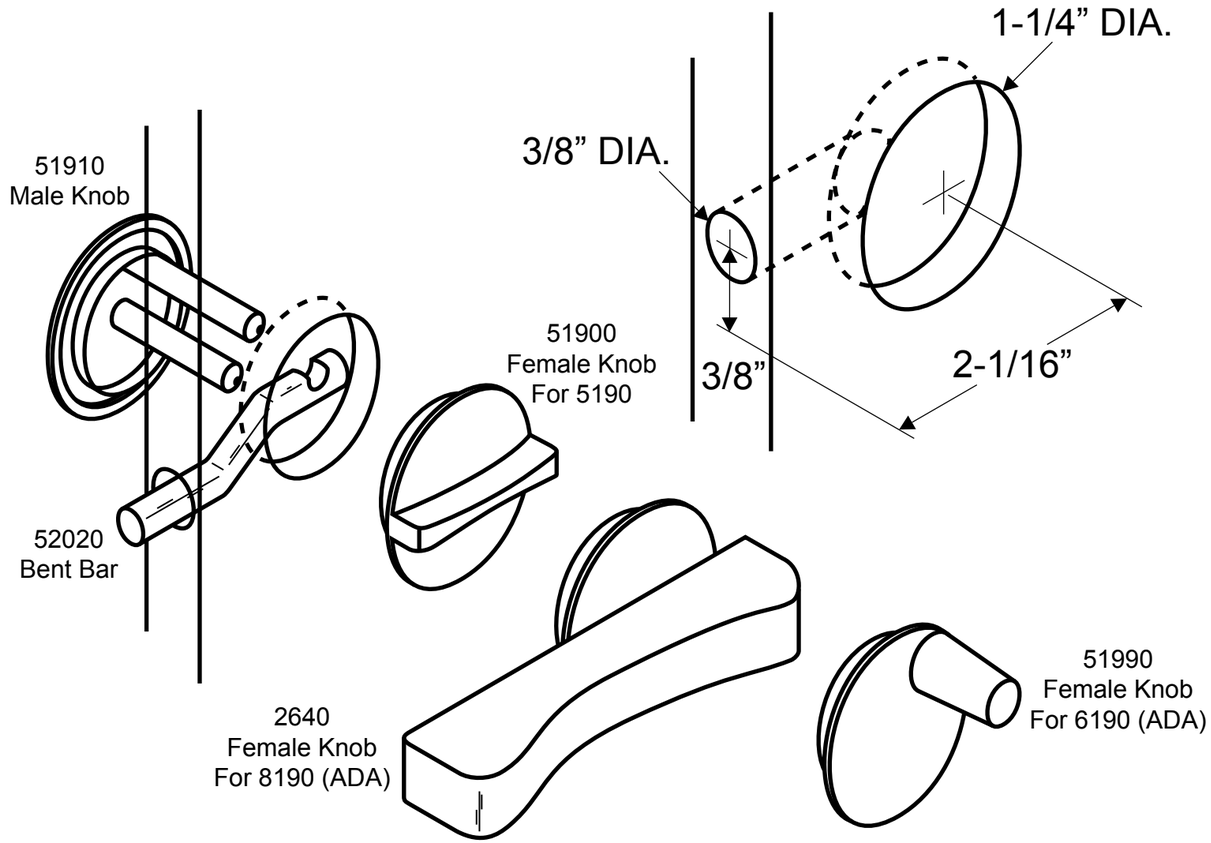


1. **Insert bar through edge of door - notched end first.**
2. **Insert male knob in door, engage upper pin of knob into notch of straight pin.**
3. **Insert female knob - engage both pins of male knob, hold one knob and apply pressure to the other to to engage retainer ring.**

REMOVAL - To remove latch, drill 3/8” diameter hole through center of female knob 5/8” deep. Pull knob set apart.

Copyright - 2007 Jacknob Corp. all rights reserved Revised - 12/10/07

5430, 5431
(STRIKE AND KEEPER - INSWING/OUTSWING 1-1/4”)

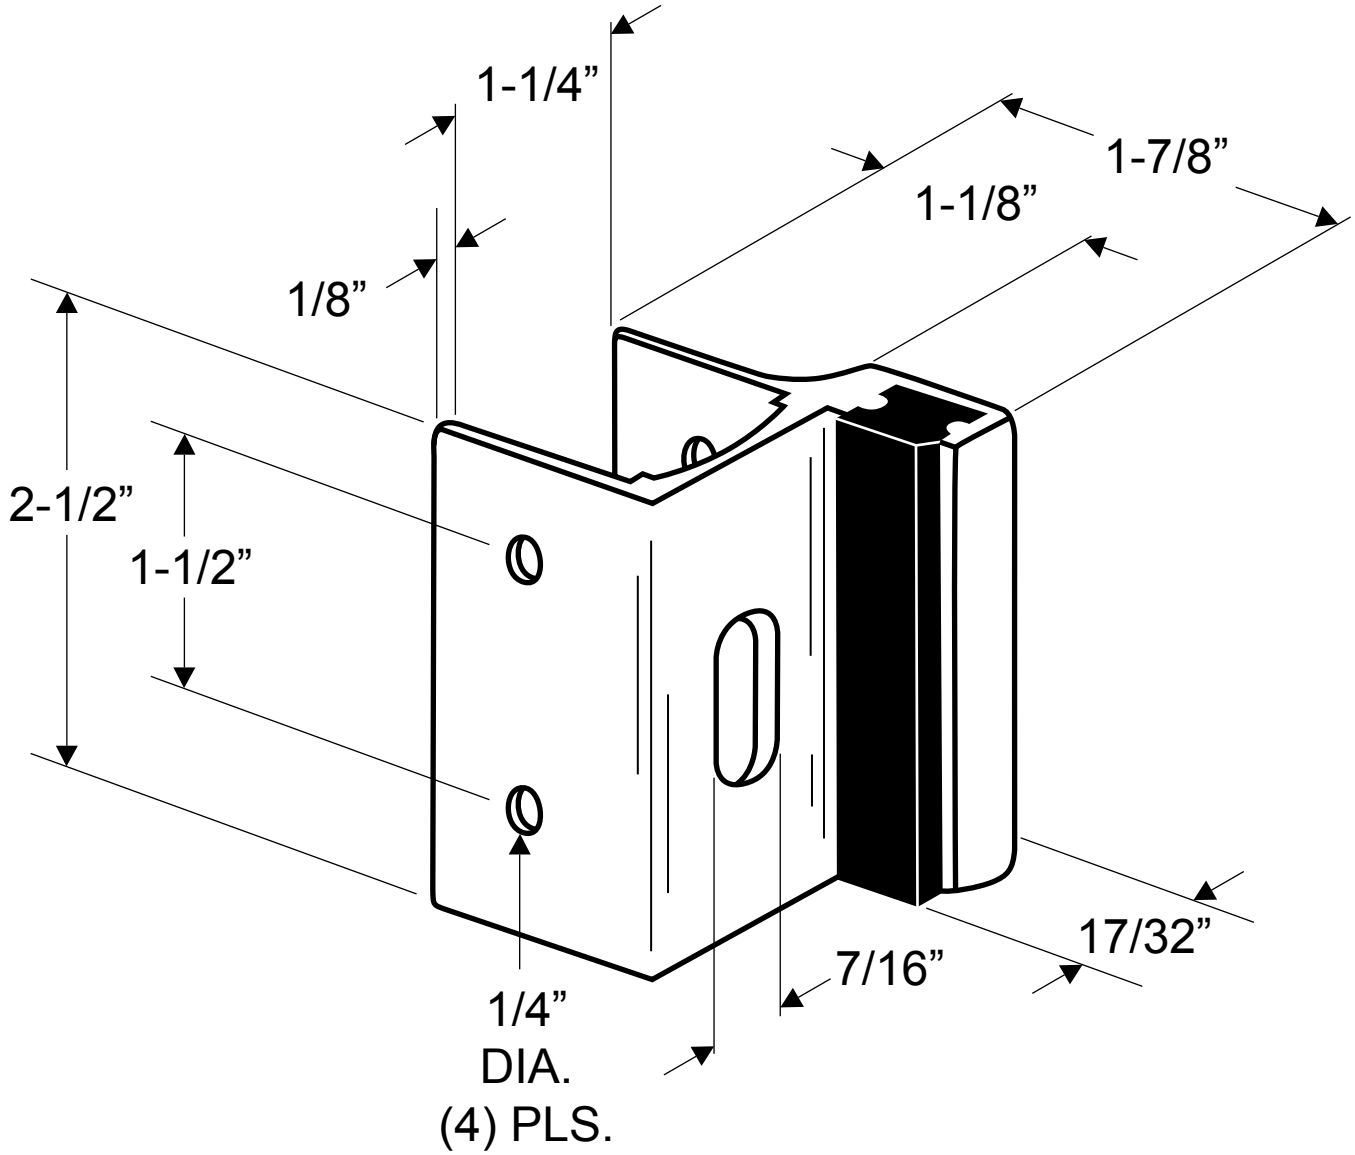

NOTE: FOR ROUND EDGE POST

Copyright - 2006 Jacknob Corp. all rights reserved Revised - 5/24/06