

111950
(CONCEALED LATCH)

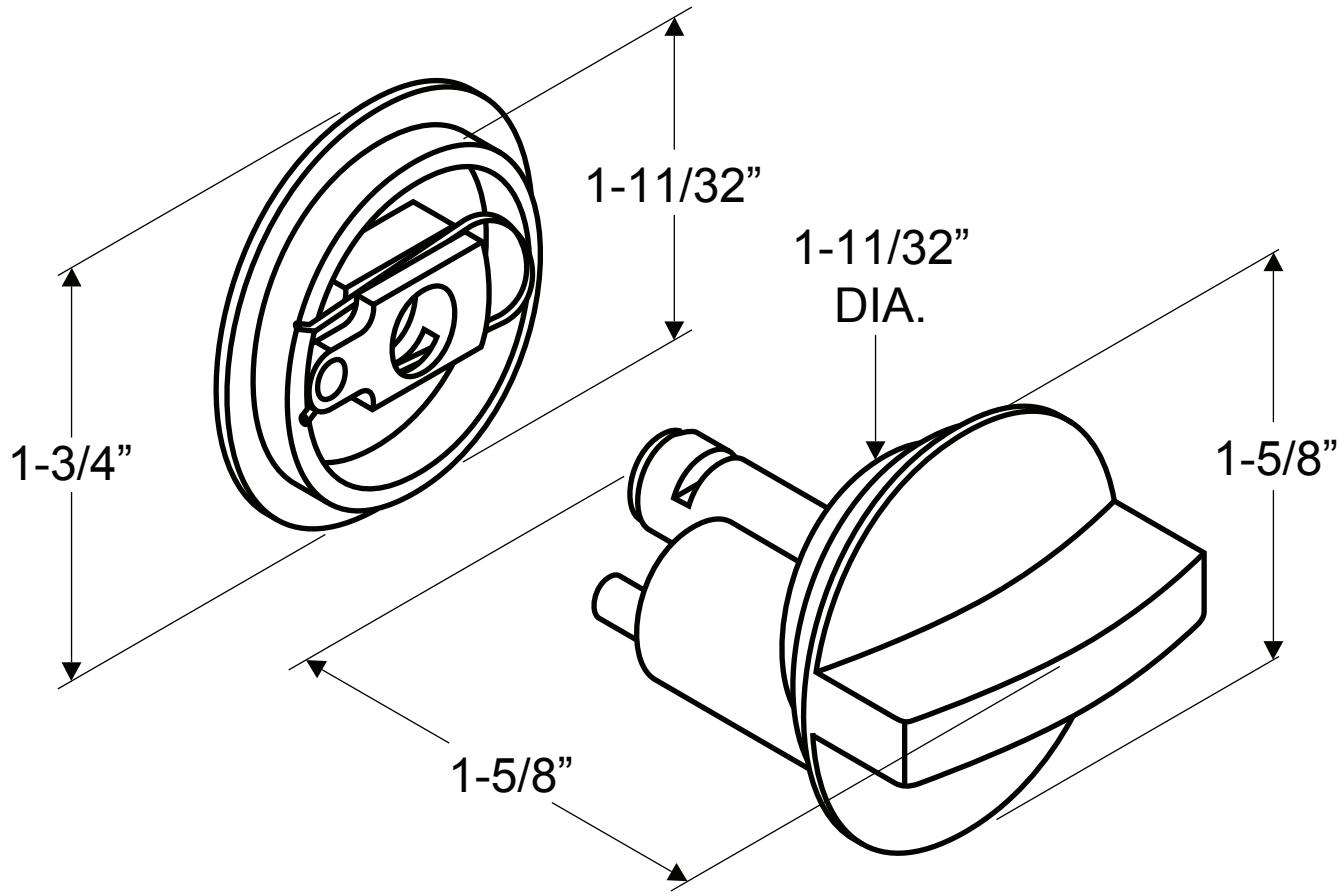

Copyright - 2007 Jacknob Corp. all rights reserved Revised - 12/11/07

INSTRUCTIONS FOR INSTALLING
6160, 6170,111950 (CONCEALED LATCHES)

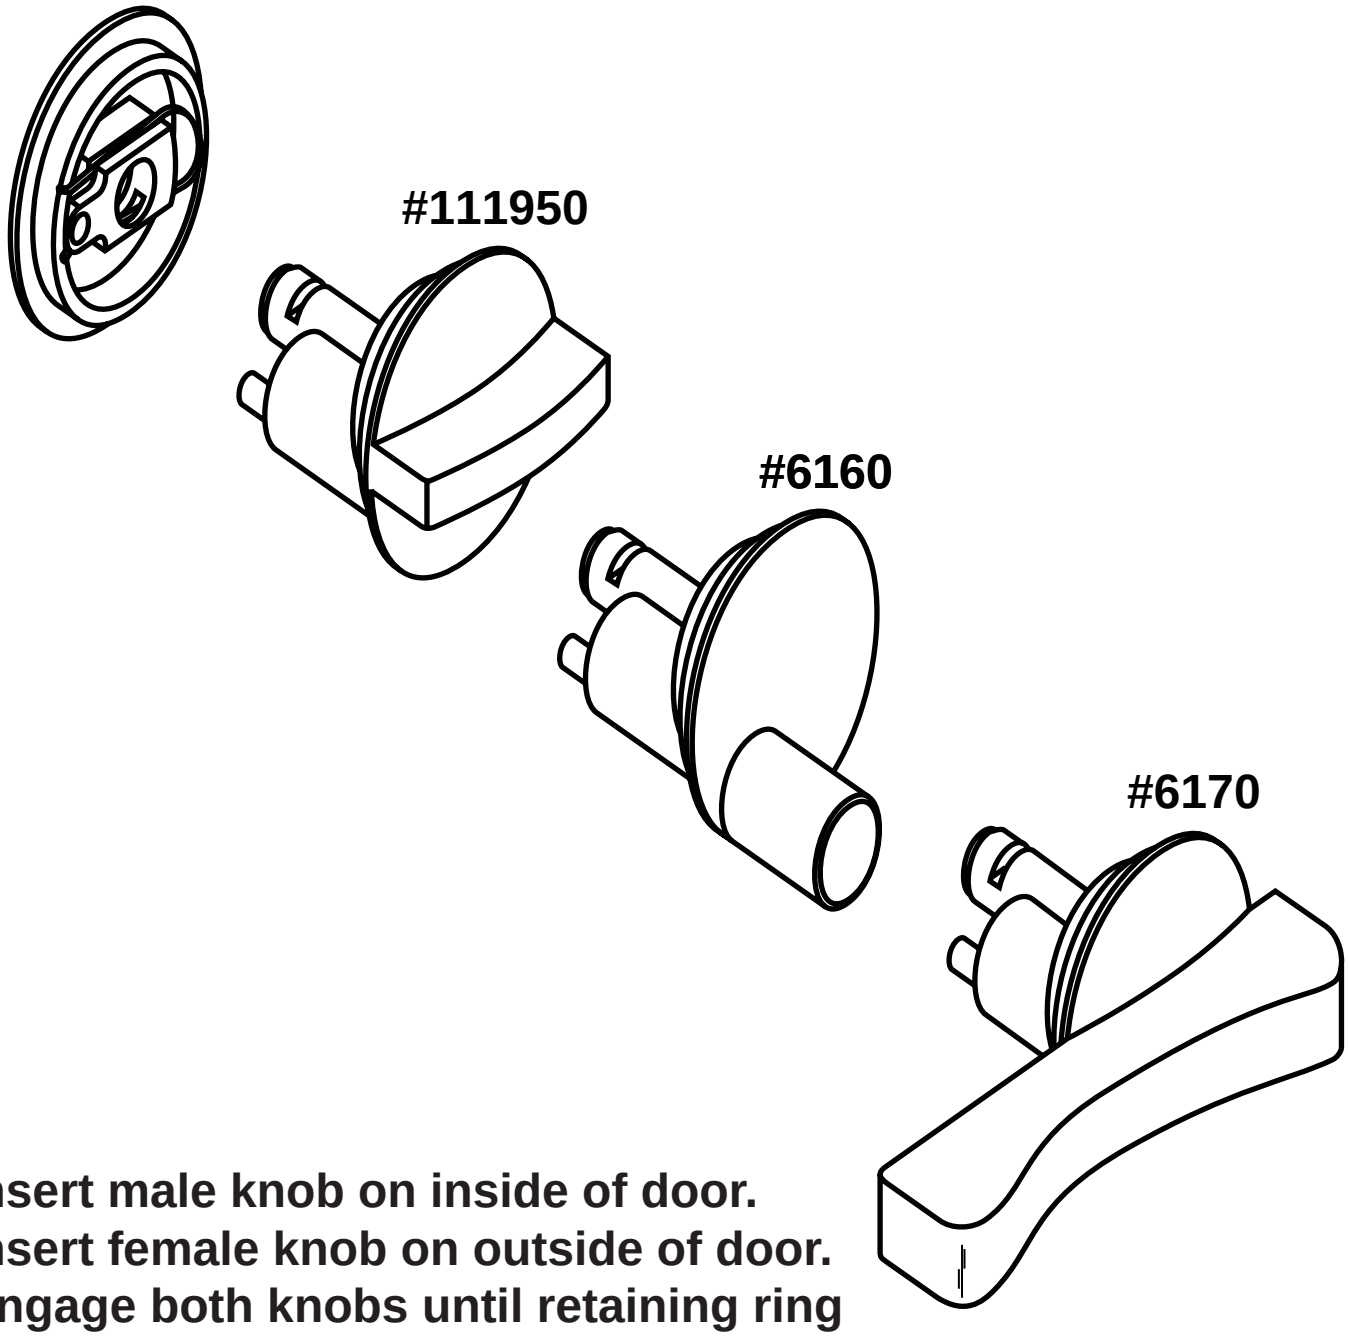

1. **Insert male knob on inside of door.**
3. **Insert female knob on outside of door.**
3. **Engage both knobs until retaining ring "clicks" into groove (they will not come apart).**

REMOVAL - To remove latch, drill 3/8" diameter hole through center of female knob (outside) 5/8" deep. Pull knob set apart.

Copyright - 2007 Jacknob Corp. all rights reserved Revised - 12/11/07

102265