



TROFFER INSTALLATION INSTRUCTIONS


MORRIS CAT#’S:71784C-71789C

Warning


- * LED troffer are not suitable for using in wet loations.
- * LED troffer are not suitable for covering with thermally insulating material.
- * Please keep the LED troffer way from any corrosive substance, and please use dry cloth when you clean it.
- * LED troffer can only be installed by a qualified electrician.
- * Before installation or maintenance, please disconnect the power to prevent electric shock.

Installation Guide


1.Unscrew the driver cover.

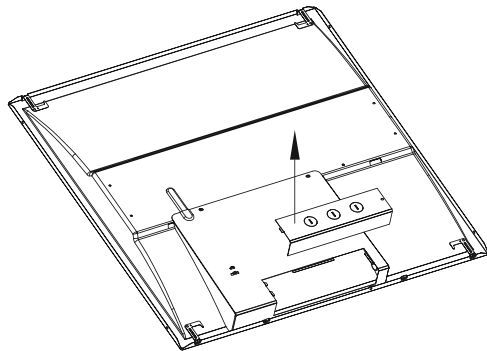


2.Connect the conduit to the driver box.

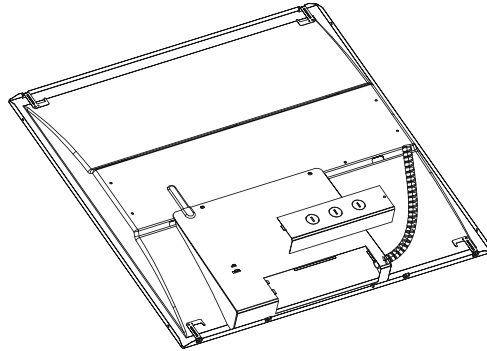

3.Connect other wires separately.

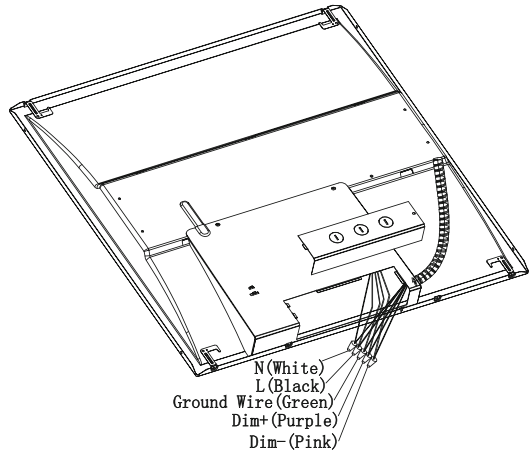


4.Put back the driver cover and fix it by screw.

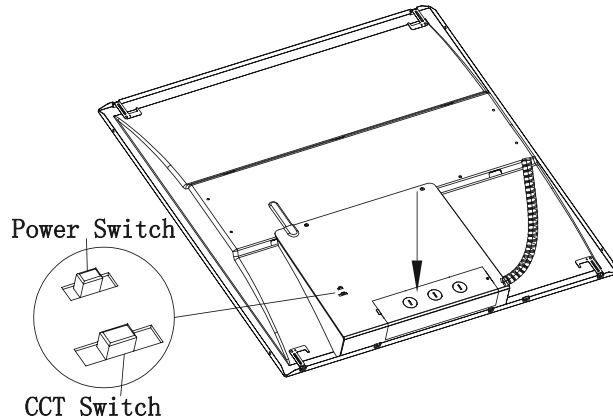


Recessed Installation





1.Replace existing lighting fixture from ceiling with LED Troffer.

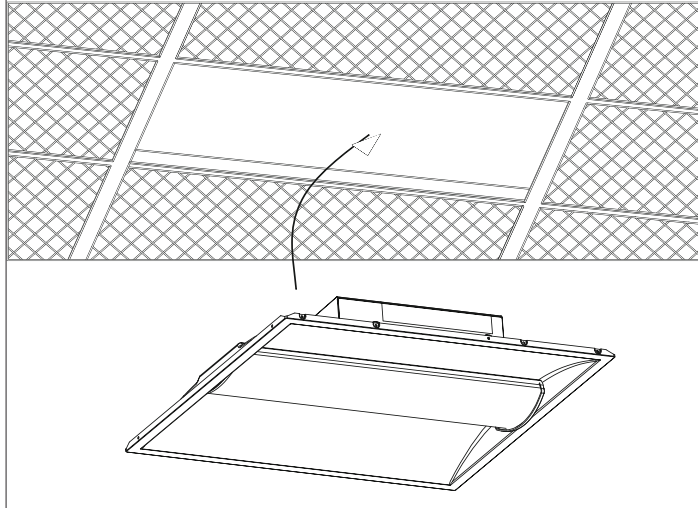

1.Replace existing lighting fixture from ceiling with LED Troffer.

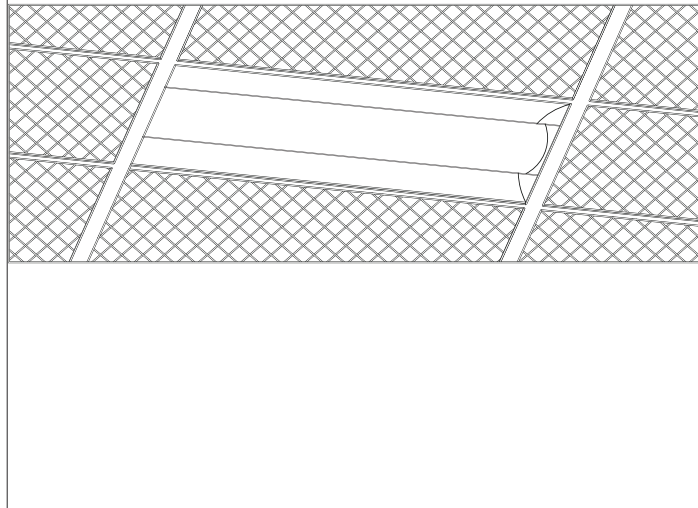

3. Use the protective brackets for the sake of safety.

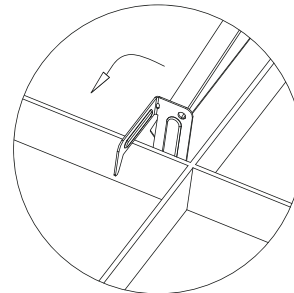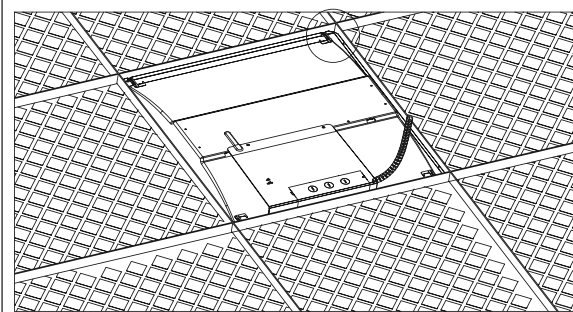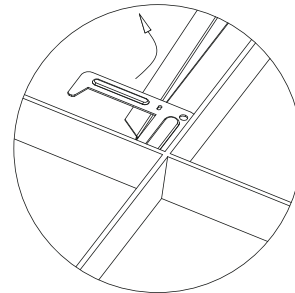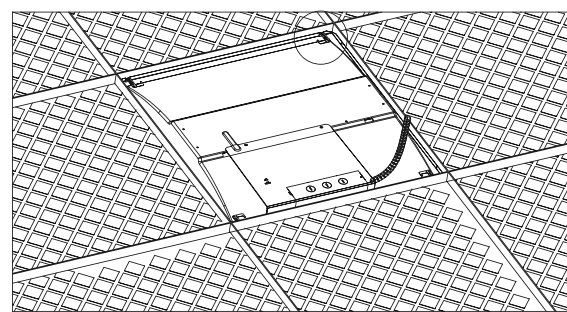

The Installation must be carried out by an electrician.