


Bed Box Mechanisms for Vertical Wall Bed

For a top shape of mechanism and for the warranty of the product, **MUST RESPECT** these **letters**: (All the dimension are in millimeters)

B	DOOR THICKNESS	16	19	22	25
A	MINIMUM DEPTH CABINET	415	415	415	415
X	CABINET BASE	40	40	40	40
C	DRILLING INTERAXE FROM FLOOR BASE TO BOX	see point 3 of the instruction			
D	DISTANCE FROM HOLE OF METAL BASE TO CABINET DOOR	49	52	55	58
E	DISTANCE FROM BOLT TO METAL FRAME	68	68	68	68
F	MAX DISTANCE FROM BOLT TO THE END OF METAL FRAME	190	190	190	190

IF DOOR/PANEL THICKNESS IS LESS THAN 22mm,
IT'S STRONGLY RECOMMENDED

to use our Reinforced Plate #10810812 to strengthen your wooden box

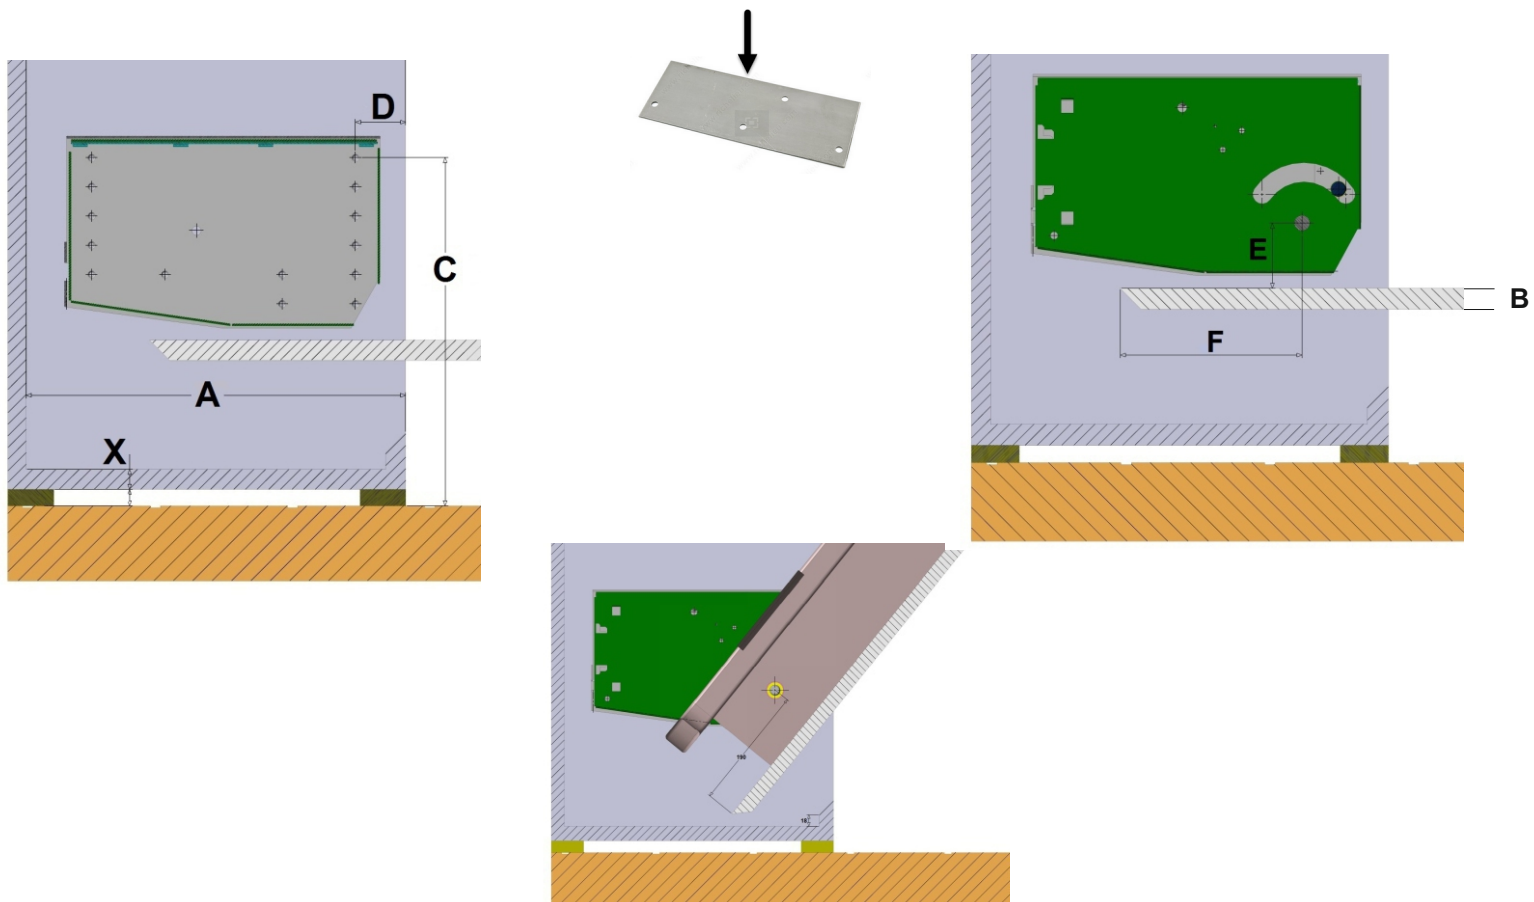

It's possible to use the mechanism with different cabinet dimension
ONLY IF YOU CHECK :

- the mechanism rotation;
- the balance of the mechanism;
- the perfect closing of the cabinet door


BED MECHANISM

MECHANISM FOR FOLDAWAY BED
SINGLE DOUBLE QUEEN

MECANISME POUR LITS ESCAMOTABLE
SIMPLES DOUBLES QUEEN

SAFETY INFORMATION

1. BE CAREFUL ON FIXING ALWAYS THE CABINET TO THE WALL BEFORE START TO MONTING THE MECHANISM
2. THE SCREWS TO FIX THE MECHANISM TO THE FURNITURE AREN 'T PROVIDED AND THE USER MUST BE RESPONSIBLE TO USE THE PROPER SCREWS.
3. MUST FIX ALL THE **NO. 11 SCREWS** OF METAL BOX

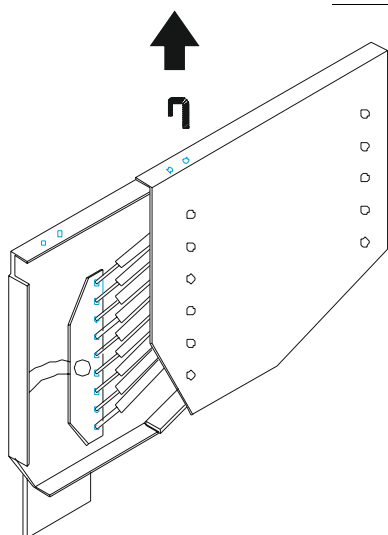

1

Unlocking the spring box

Deverrouiller le boîtier à ressorts


2

Open the mechanism

Ouvrir le mécanisme

METAL BOX

SPRING BOX

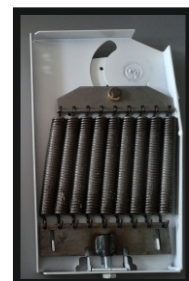

3

Mounting the box on the cabinet


Installer le boîtier sur l'armoire

Distance de percage du plancher jusqu'au boîtier

Drilling interaxe from floor base to the box

C 382mm with art.4082g mm 200



C 432mm with art.4002g mm 250

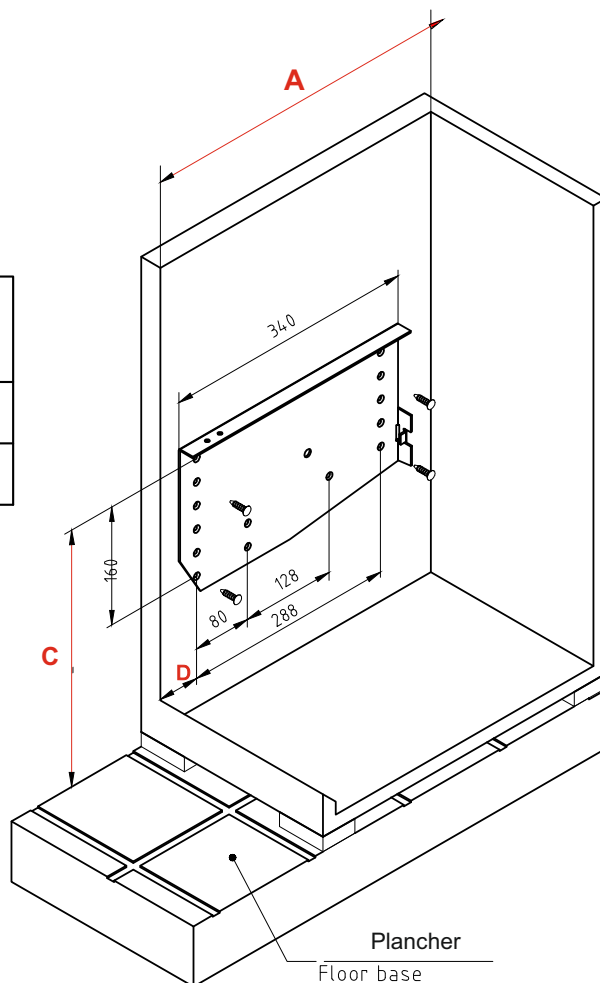

4

Mounting the spring box on the bed frame


Fixer le boîtier à ressorts sur le cadre du lit

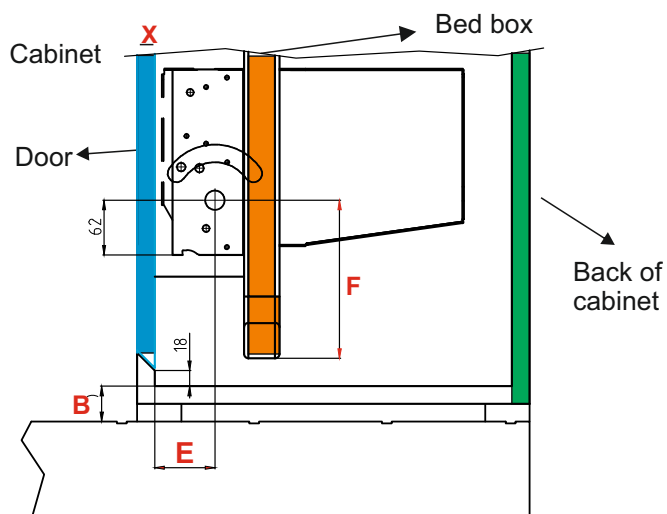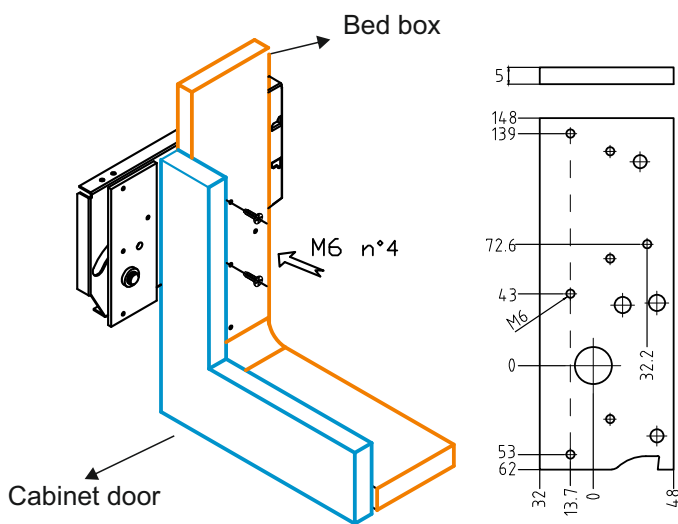

5

5 *Inserting the bed frame into the cabinet after mounting both boxes*


Insérer le cadre du lit à l'intérieur de l'armoire après avoir installé les deux boîtiers

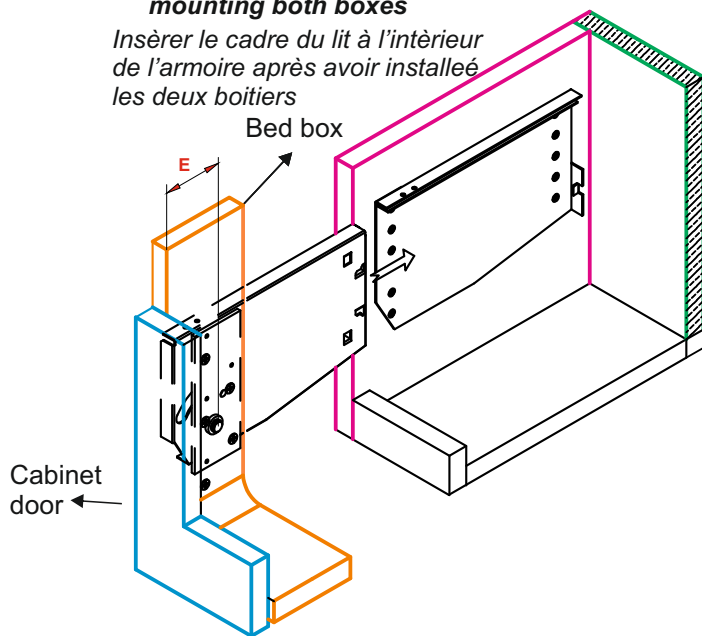

6


Rotate the mechanism in horizontal position

Faire pivoter le mécanisme en position horizontale

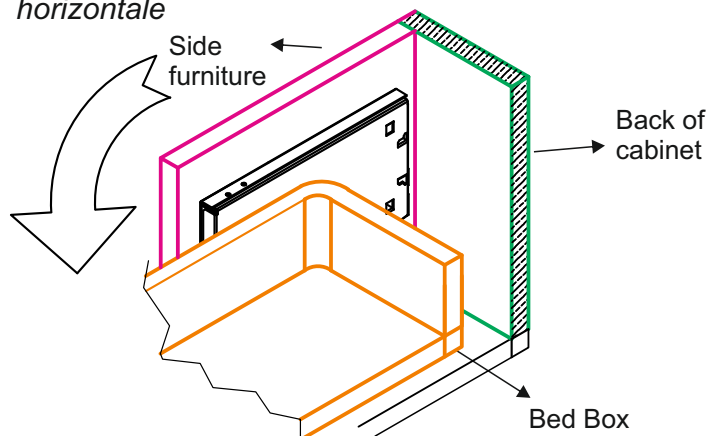


7

Blocking two parts of the box
*Verrouiller les deux parties
 du boîtier*

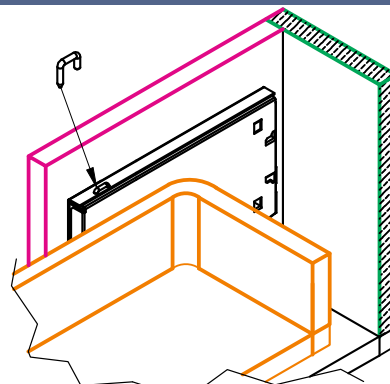

Use our manual folding legs:
Utilisez nos pattes pliantes:

art.4002g 250mm
 art.4082g 200mm

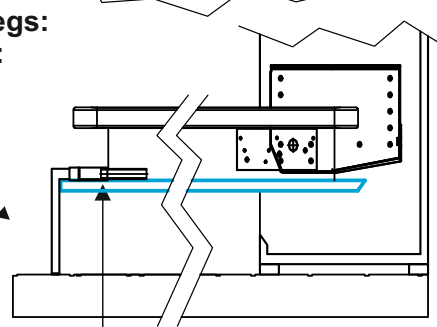

Bed leg mounted on
 door panel


8

**Regulation of the spring tension by acting on the bolt placed
 on the back of the springs**

**To obtain a perfect regulation the bed must stop in each
 opened position you may leave it. CHECK if the screws of left and right
 regulation are both fastened in the same position. Regulate the screws on the
 same turn for left and right one.**

Ajuster la tension des ressorts à l'aide du boulon situé à l'arrière du boîtier.

*Pour obtenir un ajustement idéal, le lit doit rester immobile, peu importe
 sa position.*

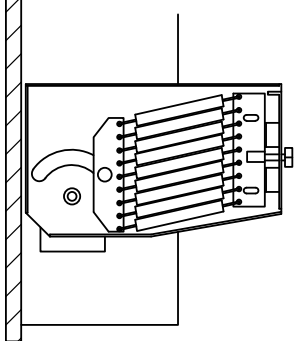

PAY ATTENTION:
**DON'T REMOVE
 THE SCREW COMPLETELY**

**PRENEZ GARDE À NE PAS DEVISSER
 LE BOULON COMPLETEMENT**