

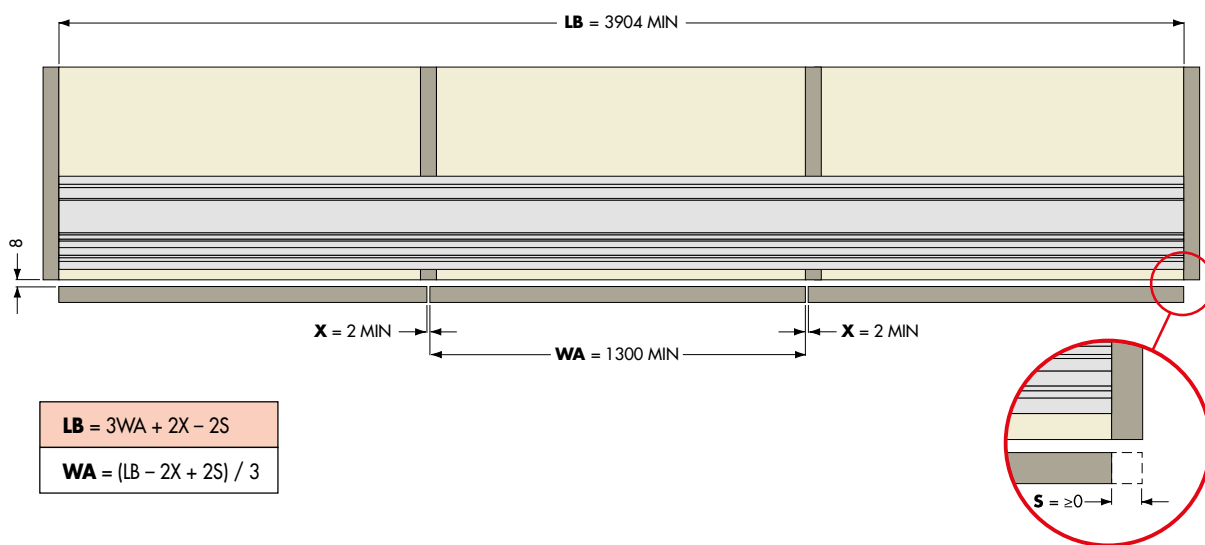





PS40.2 • Fiches techniques • Data sheets



$$LB = 3WA + 2X - 2S$$




$$WA = (LB - 2X + 2S) / 3$$

CHEVAUCHEMENT TOTAL DE LA PORTE
TOTAL OVERLAPPING OF THE DOOR

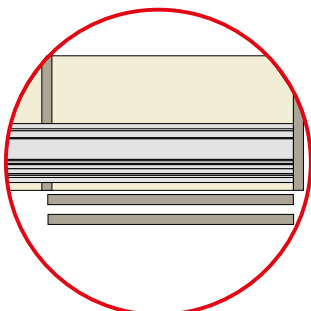

ABRÉVIATIONS:
LB = largeur rail
WA = largeur porte
S = chevauchement

ABBREVIATIONS:
LB = rail length
WA = door width
S = overlapping

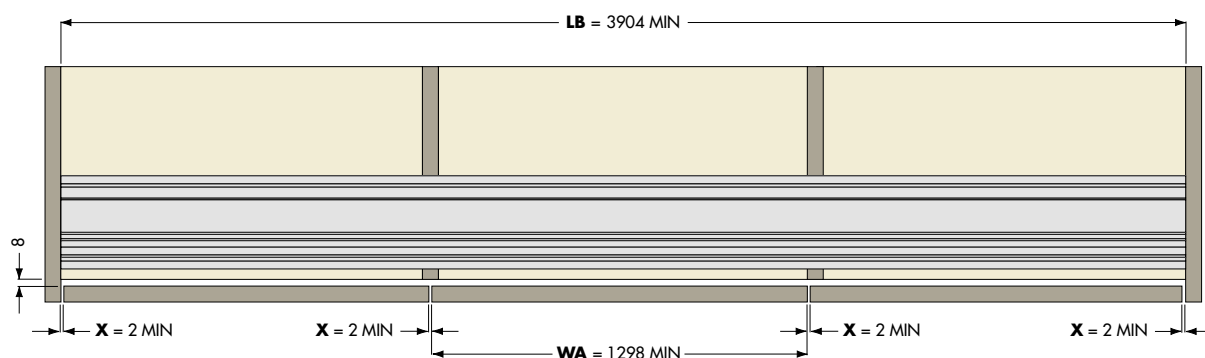

$$LB = 3WA + 4X$$

$$WA = (LB - 4X) / 3$$

ABRÉVIATIONS:
LB = largeur rail
WA = largeur porte
S = chevauchement

ABBREVIATIONS:
LB = rail length
WA = door width
S = overlapping