



TP-SDG Attachment Instructions


Drawer Hardware Installation

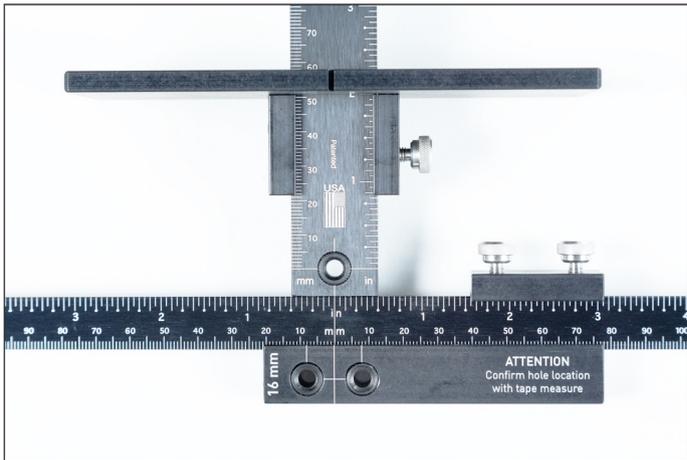


- 1 Attach and center **SDG attachment** to center line on T-Square.

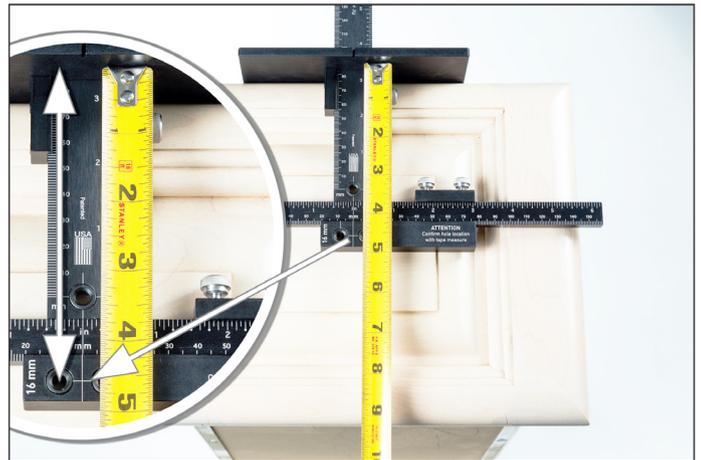

- 2 Measure height of **drawer front**, adjust **top stop** to desired height using tape measure, **reference index mark on SDG attachment**.

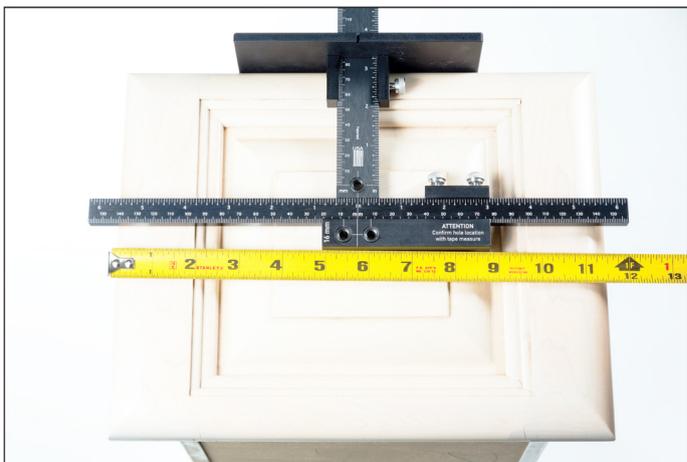


- 3 Center **T-Square** on **drawer front** referencing **center mark** on top stop or SDG attachment.

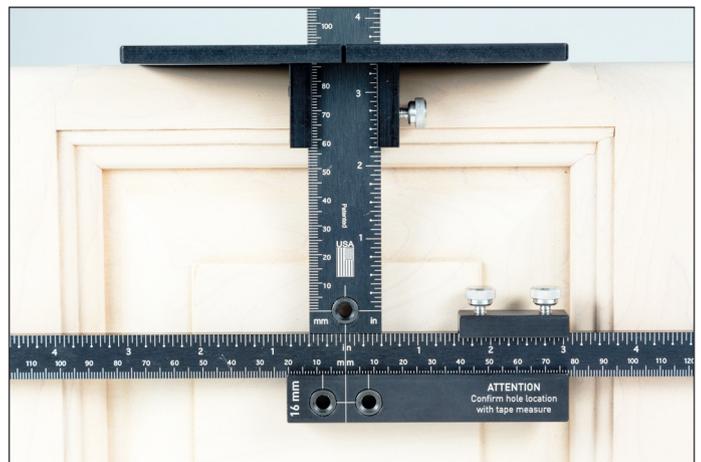


- 4 Secure jig by hand or with clamp and drill.

ATTENTION: Confirm hole locations with tape measure from appropriate stops to holes using index marks on SDG 3.16/32 accessory guide.

Door Hardware Installation

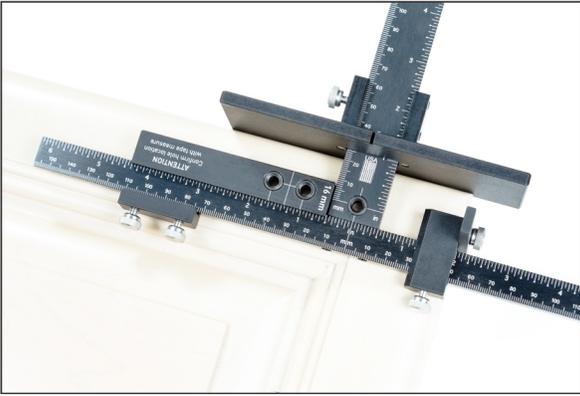

- ① Attach **SDG attachment** to **T-Square**, set desired location of hardware.

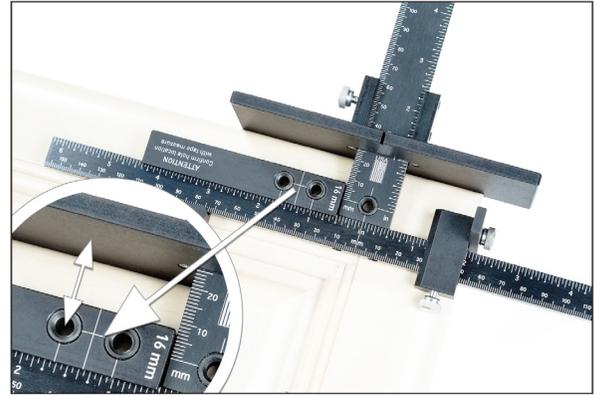

- ② Adjust **top stop** to desired distance from edge of door to the **center index** on **SDG attachment**.



- ③ Adjust **end stop** to desired distance from hardware hole pattern.



- ④ Secure jig by hand or with clamp and drill.



- ⑤ Simply **flip over T-Square** to quickly repeat settings on **paired doors**.

ATTENTION: Confirm hole locations with tape measure from appropriate stops to holes using index marks on SDG 3.16/32 accessory guide.