



Mitered Tubular Pull Handle

Installation Manual


► Measurements

CODE	Material	C/C
87D2R1028XXX	SUS316	8"

*Available in several finishes

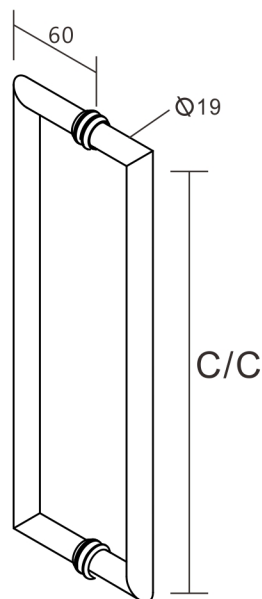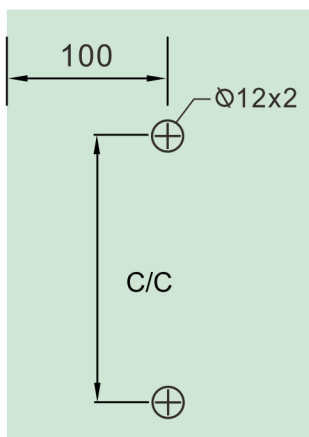

► Components

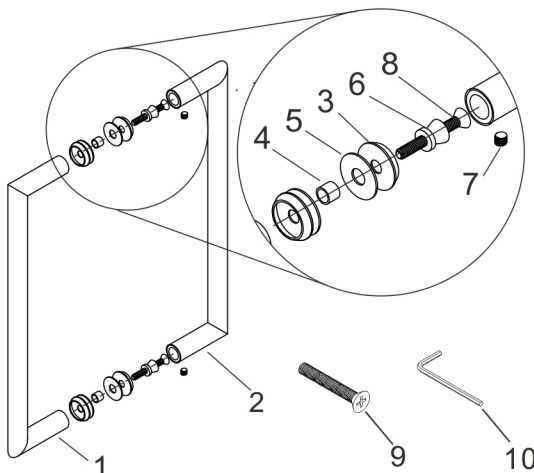


#	Name	Qty
1	Exterior Handle	1
2	Interior Handle	1
3	Metal Washer dia25mm	4
4	Plastic Washer	2
5	Gasket	4
6	Collar	2
7	Set Screw M5X5mm	2
8	Screw M6x40mm	2
9	Screw M6x80mm	2
10	Allen Key 2.5mm	1

Mitered Tubular Pull Handle


Installation Manual

Install the exterior handle as shown with one gasket and metal washer on each side of the glass.

- ★ Phillips screwdriver not included
- ★ Use the 40mm screw for glass doors 6-12mm thick
- ★ Use the 80mm screw for wood doors 35-50mm thick

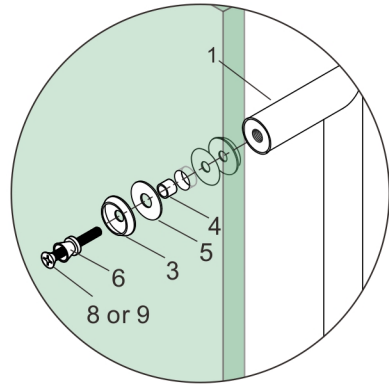

Install the interior handle onto the collars.

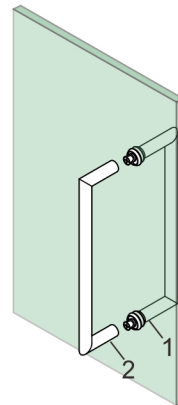

Install the set screws and tighten with the Allen key to finish the installation.

