ART. 8420012

MOUNTING
MONTAGE


DON'T FORGET TO SEE THE «FOCUS ON» DOCUMENT

N'OUBLIEZ PAS DE CONSULTER LE DOCUMENT "FOCUS ON"

Make sure to fix your cabinet to the wall.
As wall materials vary, plates and screws for fixing to wall are not included.
Warning: you must be ensured that during the handling of folding bed there is no people, animal or things in the area or on the bed. They may be bumped during movement.


ASSUREZ-VOUS DE FIXER VOTRE CABINET AU MUR.
COMME LE MATÉRIEL DES MURS PEUT VARIER, LES PLAQUES ET LES VIS POUR LA FIXATION AU MUR NE SONT PAS INCLUSES. **ATTENTION:** LORS DE LA MANIPULATION DU LIT, ASSUREZ-VOUS QU'IL NY AIT PAS DE GENS, ANIMAUX OU DES CHOSES À PROXIMITÉ DU LIT. ILS POURRAIENT ÊTRES HEURTÉS DURANT LE MOUVEMENT.

1

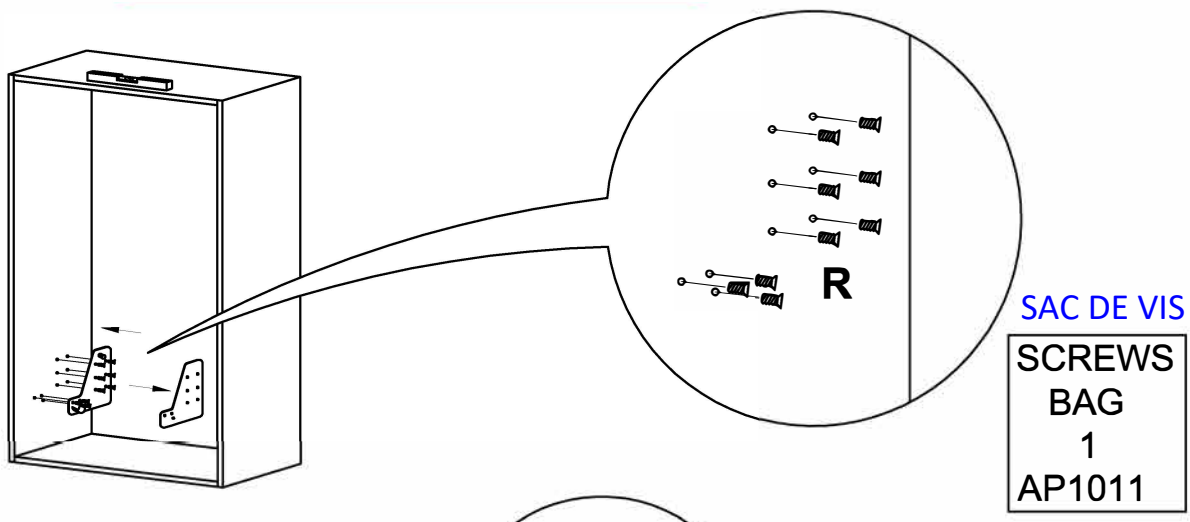


SAC DE VIS
SCREWS BAG 1 AP1011

2

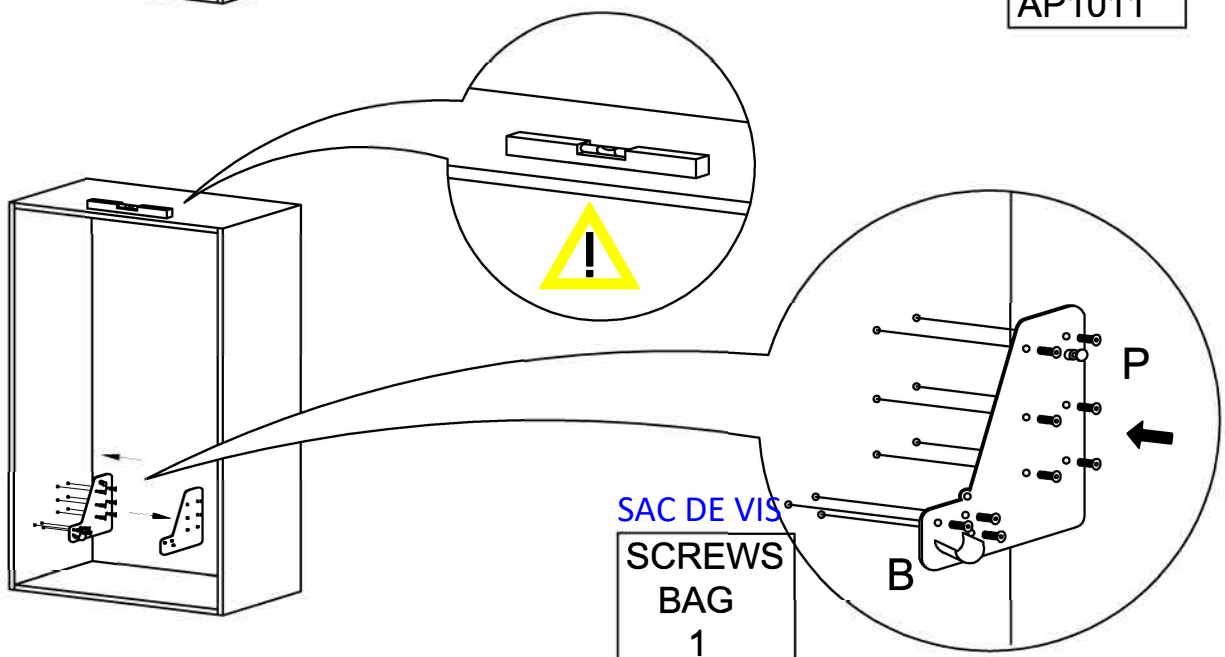


SAC DE VIS
SCREWS BAG 1 AP1005


3

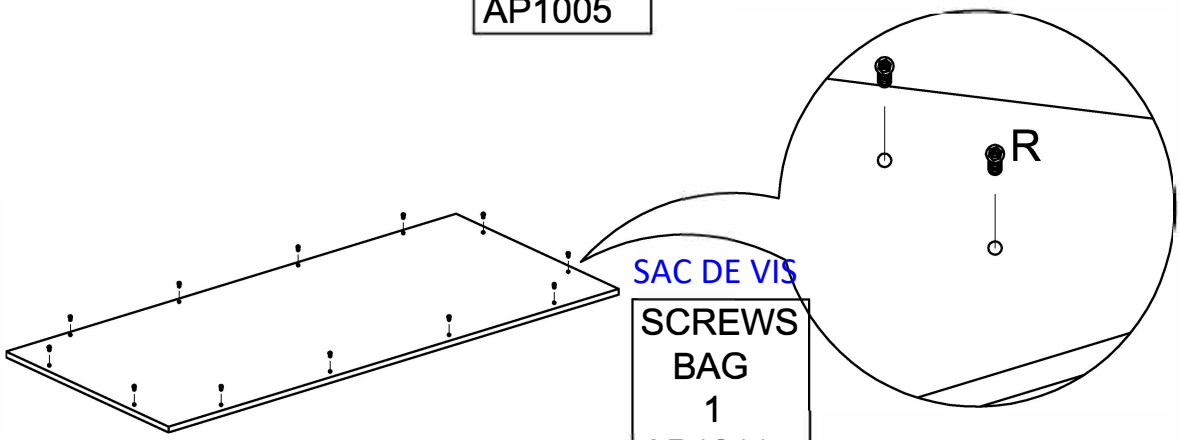


SAC DE VIS
SCREWS BAG 1 AP1011

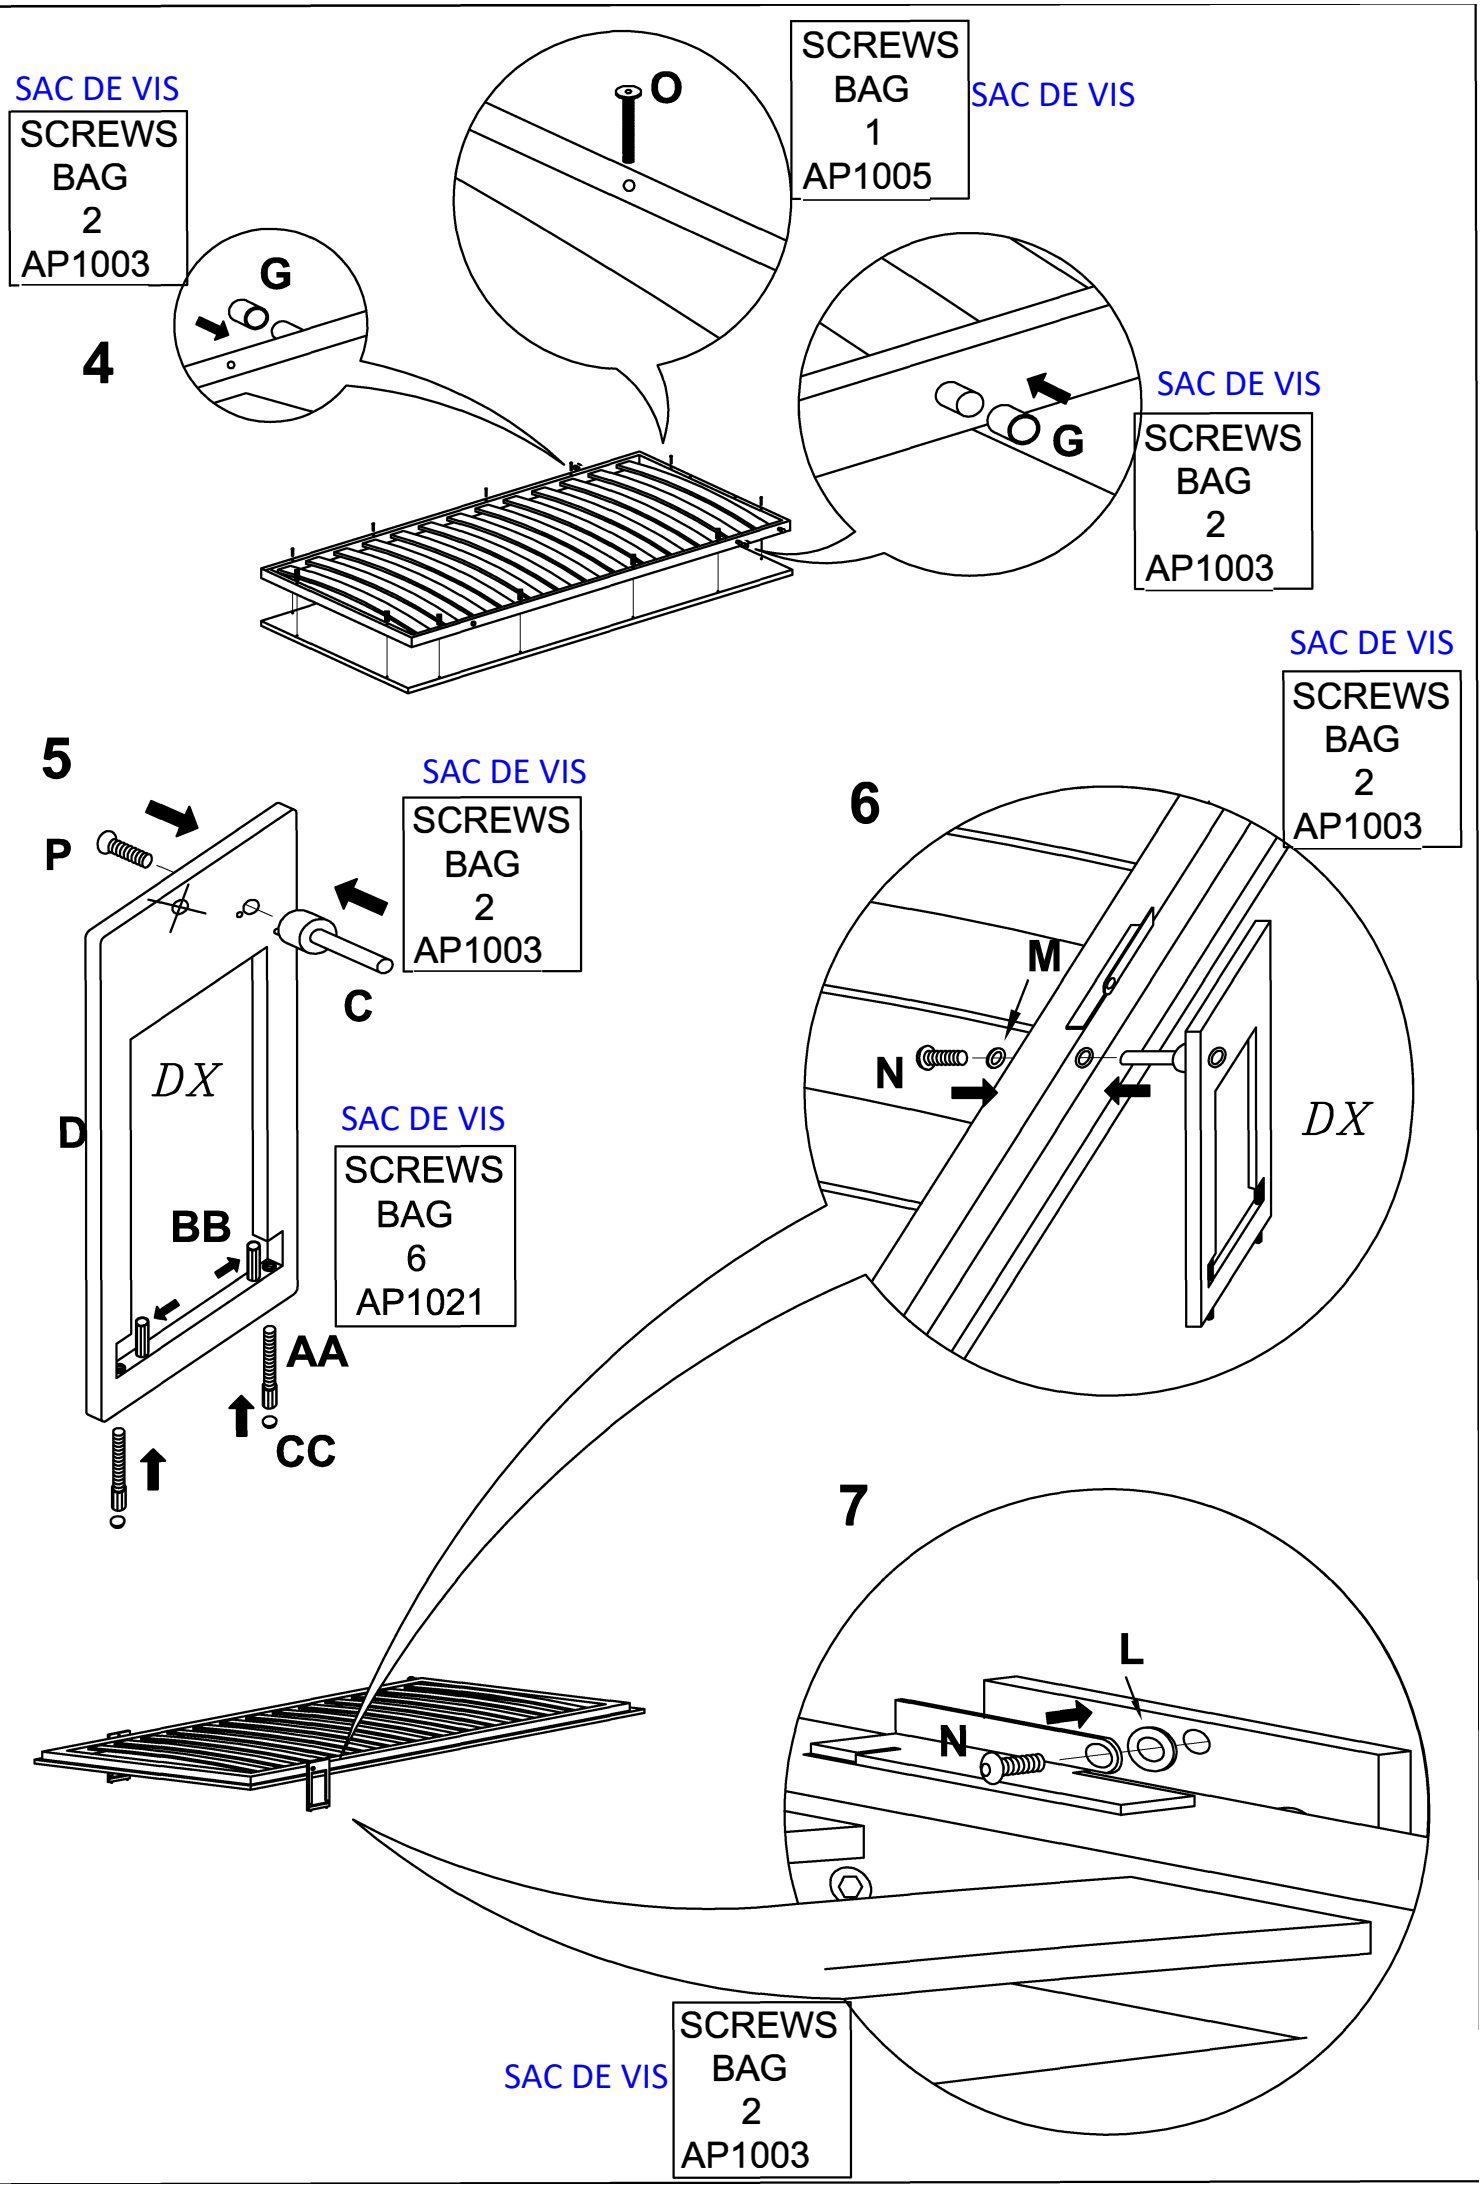
SAC DE VIS
SCREWS
BAG
2
AP1003
4
G
O
SCREWS
BAG
1
AP1005
SAC DE VIS
SAC DE VIS
G
SCREWS
BAG
2
AP1003
SAC DE VIS
SCREWS
BAG
2
AP1003
5
P
SAC DE VIS
SCREWS
BAG
2
AP1003
C
DX
D
SAC DE VIS
SCREWS
BAG
6
AP1021
BB
AA
CC
6
M
N
DX
7
L
N
SAC DE VIS
SCREWS
BAG
2
AP1003


8

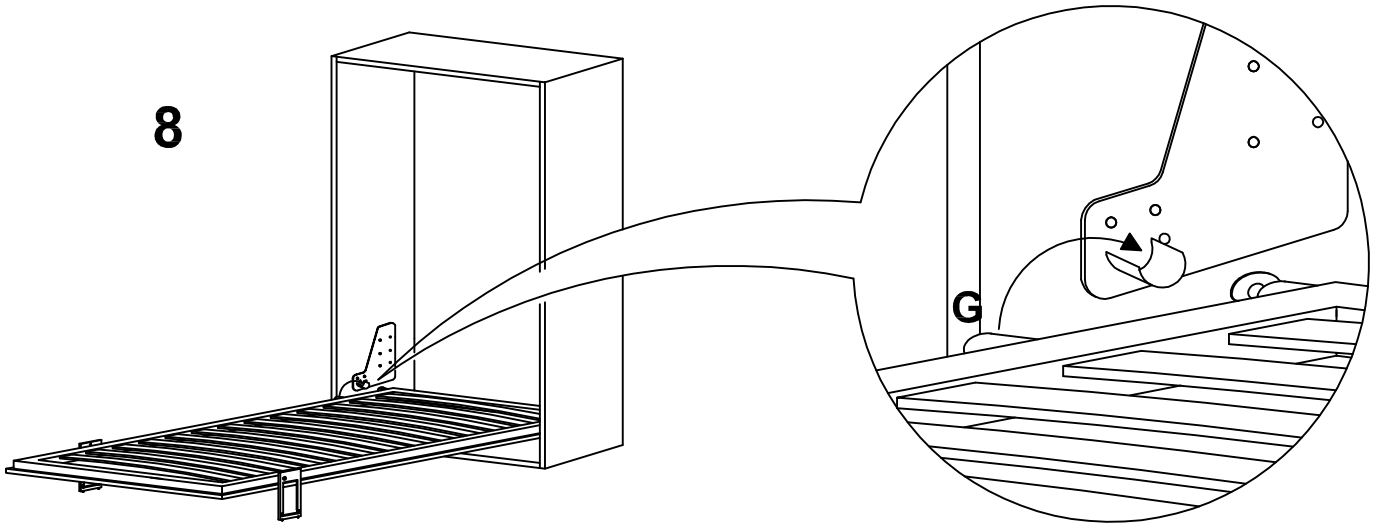


9

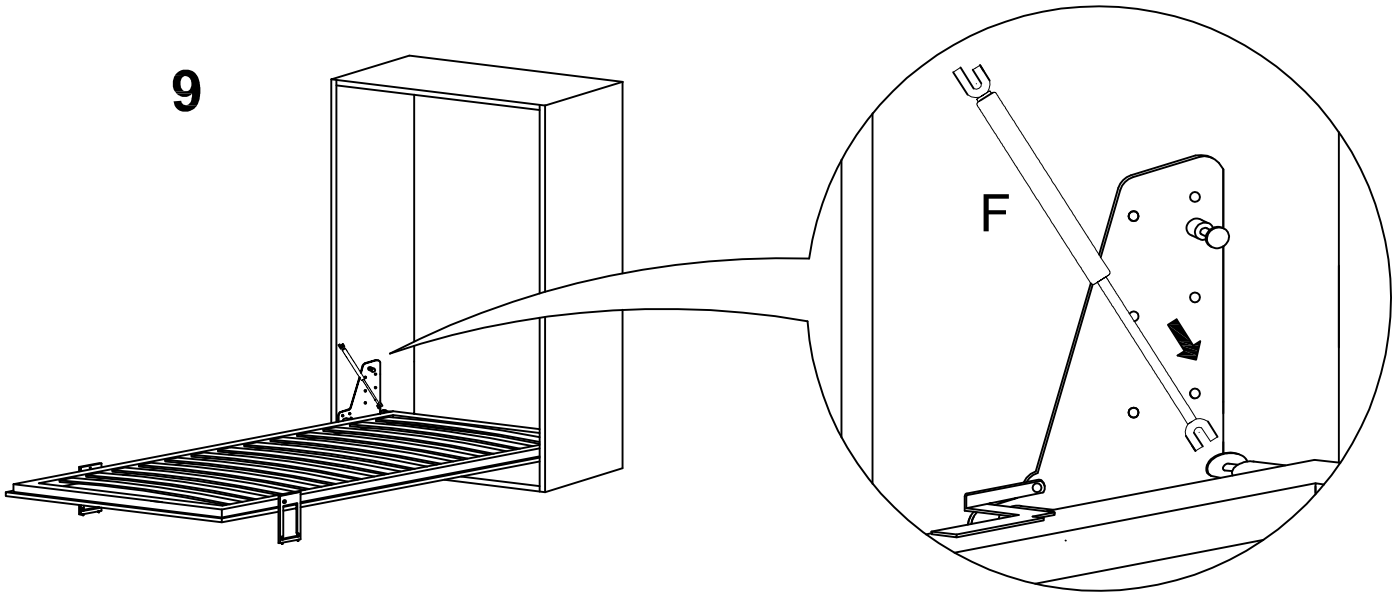


10

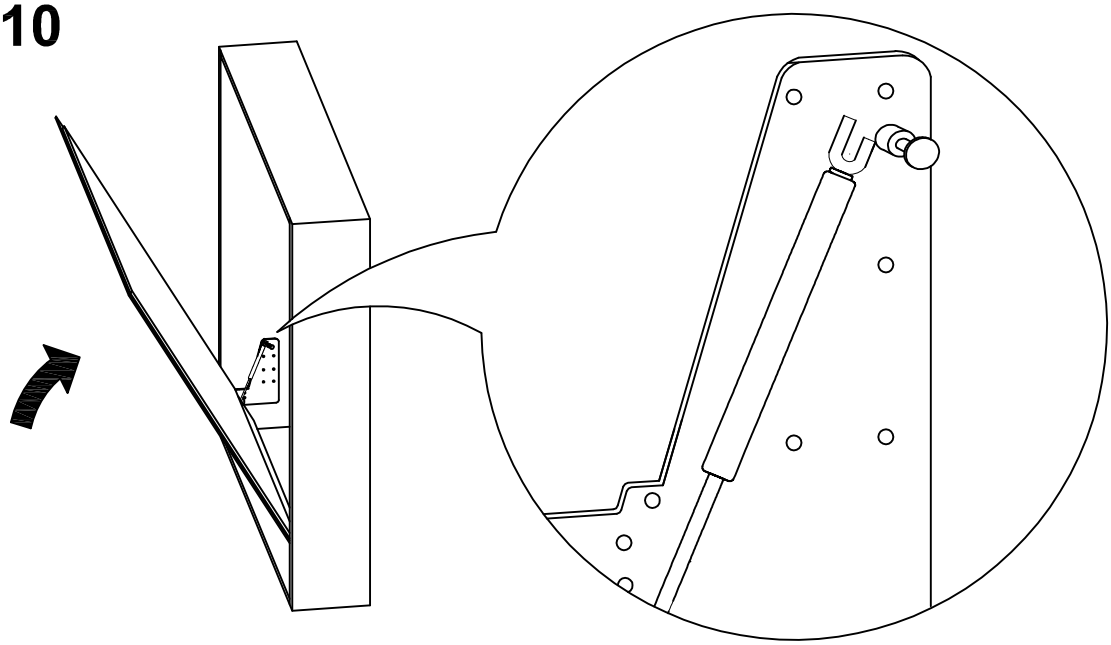


11

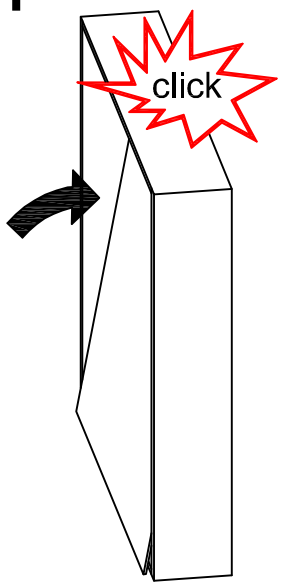

12

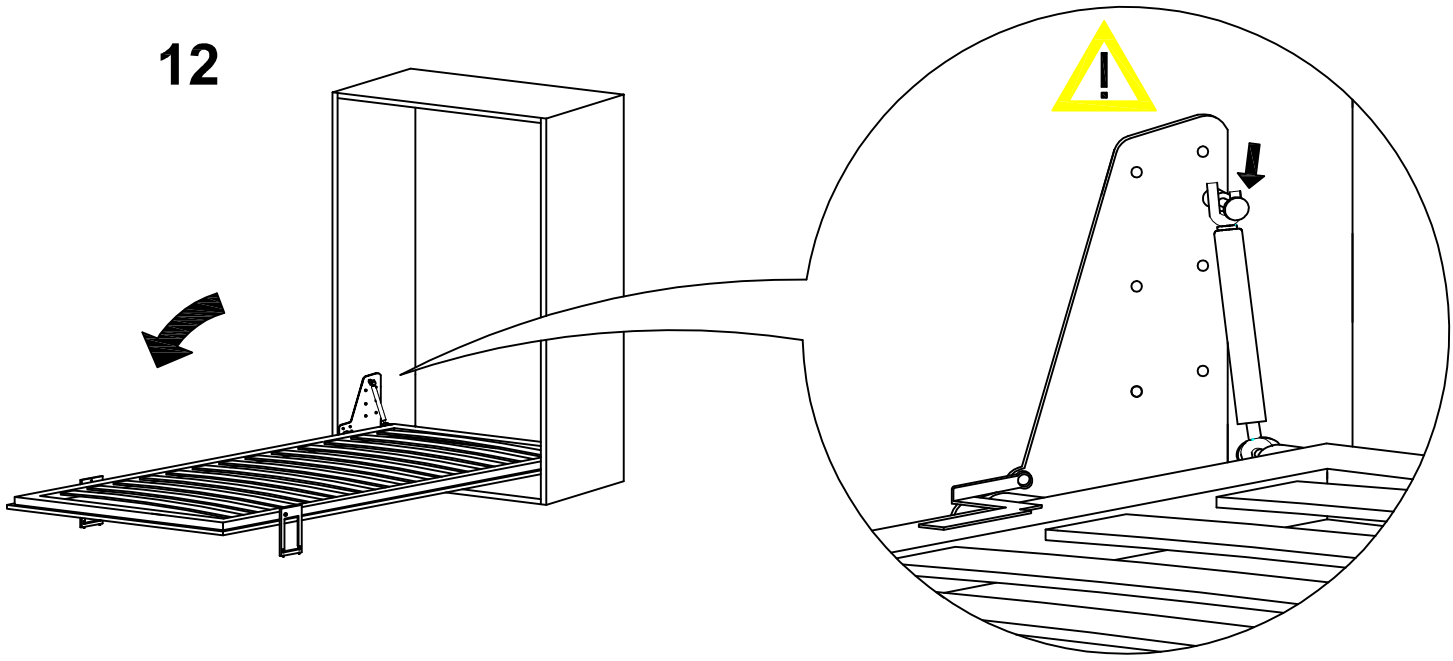


13

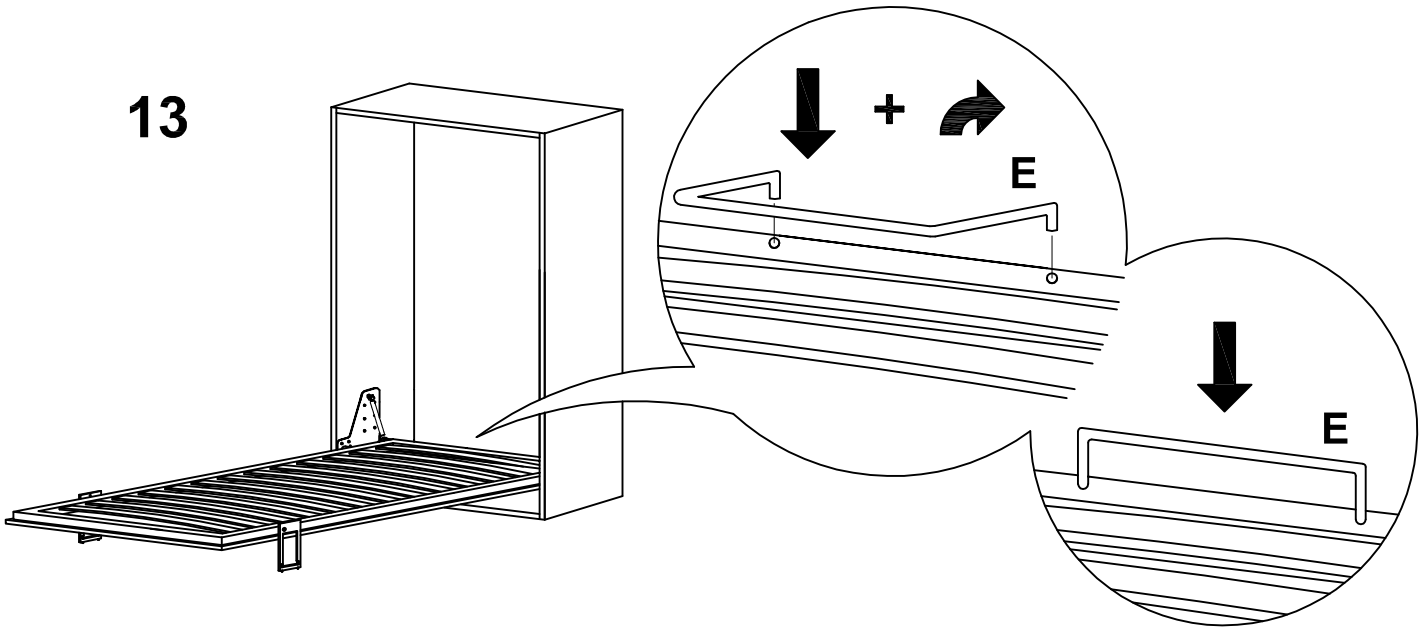

SAC DE VIS

SCREWS
BAG
2
AP1003

14

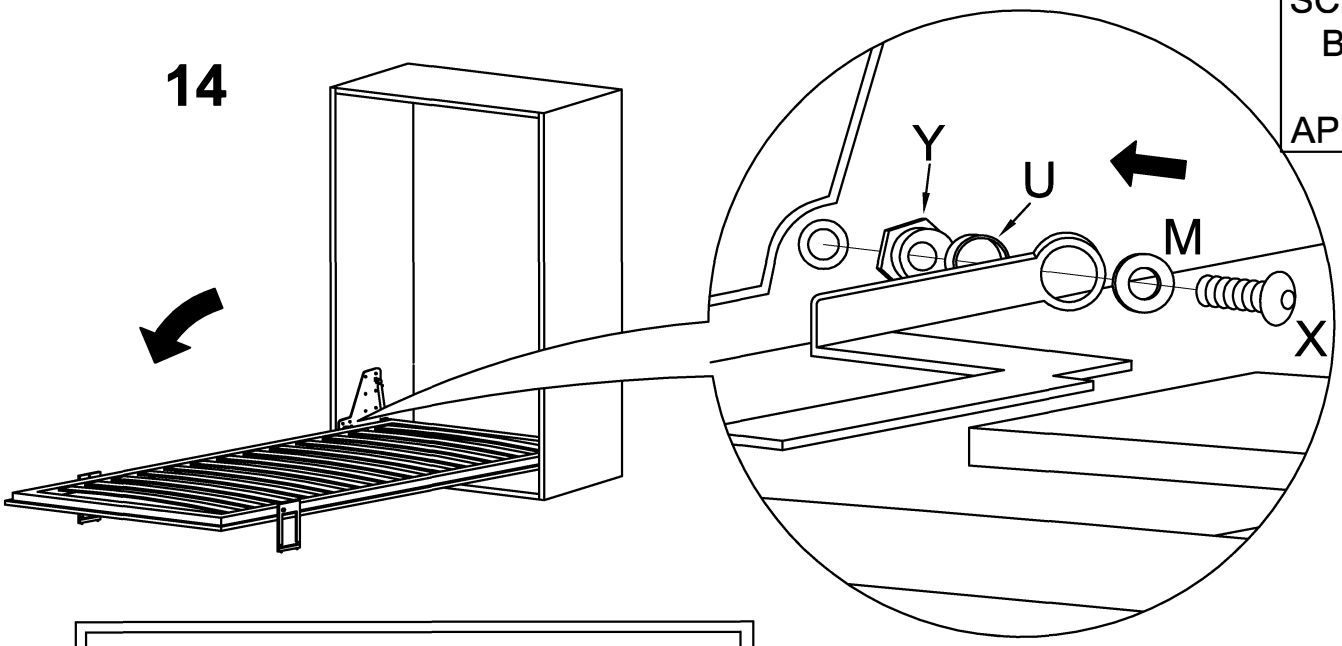

CORRECT ADJUSTMENT

1 OPEN THE BED

2 PUT THE FEET PARALLEL TO THE FLOOR

3 SET THE SCREW (X)


AJUSTEMENT CORRECT

1- OUVREZ LE LIT
2- METTES LES PATTES EN PARALLÈLE AU SOL
3- RÉGLER LA VIS (X)

SAC DE VIS

SCREWS
BAG
2
AP1003


15

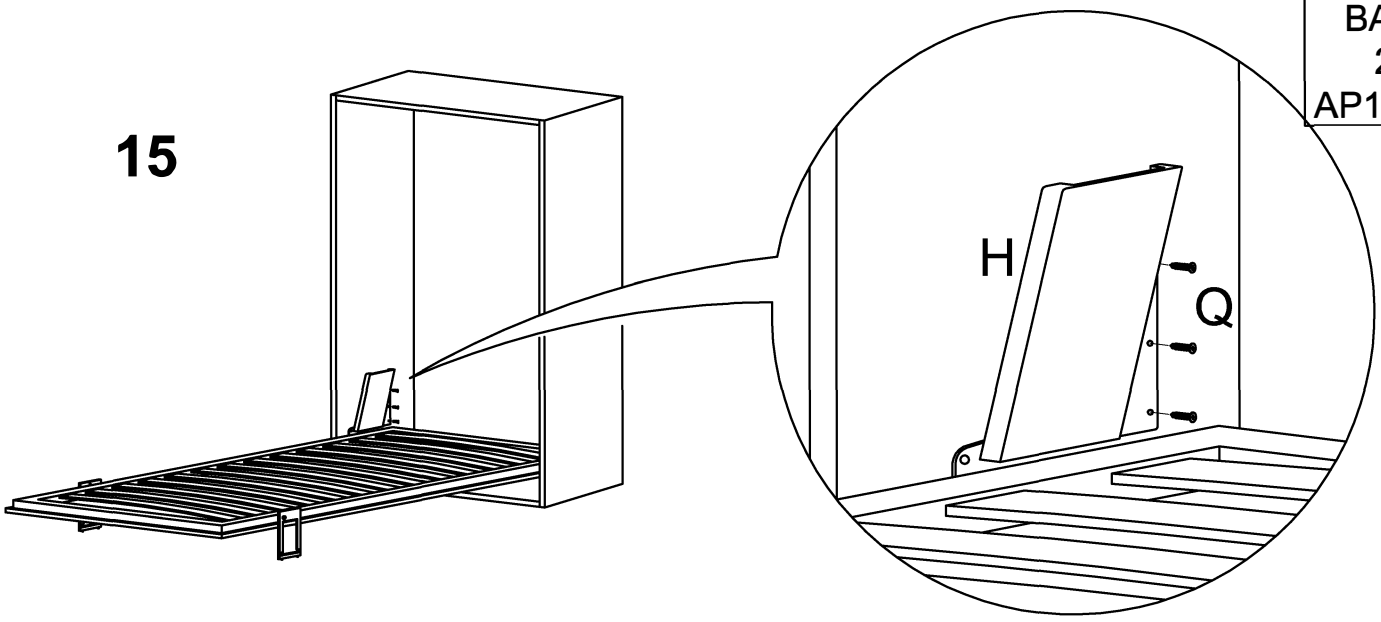

SAC DE VIS

SCREWS
BAG
A
AP1000


16

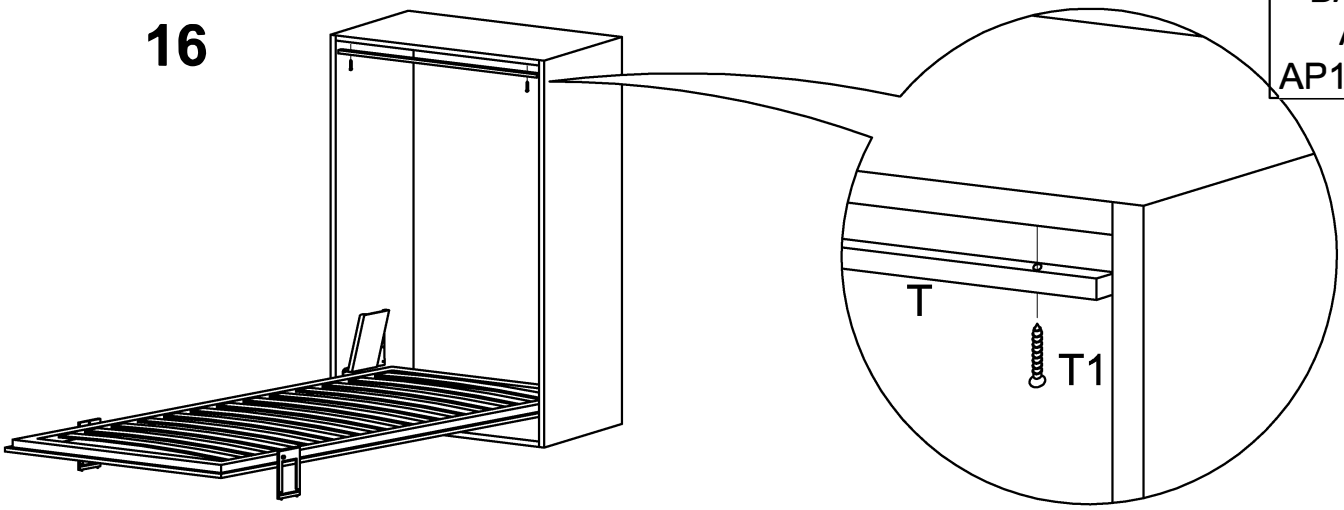

SAC DE VIS

SCREWS
BAG
A
AP1000

17

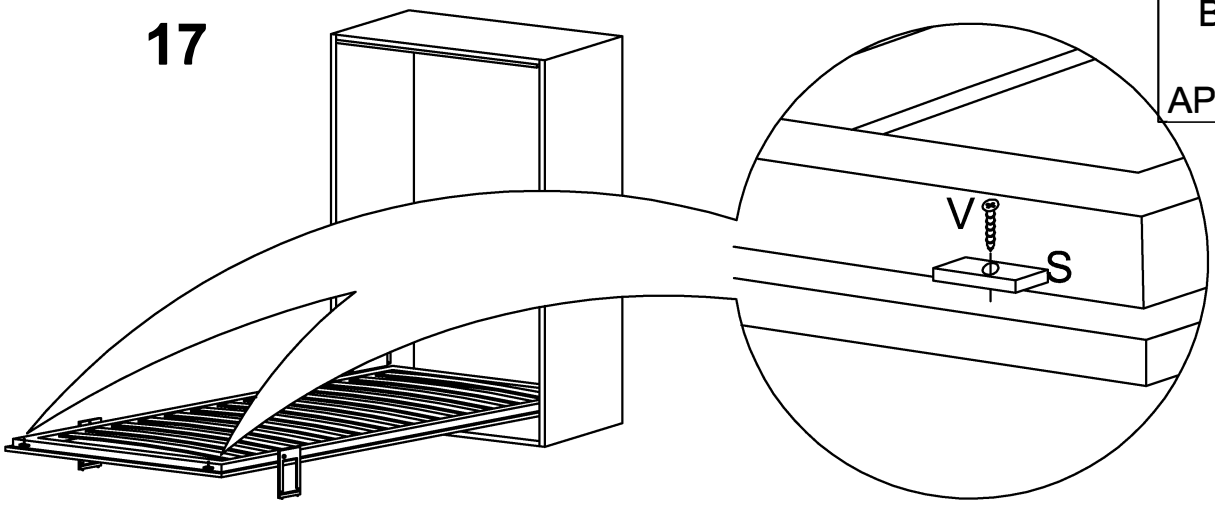

18

