Mounting plates • 2-way adjustment - 2 cams
Embases • 2 réglages – 2 vis excentriques

Double cam - Inset face-frame applications • *Vis excentrique double - Application intérieure face frame*

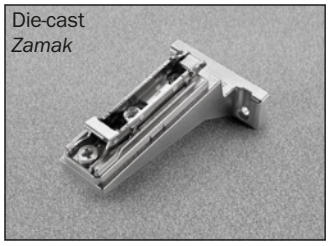

7x32 Screw-in *7x32 A visser*		Packaging Emballage
	BAL3R59	300

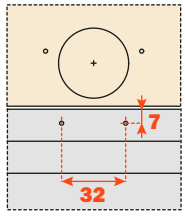

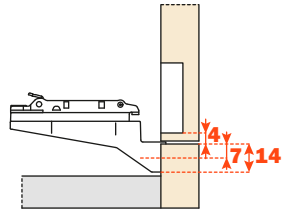

To be used with:
1) Half overlay hinges (“G” crank)
2) $^{1}/_{2}$″ overlay hinges (“D” crank) + adjustment.
Fix with #6 x 5/8″ truss head recommended.

A utiliser avec:
1 - Demi recouvrement/Portes jumelées (bras “G”)
2 - Face frame à encadrement (bras “D”) + réglage
Nous recommandons la fixation avec vis à tête de ferme #6 x 5/8˝

Double cam - Rear flange face-frame applications • *Vis excentrique double - Pour les applications face frame à l’intérieur du cadre*

10x45 Screw-in *10x45 A visser*		Packaging Emballage
	BA03R59	150

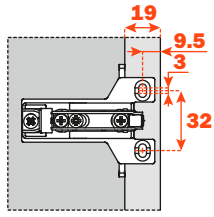

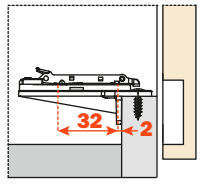

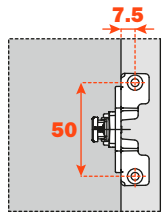

Overlay calculation:
Overlay = constant + Drilling distance - 5 mm
This wrap-around mounting plate allows attaching to both the edge of the frame as well as attaching to the back of the frame.
It is ideal for many specialized applications that include cabinet refacing when an up-to-6mm veneer is added to the face of the frame.
In this application, this plate design allows the fixing screws to remain in the center of the solid wood frame thus avoiding the joint between the frame and the surfacing material. Some manufacturers do not use solid wood framing material but other materials such as plywood or MDF. Since these materials do not provide suitable screw holding power on the edge of the material, this plate can be secured both to the back surface of the frame and the edge. This results in an acceptable, secure attachment.

Calculer le recouvrement :
Recouvrement = constante + distance de perçage – 5 mm
Cette embase enveloppante permet de la fixer aussi bien sur le bord du cadre qu’à l’arrière du cadre. Elle est idéal pour de nombreuses applications spécialisées y compris les revêtements du meuble lorsqu’un placage de jusqu’à 6 mm est ajouté à la face du cadre. Dans cette application, cette conception d’embase permet aux vis de fixation de s’enfoncer au centre du cadre en bois massif, évitant ainsi le joint entre le cadre et le matériau de recouvrement. Certains fabricants n’utilisent pas de matériaux en bois massif, mais d’autres matériaux tels que le contreplaqué ou le MDF. Étant donné que ces matériaux n’offrent pas une force de maintien de vis adéquate au bord du matériau, cette embase peut être fixée à la fois à la surface arrière du cadre et au bord. Il en résulte une fixation acceptable et sûre.

Double cam - Large overlay face-frame applications • Vis excentrique double - Pour les applications face frame à l’intérieur du cadre

10x45 Screw-in *10x45 A visser*		Packaging *Emballage*
	BAM3R09	300

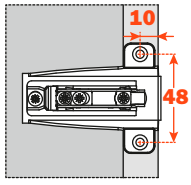

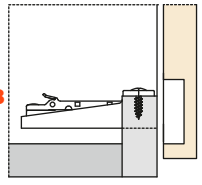

Overlay calculation:
Overlay = constant + Drilling distance + 11 mm

Calculer le recouvrement :
Recouvrement = constante + distance de perçage + 11 mm

Hinge ***Charnière***	**Overlay** ***Recouvrement***	**Drilling distance (K)** ***Distance de perçage (K)***
Full Overlay (“A” crank) • 110° - 120° opening *Plein recouvrement (bras “A”) • ouverture 110° - 120°*	1 - $^{1}/_{4}$″ overlay *recouvrement 1 - 1/4˝*	K = 6 mm
Full Overlay (“A” crank) • 94° - 165° opening *Plein recouvrement (bras “A”) • ouverture 94° - 165°*	1 - $^{3}/_{8}$″ overlay *recouvrement 1 - 3/8˝*	K = 8 mm + 1 mm of adjustment *K = 8 mm + réglage de 1 mm*
Full Overlay (“A” crank) • 165° + reduction clip • S2AF37X3 = 125° opening *Plein recouvrement (bras “A”) • 165° + arrêt S2AF37X3 = ouverture 125°*	1 - $^{1}/_{2}$″ overlay *recouvrement 1 - 1/2˝*	K = 12 mm
Full Overlay (“A” crank) • 165° + reduction clip • S2AF37X3 = 125° opening *Plein recouvrement (bras“A”) • 165° + arrêt S2AF37X3 = ouverture 125°*	1 - $^{9}/_{16}$″ overlay *recouvrement 1 - 9/16˝*	K = 14 mm