

Quickloc™ Assembly

1. Press Quickloc into the face board

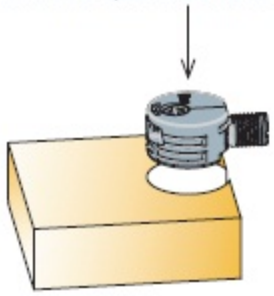

2. Assemble the panels

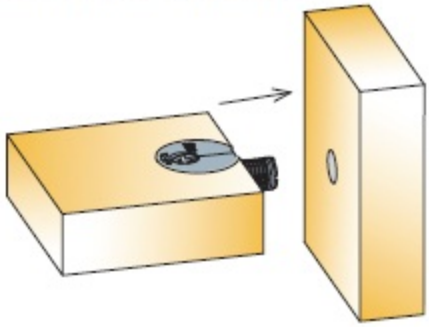

3. Tighten in less than one turn

