SFIC Interchangeable Core Cylinders

OLYMPUS LOCK INC

Installing SFIC cylinders into Olympus cabinet lock bodies



Figure 1

Step 1

Make sure the prongs inside the lock body are at the approximate angle indicated in ***(Figure 1)*** and the lock is in the fully locked or unlocked position.



Figure 2

Step 2

Insert key labeled CONTROL into cylinder and turn slightly clockwise to the 1:00 o'clock position ***(Figure 2)***. This will retract the locking bar ***(Figures 3 & 4)***.

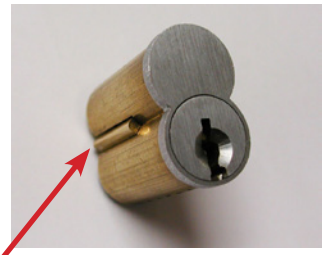


Figure 3

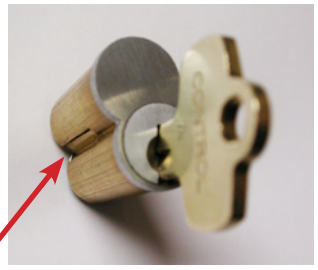


Figure 4



Figure 5

Step 4

With the CONTROL key in the 1:00 o'clock position, insert the cylinder all the way into the lock body ***(Figure 5)***.



Figure 6

Step 5

Return the CONTROL key to the 12:00 o'clock position ***(Figure 6)*** and remove the key. The cylinder will now be locked into the lock body ***(Figure 7)***.



Figure 7

Step 6

Reverse the above procedure to remove the cylinder from the lock body.

Copyright © 2020 Olympus Lock, Inc.