
INSTALLATION INSTRUCTIONS

7803 Combi-Cam 4-Dial Combination Cam Lock

OLYMPUS LOCK INC

GENERAL INFORMATION

- Fits standard 3/4" cam hole.
- 3/4" straight cam can be placed in increments of 90 degrees.
- 1-1/2" straight cam can be positioned in increments of 45 degrees.
- Optional offset cams can be installed in the inbent or outbent position.
- Cams can be set to rotate clockwise or counter-clockwise using 90 degree stop cam *(see **Stop Cam Placement** below)*

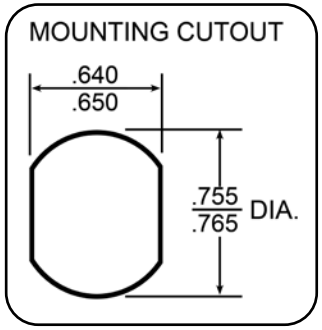

TO INSTALL THE COMBI-CAM

Step 1 Insert lock body through front of 3/4" drilled hole.

Step 2 ***For wood applications only*** — place wood prong washer over lock body on back of cabinet so that prongs are facing wood.

Step 3 Thread cylinder nut onto lock body and tighten into place.

Step 4 Attach stop cam and straight or offset cam and secure with cam screw *(not shown)* and lock washer *(not shown)*.

Follow the directions below to install the Combi-Cam such that the combination will be non-resettable by the end-user:

1. Take off the screw to the cam and remove the cam and the "stop cam."
2. Rotate the cylinder 180 degrees and then put the "stop cam" and the cam back on.

STOP CAM PLACEMENT

Determines swing of cam (left or right)



Cam will rotate right

Cam will rotate left

INCLUDED COMPONENTS



BACK OF LOCK



Copyright © 2025 Olympus Lock, Inc.