

## Installing SFIC cylinders into Olympus cabinet lock bodies



**Figure 1**  
Prong  
position

### **Step 1**


Make sure the prongs inside the lock body are at the approximate angle indicated in *(Figure 1)* and the lock is in the fully locked or unlocked position.



**Figure 2**


### **Step 2**

Insert key labeled CONTROL into cylinder and turn slightly clockwise to the 1:00 o'clock position *(Figure 2)*. This will retract the locking bar *(Figures 3 & 4)*.

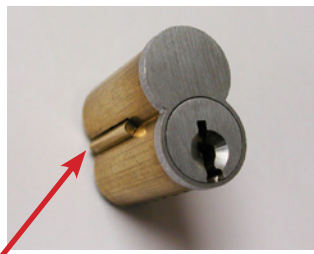

Locking  
Bar

**Figure 3**

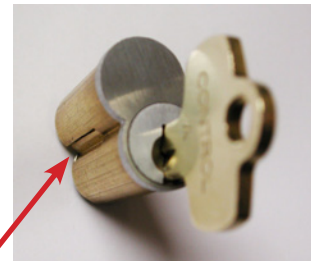

Control key  
will retract  
locking bar

**Figure 4**



**Figure 5**

### **Step 4**

With the CONTROL key in the 1:00 o'clock position, insert the cylinder all the way into the lock body *(Figure 5)*.



**Figure 6**

### **Step 5**

Return the CONTROL key to the 12:00 o'clock position *(Figure 6)* and remove the key. The cylinder will now be locked into the lock body *(Figure 7)*.



**Figure 7**

### **Step 6**

Reverse the above procedure to remove the cylinder from the lock body.