
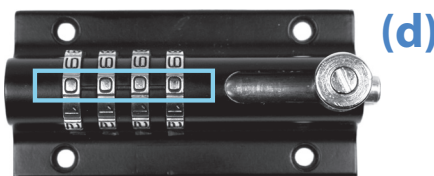
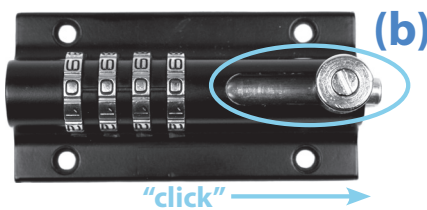


CB2000

Combi-Bolt Combination Lock

CHANGE/SET COMBINATION INSTRUCTIONS

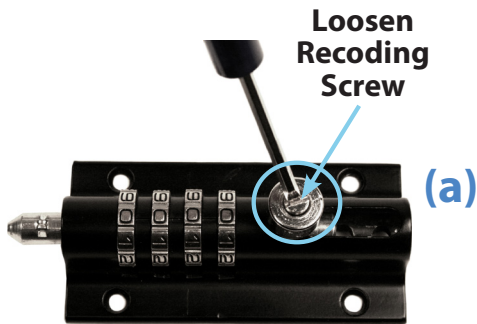

1. Set the combination to the number that opens the Combi-Bolt (factory default setting is **0-0-0-0**). The combination must be on the opening number prior to resetting.
2. Loosen recoding screw **(a)**
3. Lift the handle and move bolt to right until you feel it "click" **(b)**
4. With the bolt to the right, tighten recoding screw to keep the bolt in the recoding position while you set the new combination **(c)**
5. Set new code by turning dials to desired code (make a note of the new combination) **(d)**
6. Once code is set, loosen recoding screw and return bolt to the left position and tighten recode screw. **(e)**

(e) Once code is set, loosen recoding screw and return bolt to the left position and tighten recode screw.