
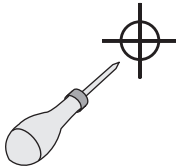
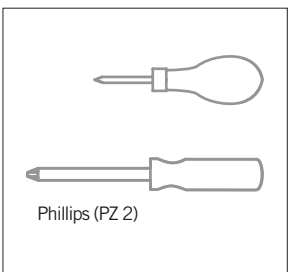
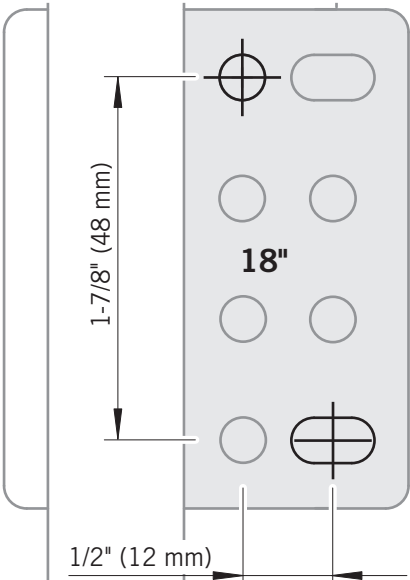
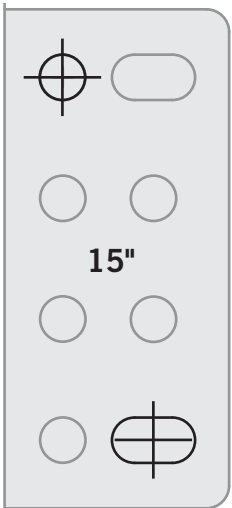
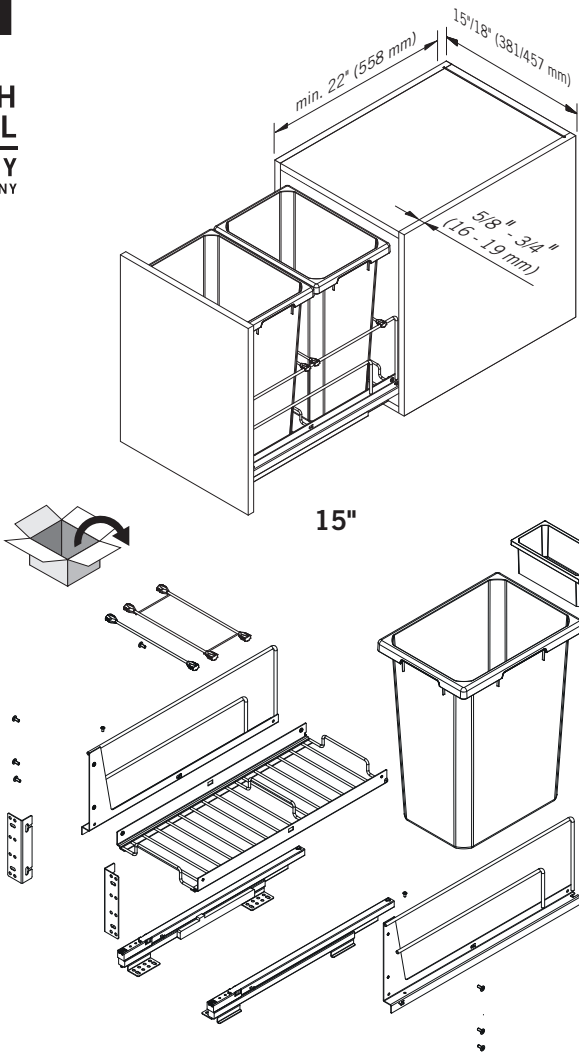
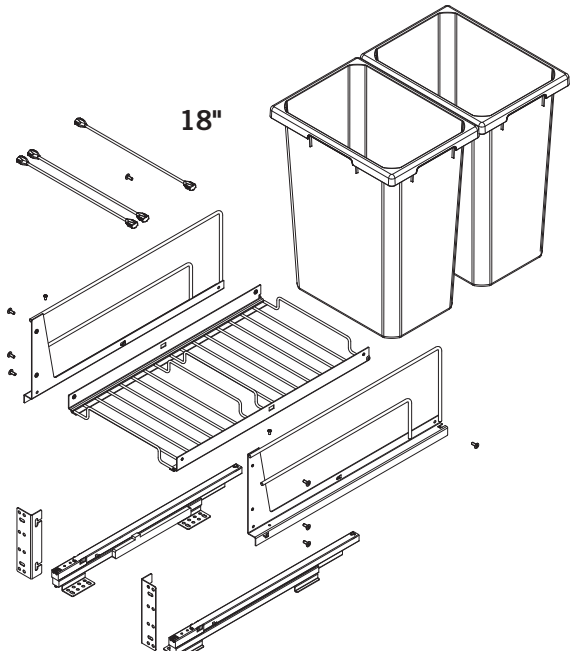
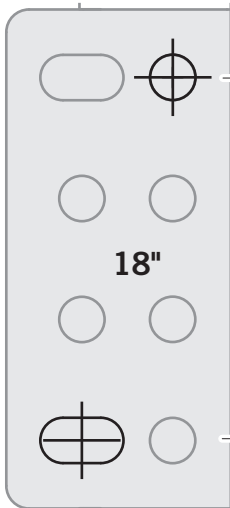
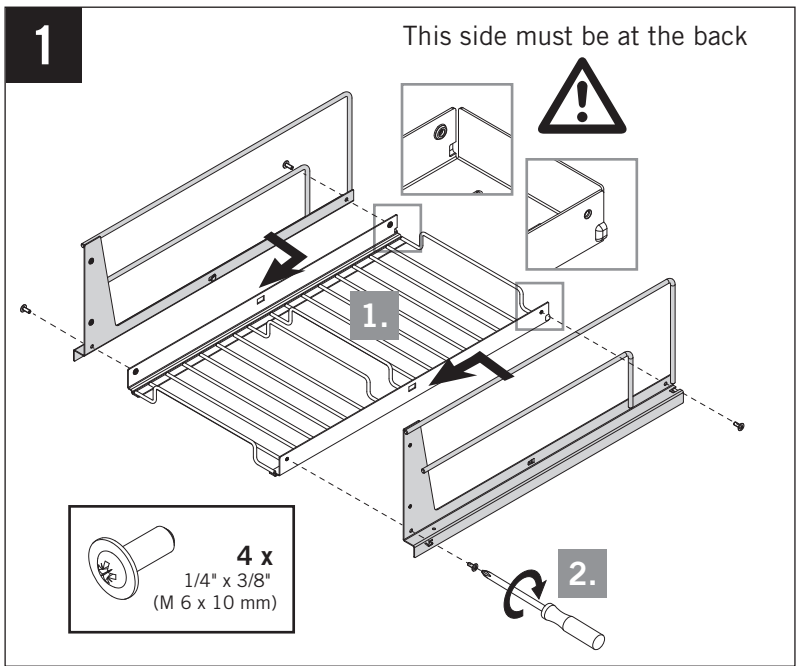
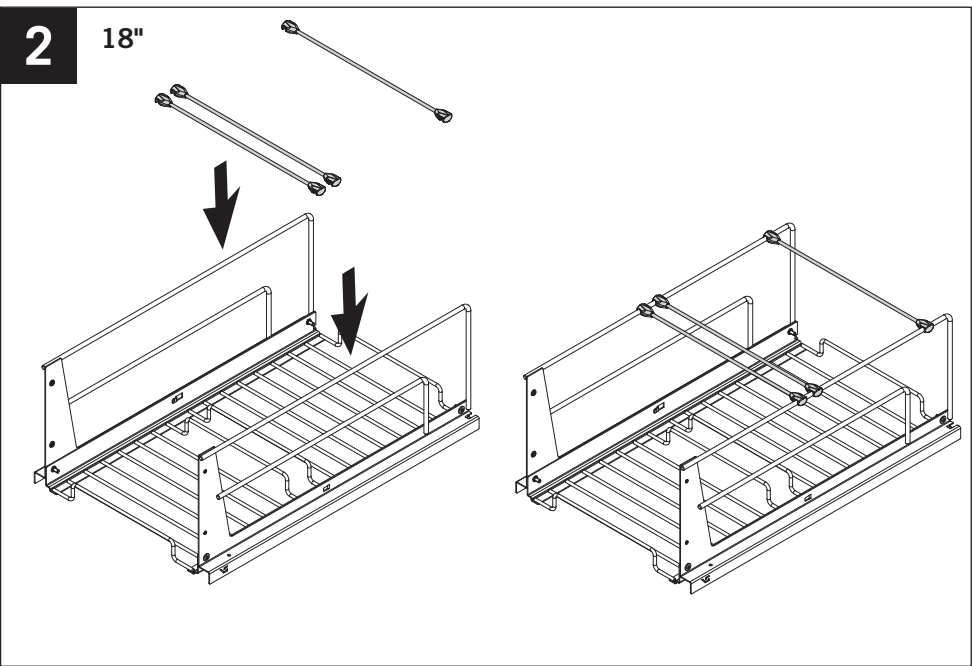
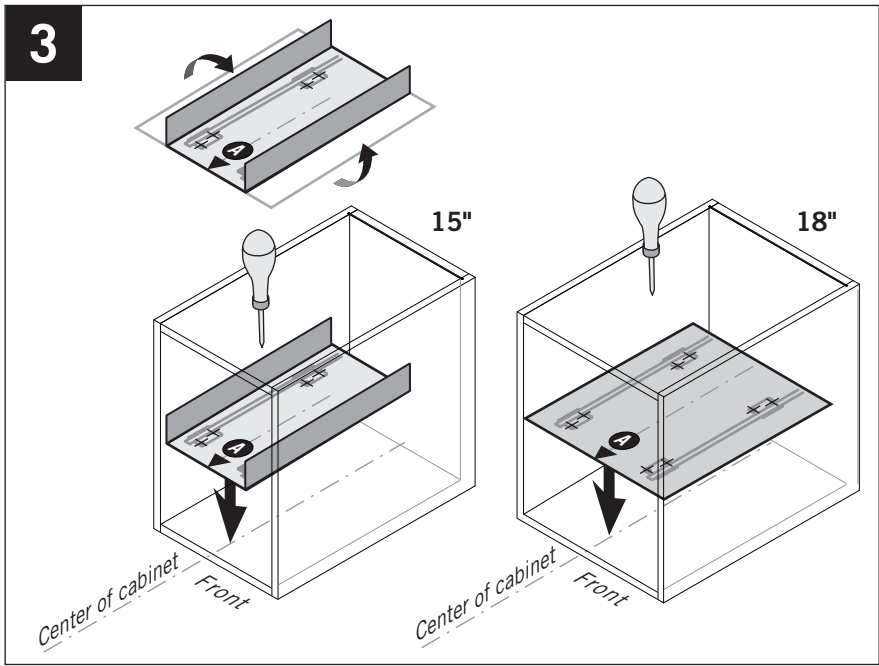
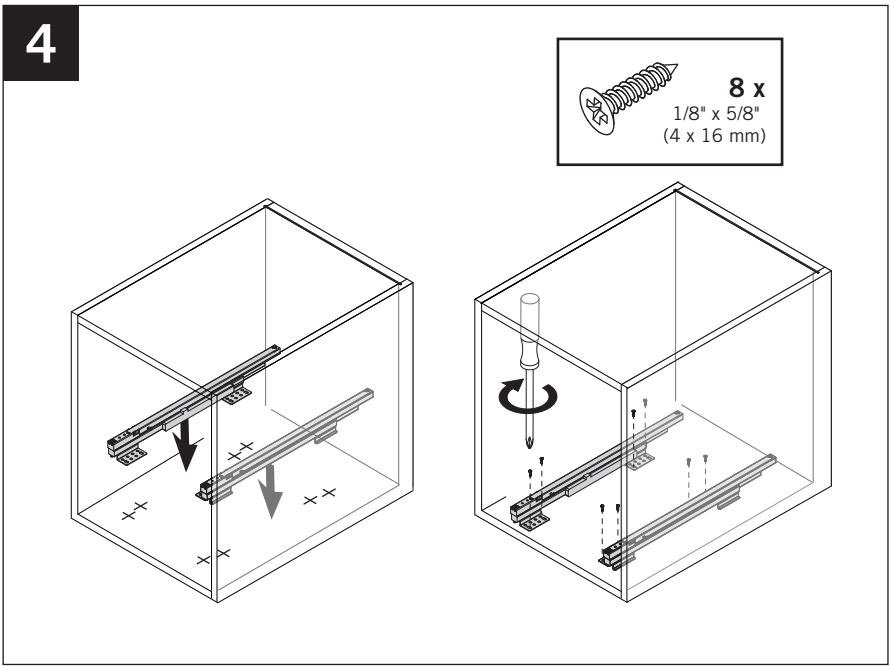


VS ENVI[®] BMT

Saphir











VAUTH
SAGEL
QUALITY
MADE IN GERMANY

For Frameless Cabinets

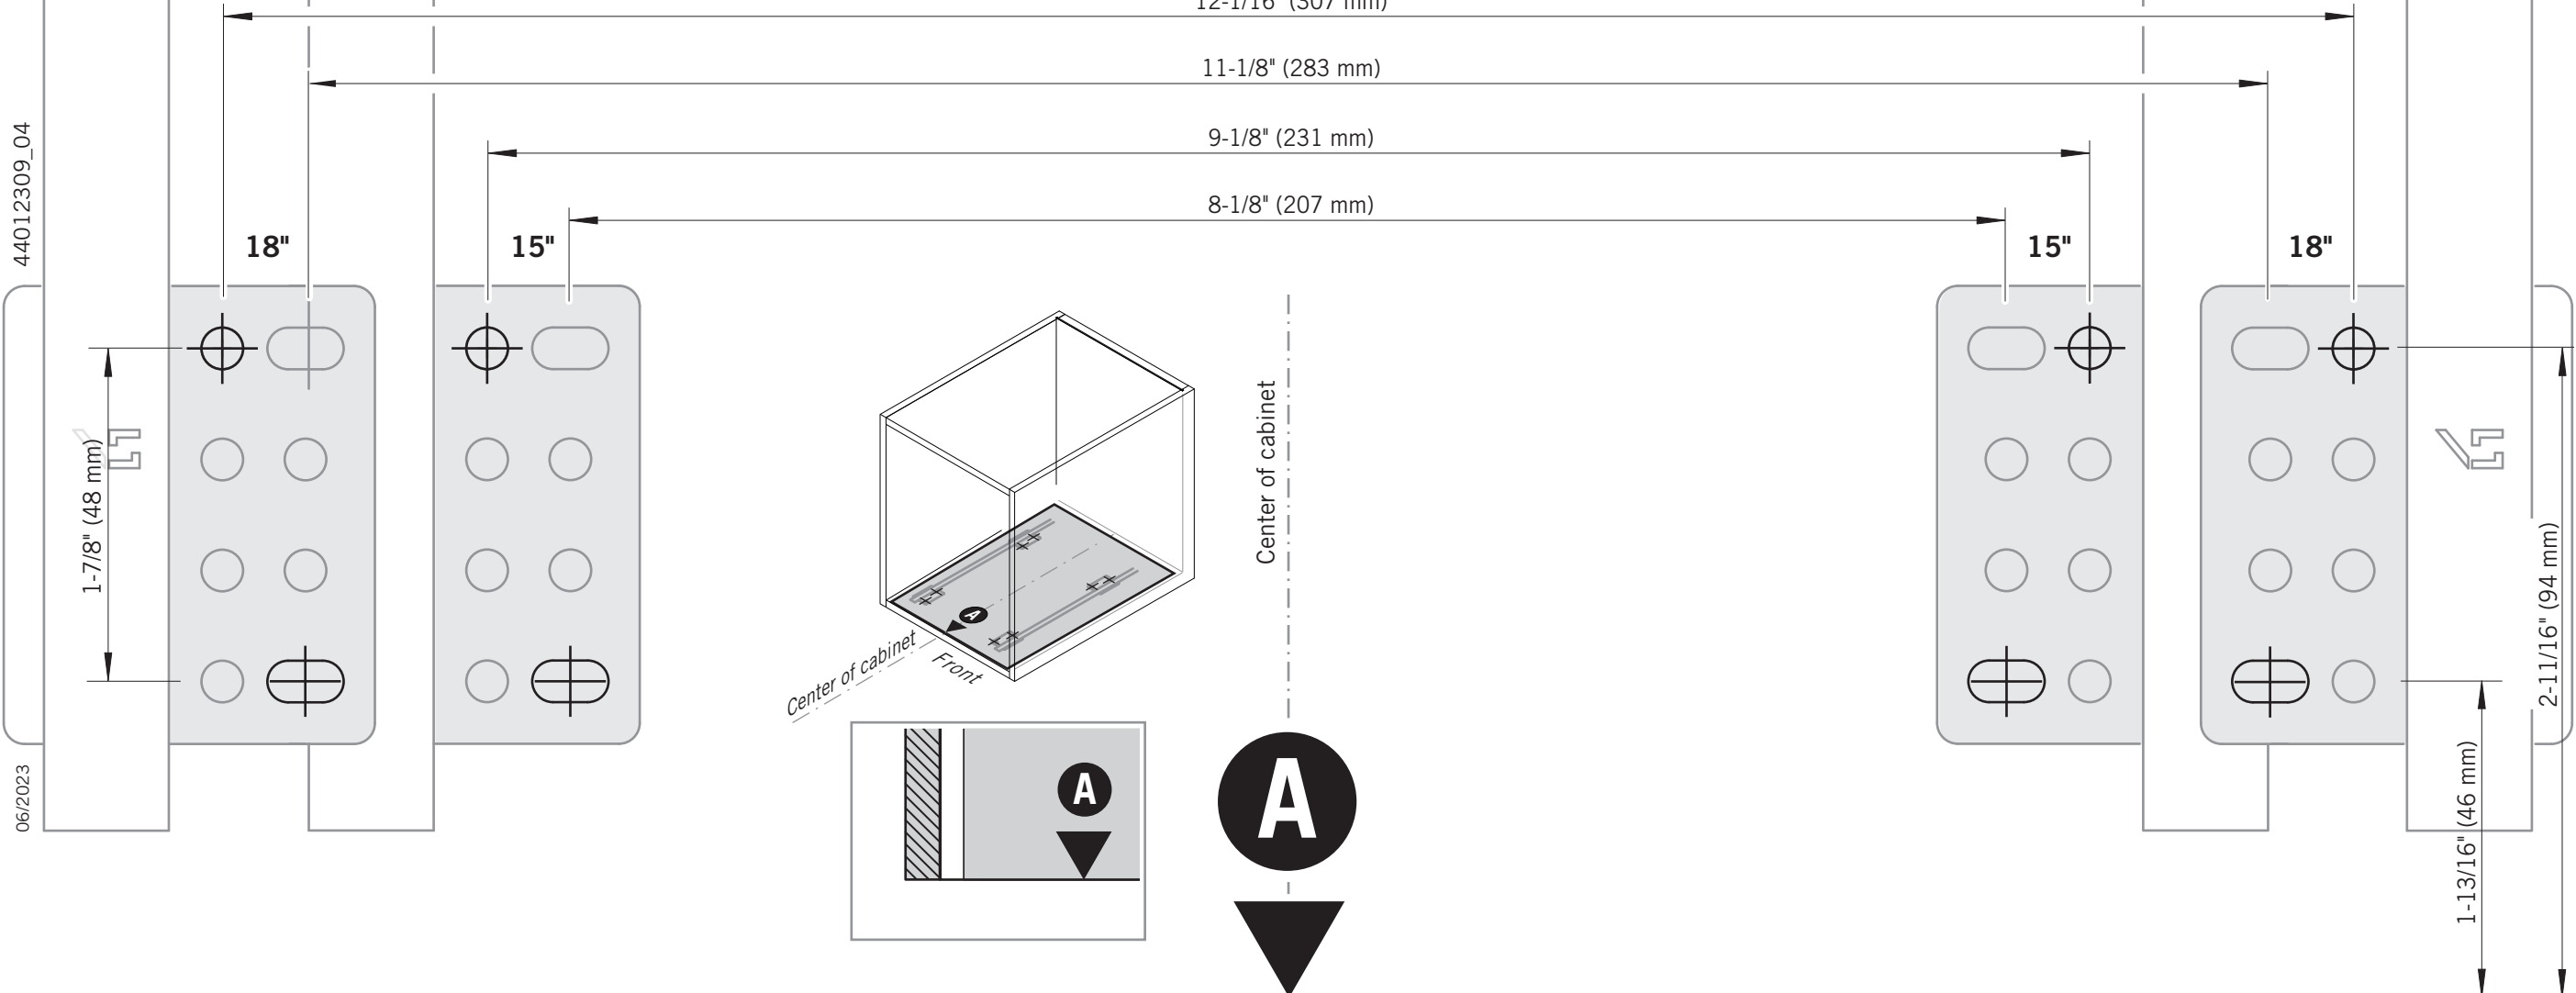





VS ENVI[®] BMT

Saphir

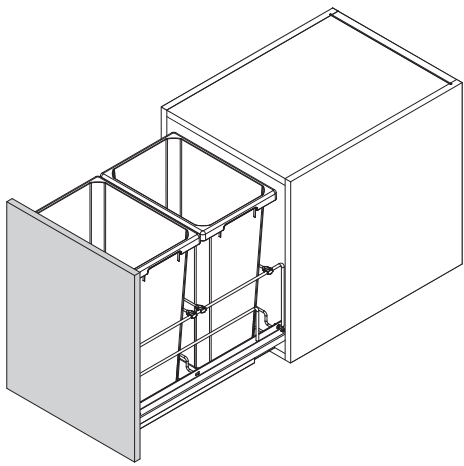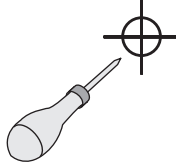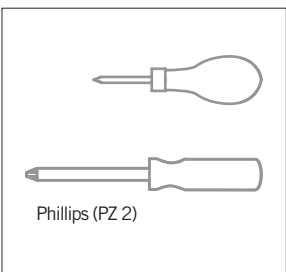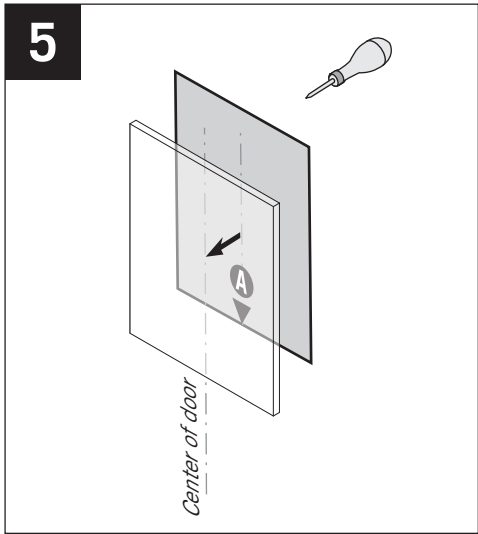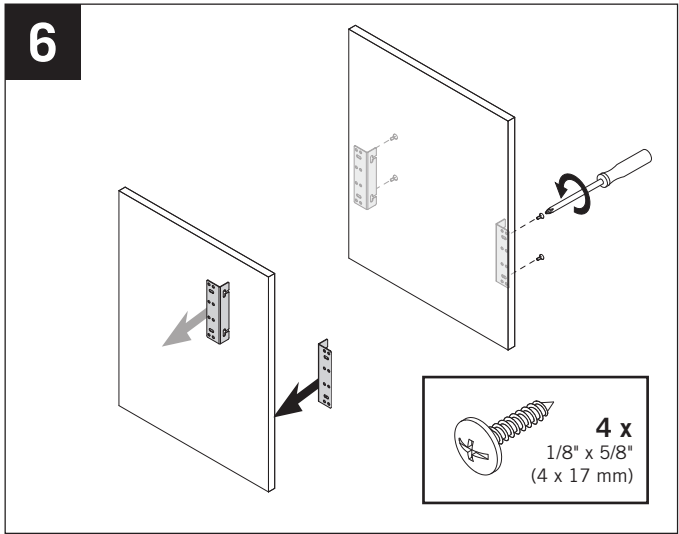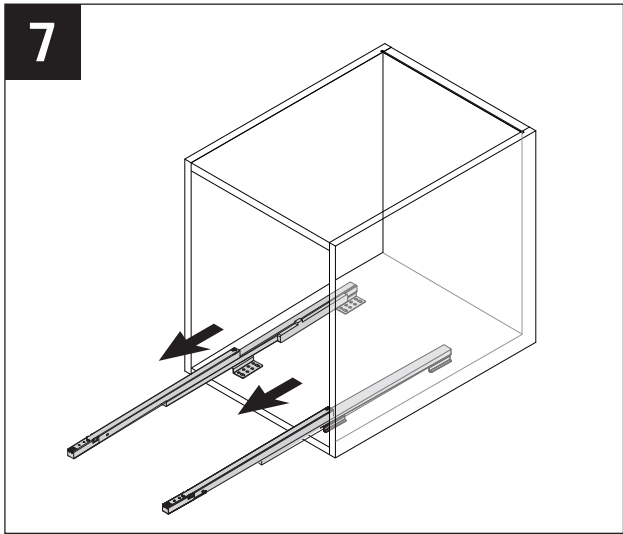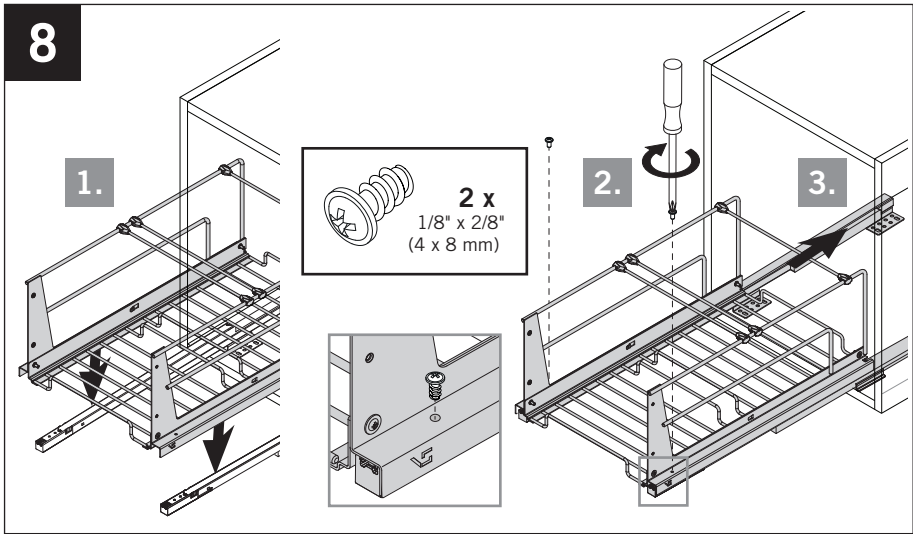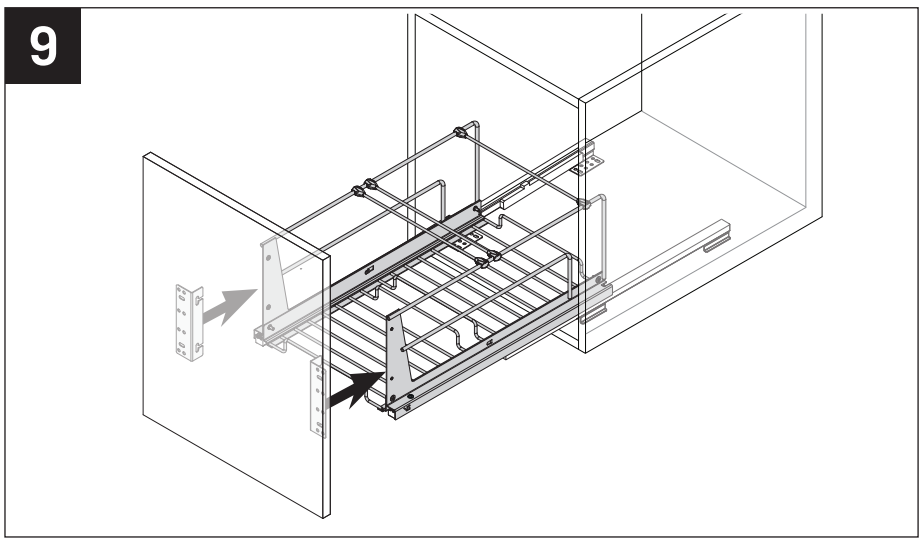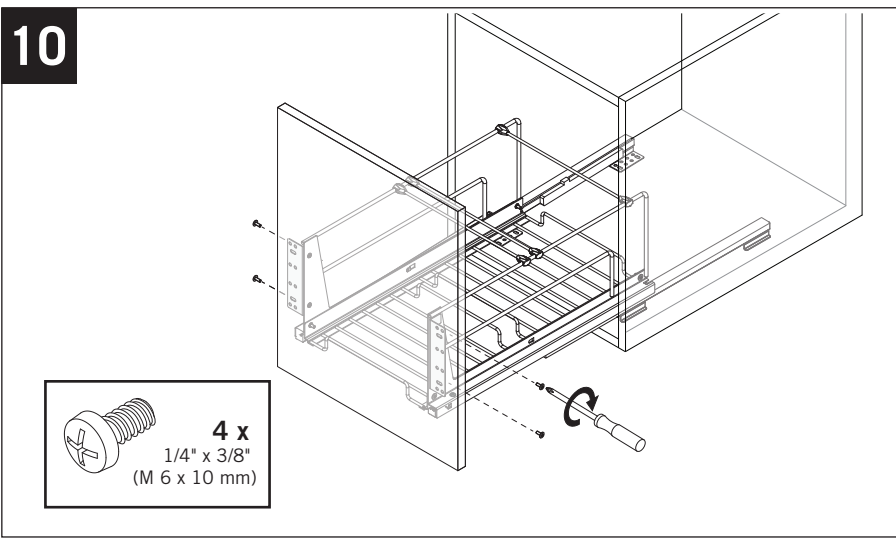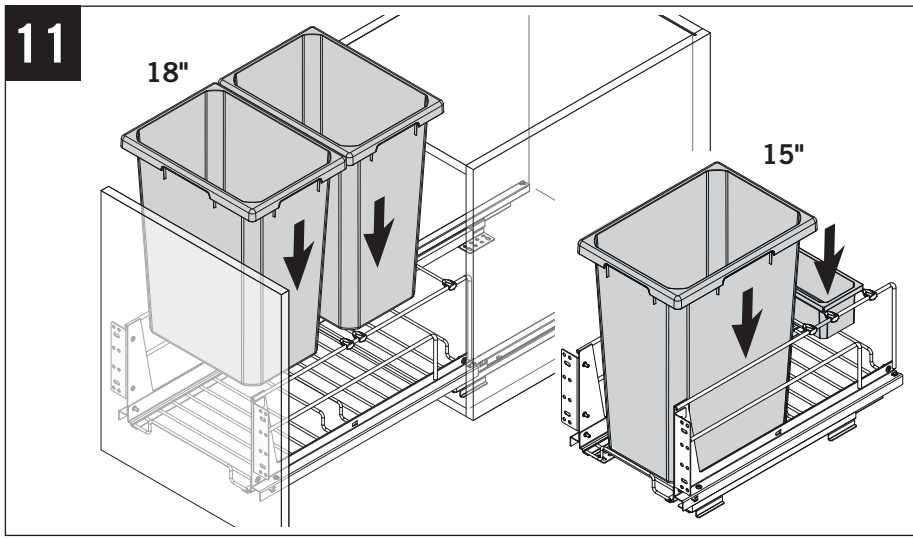

18" 14-11/16" (373 mm)

15" 11-13/16" (300 mm)

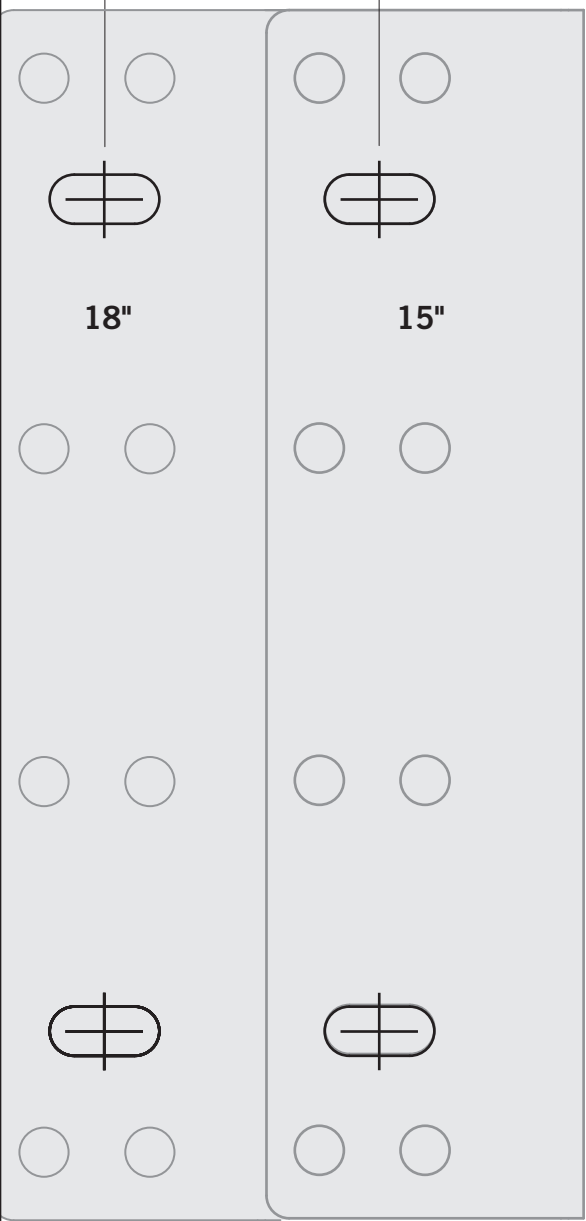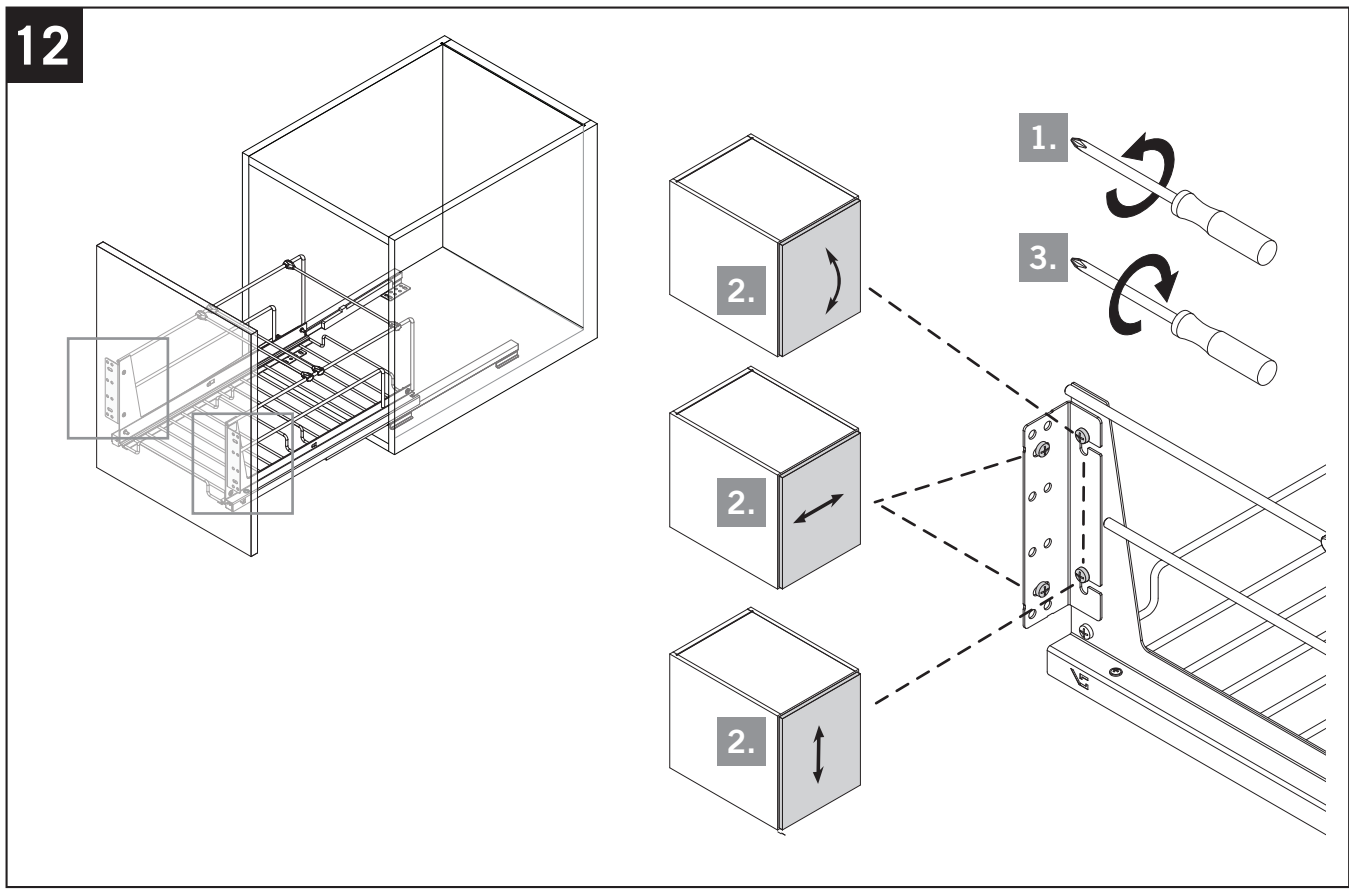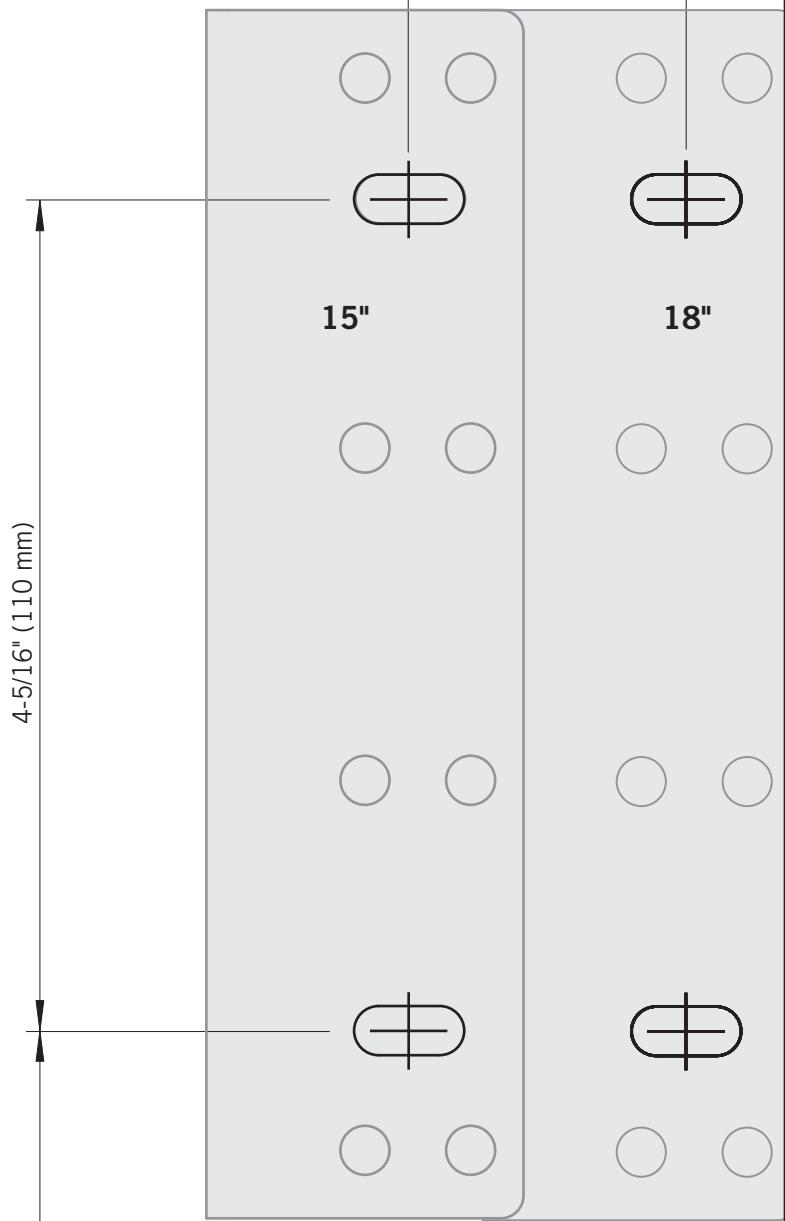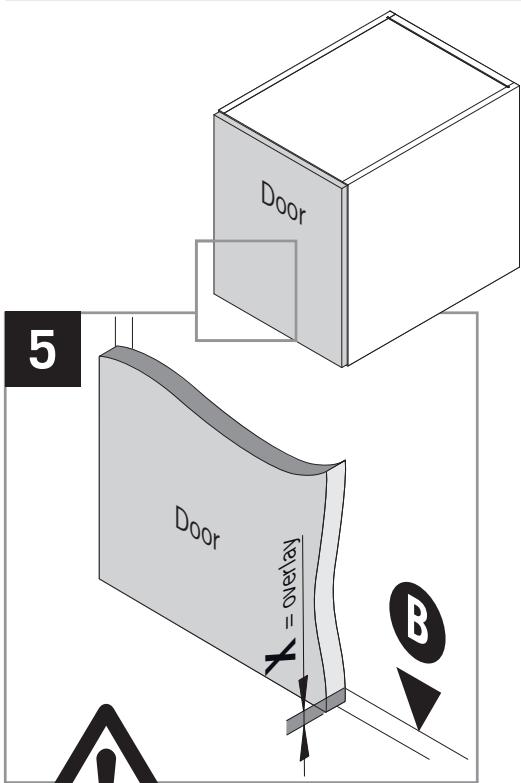

Center of door

B

How to dismantle:

Pull out completely

Hold door with both hands and lift up



Add gap **X** = overlay