
2000 SERIES TRIM INSTRUCTIONS


(SEE TEMPLATE FOR DOOR PREPARATION)

RIM CYLINDER INSTALLATION

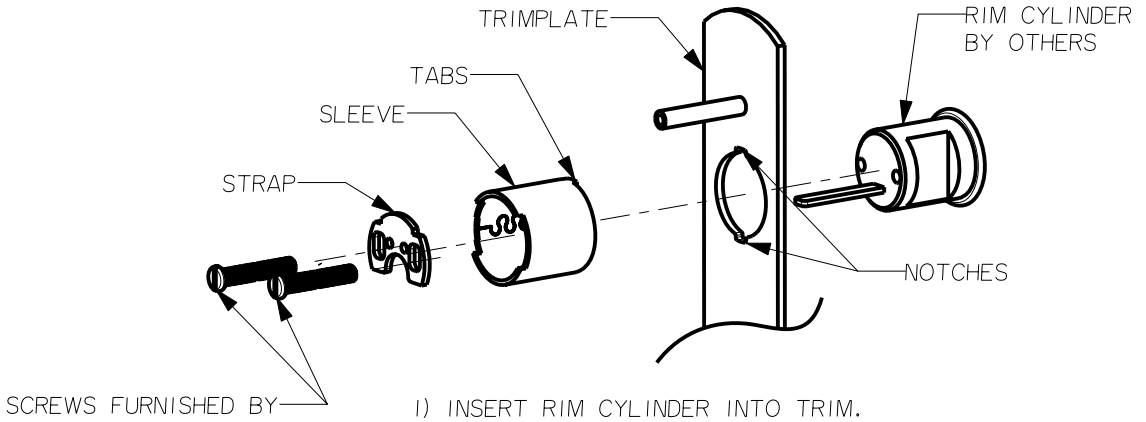

1) INSERT RIM CYLINDER INTO TRIM.
2) POSITION SLEEVE BY PLACING TABS INTO THE NOTCHES IN THE TRIM PLATE.
3) PLACE STRAP ON THE SLEEVE.
4) SECURE CYLINDER BY TIGHTENING SCREWS.

TRIM INSTALLATION

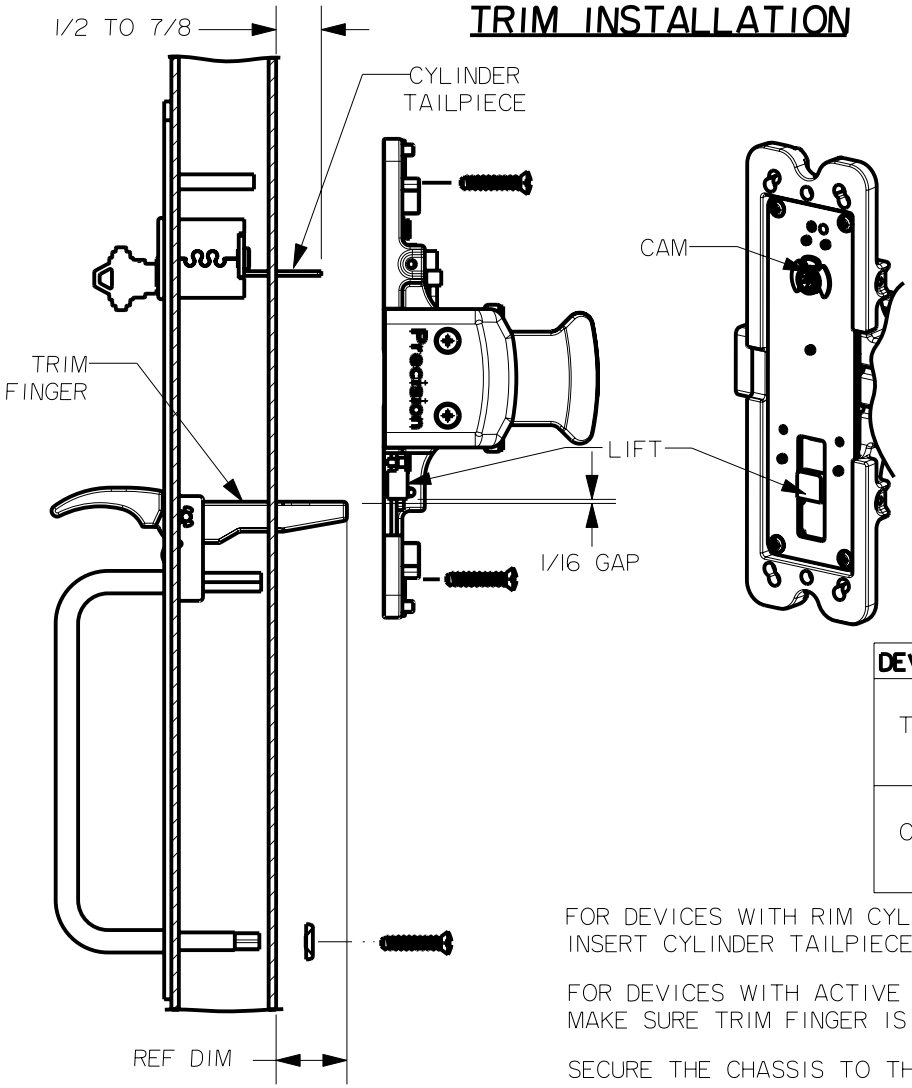

NOTE:
REF DIM DOES NOT APPLY TO MORTISE DEVICE TRIMS

DEVICE TYPE	DOOR THK.	REF DIM
TOUCHBAR DEVICE	1-3/4	1-3/16
	2	15/16
	2-1/4	11/16
CROSSBAR DEVICE	1-3/4	5/8
	2	3/8
	2-1/4	1/8

FOR DEVICES WITH RIM CYLINDER FUNCTION, INSERT CYLINDER TAILPIECE INTO THE CAM


FOR DEVICES WITH ACTIVE THUMBPIECE MAKE SURE TRIM FINGER IS UNDER THE LIFT WITH 1/16 GAP.

SECURE THE CHASSIS TO THE TRIM WITH SCREWS

2000 SERIES TRIM INSTRUCTIONS

(SEE TEMPLATE FOR DOOR PREPARATION)


MORTISE INSTALLATION

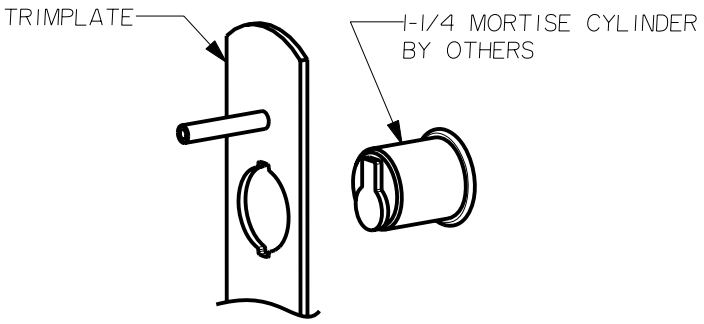

1) THREAD CYLINDER INTO THE MORTISE LOCK THROUGH TRIM ASSEMBLY.
2) SECURE WITH SCREW THROUGH MORTISE LOCK FRONT.

HANDING CHANGE MORTISE TRIM


NOTE: TRIM FINGER OF OPPOSITE HAND IS REQUIRED TO CHANGE HAND.

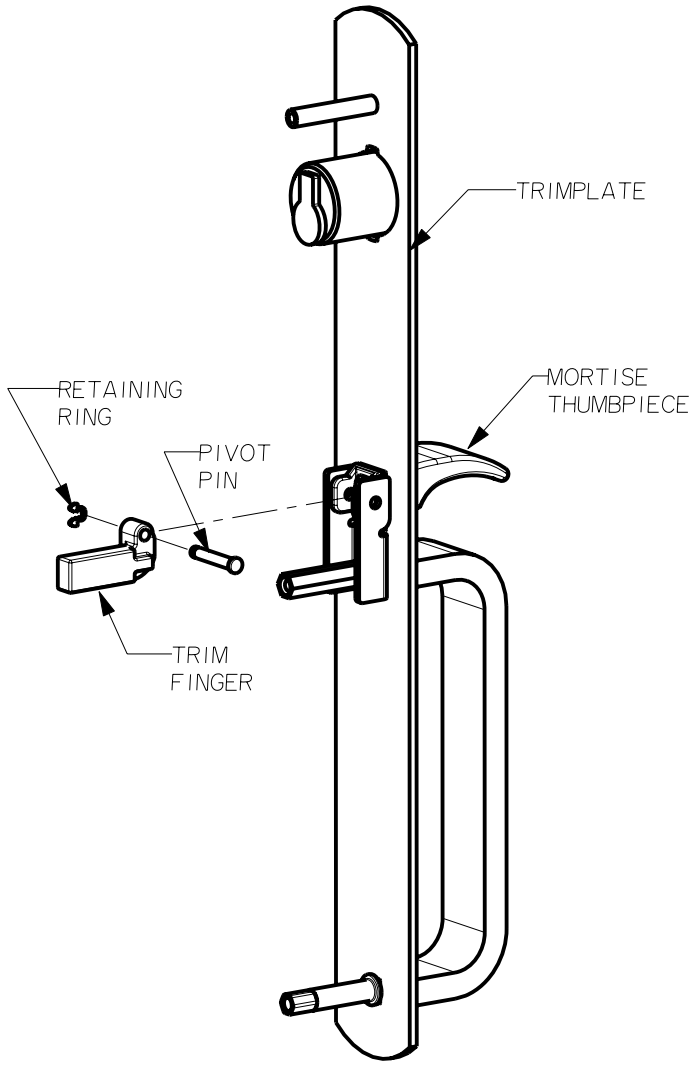


1) REMOVE TRIM FINGER BY REMOVING RETAINING RING AND PIVOT PIN.
2) ASSEMBLE THE OPPOSITE HAND TRIM FINGER WITH PIVOT PIN AND RETAINING RING AS SHOWN.

MORTISE TRIM FINGERS

TRIM FINGER RHRB
PN 00964-54

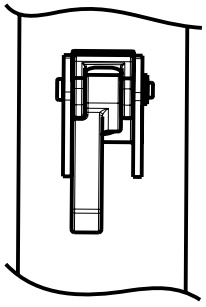

TRIM FINGER LHRB
PN 00965-54

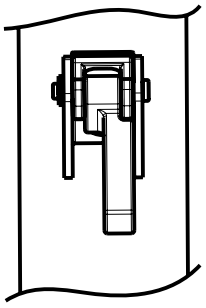

STANLEY

phi™

DRWG	DATE	REVISION
01824-11-000	04/01/03	A

Precision Hardware
a Division of Stanley Security Solutions, Inc.
www.stanleysecuritysolutions.com