411 - WALL DOOR STOP

IVES

IVES® hardware has provided style and durability for American homes since 1876. Our commitment to quality makes IVES a name you can trust.

WALL DOOR STOP
(self-adhesive backing)


FOR USE ON SMOOTH, FLAT WALLS TO STOP DOOR AND PREVENT DAMAGE TO WALL, DOOR AND DOOR KNOB.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Pencil.

1. Apply at room temperature (approximately 60°F).
2. Clean surface, let dry.
3. Mark center point where door knob touches wall.
4. Remove protective backing, position in center of mark on wall and press firmly for good contact.

NOTE: Do not remove to reposition.

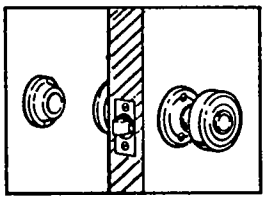

POCKET DEPTH = .449

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW LOCKS | DOOR STOPS | COAT & HAT HOOKS | DOOR BOLTS

0 44074 00749 7

WALL DOOR STOP C411 R-W

MADE IN CHINA

H. B. Ives, New Haven, CT. 06511