IVES

820 PUSH LATCH

Template and Directions for Installing IVES PUSH LATCH No. 820


OTHER IVES PRODUCTS

MAGNETIC CATCHES





HEAVY DUTY ROLLER CATCHES FOR WARDROBE AND INTERIOR DOORS

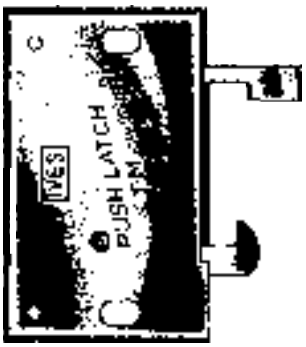

IVES PUSH LATCH NO. 820

CAN BE MOUNTED VERTICALLY OR HORIZONTALLY

TO MOUNT LATCH

1. For flush doors (Fig. 1 below), trim template to solid line indicated by arrow on template. For overlay and lip type doors (Fig. 2 and 3 below), trim template to dashed line indicated. To locate mounting screw holes, position paper template on mounting surface with trimmed edge flush with the inside surface of the door when door is in fully closed position.



Fig. 1 Flush Door

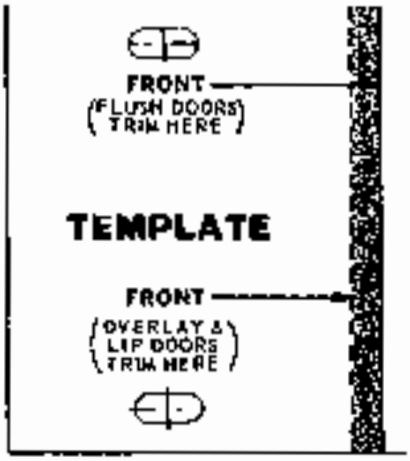


Fig. 2 Overlay Door



Fig. 3 Lip Door

2. Install "Push Latch" with latch and plunger facing door. Center the screws in the elongated holes and tighten.



Important: Install in proximity of touch area.

TO MOUNT STRIKE

1. Apply metal template to face of latch by depressing latch and engaging #2 slot in plunger. Release latch to engage slot #1, as illustrated. Close door and press against template to mark the proper position for screw hole "B" on strike. Open door and remove template.
2. Align strike and apply screw "B" centering in the elongated hole. Apply screw "A".

ADJUSTMENT

1. Check alignment of strike. Be sure latch is fully engaged in the strike (Fig. 4).
2. Adjust "Push Latch" for satisfactory operation.
3. Lock "Push Latch" in place with two escutcheon pins.



ALLEGION

Customer Service

1-877-671-7011 www.allegion.com/us

© Allegion 2015
Printed in U.S.A.
110578 Rev. 05/15-b