060 - FLEXIBLE DOOR STOP

IVES

IVES® hardware has provided style and durability for American homes since 1876. Our commitment to quality makes IVES a name you can trust.


FLEXIBLE DOOR STOP

FOR USE ON WALLS TO STOP DOOR AND PREVENT DAMAGE TO WALL, DOOR AND DOOR KNOB. SHOCK ABSORBING RUBBER TIP.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Phillips screwdriver, awl or pencil.

1. Locate stop in the center of baseboard and approximately 1" from door edge and mark.
2. Secure base with screw provided.
3. Attach flexible spring to base.

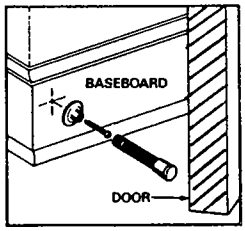

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW LOCKS | **DOOR STOPS** | **COAT & HAT HOOKS** | **DOOR BOLTS**

0 44074 00731 2

FLEX DOOR STOP C060F3 BRASS

MADE IN U.S.A.