IVES

*IVES® hardware has provided style and durability for American homes since 1876. Our commitment to quality makes IVES a name you can trust.*


## ROLLER CATCH

FOR USE ON CABINETS OR LIGHTWEIGHT INTERIOR DOORS. FEATURES CUSHIONED ROLLERS WHICH ABSORB SHOCK AND NOISE.

### INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/16" drill bit, Phillips screwdriver, hammer, awl or pencil.

1. Position catch (A) on inside of cabinet so that end of rollers touches the end of frame. Mark, drill pilot holes in center of elongated holes and secure.
2. Position strike (B) to align with rollers. Mark, drill pilot holes and secure on inside cabinet door.
3. If catch does not engage or fully close, make adjustment by loosening screws, moving catch inward or outward and secure.
4. To further secure catch in position, tap brads into holes

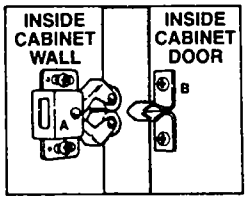


**ASK FOR OTHER FINE HARDWARE BY H.B. IVES**




**WINDOW LOCKS** | **DOOR STOPS** | **COAT & HAT HOOKS** | **DOOR BOLTS**

0 44074 00808 1

ROLLER CATCH C330F2C ZINC

MADE IN JAPAN